

# **How to initialize the Element series product**

**After updating the software, replacing the main PCB or battery.**

**You must initialize the unit, otherwise the unit battery life will be inaccurate in future use.**

The procedure is as below:

1. Make sure the unit is unplugged from any power source.
2. Switch OFF the BATTERY switch
3. Press and Hold the DOWN button
4. Switch on the battery
5. After the LED displays"-vES"
6. release the DOWN button.

The unit has now initialized successfully. You can now recharge your battery.