

| 6CH | 7CH | 8CH | 13CH | | |
|-----|-----|-----|------|--|--|
| 1 | 1 | 1 | 1 | 0-255 | Red 0~100% |
| 2 | 2 | 2 | 2 | 0-255 | Green 0~100% |
| 3 | 3 | 3 | 3 | 0-255 | Blue 0~100% |
| 4 | 4 | 4 | 4 | 0-255 | White 0~100% |
| 5 | 5 | 5 | 5 | 0-255 | Amber 0~100% |
| 6 | 6 | 6 | 6 | 0-255 | UV 0~100% |
| | 7 | 7 | 7 | 0-255 | Master Dimmer 0 ~100% |
| | | 8 | 8 | 0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255 | Strobe LED Off LED On Strobe Slow - Fast LED On Strobe Pulse Slow - Fast LED On Random Strobe LED On |
| | | | 9 | 0 - 255 | Color Macro See pages 13-14 for the Color Macro Chart |
| | | | 10 | 0 - 19 20 - 39 40 - 59 60 - 79 80 - 99 100 - 119 120 - 139 140 - 159 160 - 179 180 - 199 200 - 219 220 - 239 240 - 255 | Auto Programs No Function Program 1 Program 2 Program 3 Program 4 Program 5 Program 6 Program 7 Program 8 Program 9 Program 10 Program 11 Program 12 |
| | | | 11 | | Auto Program Speed From slow to fast |
| | | | 12 | | Auto Program Fade From slow to fast |
| | | | 13 | 0 - 20 21- 40 41- 60 61- 80 81- 100 101- 255 | Dimmer Modes Standard Stage TV Architectural Theatre Default to unit setting |