



**ELEMENT H6 PAK**  
**ELEMENT H6 PAK CHROME**  
User Instructions

©2025 ADJ Products, LLC all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ADJ Products, LLC logo and identifying product names and numbers herein are trademarks of ADJ Products, LLC. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ADJ Products, LLC brands and product names are trademarks or registered trademarks of their respective companies.

**ADJ Products, LLC** and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

**ADJ PRODUCTS LLC World Headquarters**

6122 S. Eastern Ave. | Los Angeles, CA 90040 USA

Tel: 800-322-6337 | [www.adj.com](http://www.adj.com) | [lsupport@adj.com](mailto:lsupport@adj.com)

**ADJ Supply Europe B.V.**

Junostraat 2 | 6468 EW Kerkrade | Netherlands

Tel: +31 45 546 85 00 | [www.adj.eu](http://www.adj.eu) | [service@adj.eu](mailto:service@adj.eu)

**RISK GROUP 3 - RISK OF EXPOSURE TO ULTRAVIOLET (UV) RADIATION!**

**FIXTURE EMITS HIGH INTENSITY WAVELENGTH OF ULTRAVIOLET LIGHT.**

**WEAR PROPER EYE AND SKIN PROTECTION.**

**DO NOT OPERATE FIXTURE WITH DAMAGED/MISSING EXTERNAL COVER OR PROTECTIVE LENS.**

**DO NOT LOOK DIRECTLY INTO THE (UV) LIGHT AND/OR VIEW (UV) LIGHT DIRECTLY WITH OPTICAL INSTRUMENTS THAT MAY CONCENTRATE THE LIGHT/RADIATION OUTPUT.**

**AVOID PROLONGED PERIODS OF EXPOSURE.**

**AVOID WEARING WHITE COLOR CLOTHING AND/OR USING (UV) PAINTS ON SKIN.**

**AVOID DIRECT EYE AND/OR SKIN EXPOSURE AT DISTANCES SHORTER THAN 11 FEET (3.3 METERS).**

**INDIVIDUALS SUFFERING FROM A RANGE OF EYE CONDITIONS, SUNLIGHT EXPOSURE DISORDERS, OR INDIVIDUALS USING PHOTSENSITIVE MEDICATION MAY EXPERIENCE DISCOMFORT IF EXPOSED TO THE ULTRAVIOLET (UV) LIGHT EMITTED FROM THIS FIXTURE.**

**Europe Energy Saving Notice**

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

**DOCUMENT VERSION**



Due to additional product features and/or enhancements, an updated version of this document may be available online. Please check [www.adj.com](http://www.adj.com) for the latest revision/update of this manual before beginning installation and/or programming.

Date	Document Version	Software Version	DMX Channels	Notes
01/09/2023	1	1.00	6/8/9/12/14/15/17 ch.	Initial Version
05/02/2023	1.1	N/C	N/C	Added Battery Replacement Instructions
06/28/2023	1.2	N/C	N/C	Updated Dimensional Drawings, Specifications
08/30/2023	1.3	N/C	N/C	Updated Overview, Battery Replacement, Wireless Setup, IR Default Values, Fuse Replacement, Torque Settings for Screws, Specifications
09/29/2023	1.4	N/C	N/C	FCC Approved
01/10/2024	1.5	N/C	N/C	Updated Fuse Replacement
11/11/2024	1.6	1.02	N/C	Updated Menu Traits
12/05/2025	1.7	N/C	N/C	Updated: General Info, System Menu, Specifications; added Aria Setup and Guidelines

# CONTENTS

<b>General Information</b>	<b>4</b>
<b>Key Features</b>	<b>5</b>
<b>Safety Guidelines</b>	<b>6</b>
<b>Overview - Flight Case</b>	<b>9</b>
<b>Overview - Light Fixture</b>	<b>10</b>
<b>Aria Setup and Guidelines</b>	<b>11</b>
<b>UC IR Remote</b>	<b>15</b>
<b>Installation</b>	<b>16</b>
<b>Battery: In-Case Charging</b>	<b>20</b>
<b>Battery: Replacement</b>	<b>21</b>
<b>Battery: General Information</b>	<b>23</b>
<b>System Menu:</b>	<b>24</b>
<b>English</b>	<b>25</b>
<b>Spanish</b>	<b>28</b>
<b>DMX Addressing</b>	<b>31</b>
<b>DMX Traits</b>	<b>32</b>
<b>IR Default Values   Editing RGBA IR Button Values</b>	<b>34</b>
<b>Color Macros</b>	<b>35</b>
<b>White Color Temperature Presets</b>	<b>36</b>
<b>Dimmer Curves and Dimmer Modes</b>	<b>37</b>
<b>Cleaning &amp; Maintenance   Daisy Chain Power Linking</b>	<b>38</b>
<b>Torque Settings for Screws</b>	<b>39</b>
<b>Fuse Replacement</b>	<b>40</b>
<b>Dimensional Drawings</b>	<b>41</b>
<b>Specifications</b>	<b>42</b>
<b>FCC Statement</b>	<b>43</b>

# GENERAL INFORMATION

## INTRODUCTION

Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this device. These instructions contain important safety and use information.

**This product is intended for use by professionally trained personnel only, and is not suitable for private use.**

## Unpacking

Every device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton is damaged, carefully inspect the device for damage, and be sure all accessories necessary to install and operate the device have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

**Parts:** To purchase parts online visit:

<http://parts.adj.com> (US)

<http://www.adjparts.eu> (EU)

**ADJ SERVICE USA** - Monday - Friday 8:00am to 4:30pm PST

Voice: 800-322-6337 | [support@adj.com](mailto:support@adj.com)

**ADJ SERVICE EUROPE** - Monday - Friday 08:30 to 17:00 CET

Voice: +31 45 546 85 60 | [support@adj.eu](mailto:support@adj.eu)

## ADJ PRODUCTS LLC USA

6122 S. Eastern Ave. Los Angeles, CA. 90040

323-582-2650 | [www.adj.com](http://www.adj.com) | [info@adj.com](mailto:info@adj.com)

## ADJ SUPPLY Europe B.V

Junostraat 2 6468 EW Kerkrade, The Netherlands

+31 (0)45 546 85 00 | [www.adj.eu](http://www.adj.eu) | [info@adj.eu](mailto:info@adj.eu)

## ADJ PRODUCTS GROUP Mexico

AV Santa Ana 30 Parque Industrial Lerma, Lerma, Mexico 52000

+52 (728) 282-7070

## LIMITED WARRANTY

For up-to-date warranty information regarding your device, please visit ADJ's warranty information page online or scan the QR codes below.



USA: <https://www.adj.com/pages/warranty-information>



EU: [https://www.adj.eu/terms\\_and\\_conditions](https://www.adj.eu/terms_and_conditions)

It is strongly recommended to power the fixture down completely when not in use. Doing so will reduce wear on the fixture due to sustained or extended operational periods, thereby maximizing its operational lifespan.

# KEY FEATURES

## INCLUDED ITEMS:

- Element H IP or Element H IP CHR fixtures (x6)
- Element H6 FC flight case (x1)
- UC IR24 Remote (x1)
- AC Cable and Charging System (x1)

## IP RATING:

An IP rated lighting fixture is commonly installed in outdoor environments and has been designed with an enclosure that effectively protects the ingress (entry) of external foreign objects such as dust and water. The Ingress Protection (IP) rating system is commonly expressed as “IP” followed by two numbers (i.e. IP54), where the numbers define the degree of protection. The first digit (Foreign Bodies Protection) indicates the extent of protection against particles entering the fixture and the second digit (Water Protection) indicates the extent of protection against water entering the fixture.

- **An IP54 rated lighting fixture, such as the ones included in this pack, has been designed such that ingress of dust is NOT entirely prevented, but will not enter in sufficient quantity to interfere with satisfactory operation of the device (5). The fixture is also protected against splashing water (4).**
- **CAUTION! The IP54 rating applies ONLY to the Element H IP fixtures! The flight case, IR remote, and charging system are NOT protected from dust or water intrusion of any kind, and therefore should be used only in dry, indoor applications.**

# SAFETY GUIDELINES

**For Your Own Personal Safety, Please Read and Understand This Manual Completely Before You Attempt To Install Or Operate This Unit!**

This fixture is a sophisticated piece of electronic equipment. To guarantee smooth operation, it is important to follow all instructions and guidelines in this manual. ADJ Products, LLC is not responsible for injury and/or damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this fixture, and only the original rigging parts included with this fixture should be used for installation. Any modifications to the fixture and/or the included mounting hardware will void the original manufacturer's warranty and increase the risk of damage and/or personal injury.



**PROTECTION CLASS 1 - FIXTURE MUST BE PROPERLY GROUNDED**



**THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF; DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.**



**DO NOT PLUG FIXTURE INTO A DIMMER PACK!  
NEVER OPEN THIS FIXTURE WHILE IN USE!  
UNPLUG POWER BEFORE SERVICING FIXTURE!  
MAXIMUM AMBIENT OPERATING TEMPERATURE IS 104°F (40°C)!  
NEVER TOUCH FIXTURE WITH BARE HANDS DURING OPERATION, AS SURFACE TEMPERATURE DURING OPERATION MAY REACH 167°F (75°C)!  
KEEP FLAMMABLE MATERIALS AWAY FROM FIXTURE!**



**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!  
RETINA INJURY RISK - MAY INDUCE BLINDNESS!  
SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!**




**APPLIES TO LIGHTING FIXTURE ONLY! CHARGING COMPONENTS ARE NOT IP RATED AT ALL!  
INGRESS OF DUST INTO FIXTURE IS NOT ENTIRELY PREVENTED, BUT WILL NOT ENTER IN SUFFICIENT QUANTITY TO INTERFERE WITH OPERATION OF DEVICE.  
FIXTURE PROTECTED AGAINST WATER SPLASHES FROM ANY DIRECTION.**

# SAFETY GUIDELINES

**! CAUTION**

## HIGH INTENSITY ULTRAVIOLET LIGHT

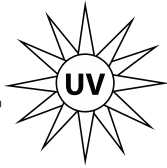

AVOID DIRECT EYE & SKIN EXPOSURE.  
WEAR PROPER EYE & SKIN PROTECTION.  
SEE MANUAL FOR SAFETY INSTRUCTIONS.

- **RISK GROUP 3 - RISK OF EXPOSURE TO ULTRAVIOLET (UV) RADIATION!**
- **FIXTURE EMITS HIGH INTENSITY WAVELENGTH OF ULTRAVIOLET LIGHT.**
- **WEAR PROPER EYE AND SKIN PROTECTION.**
- **DO NOT OPERATE FIXTURE WITH DAMAGED/MISSING EXTERNAL COVER OR PROTECTIVE LENS.**
- **DO NOT LOOK DIRECTLY INTO THE (UV) LIGHT AND/OR VIEW (UV) LIGHT DIRECTLY WITH OPTICAL INSTRUMENTS THAT MAY CONCENTRATE THE LIGHT/RADIATION OUTPUT.**
- **AVOID PROLONGED PERIODS OF EXPOSURE.**
- **AVOID WEARING WHITE COLOR CLOTHING AND/OR USING (UV) PAINTS ON SKIN.**
- **AVOID DIRECT EYE AND/OR SKIN EXPOSURE AT DISTANCES SHORTER THAN 11 FEET (3.3 METERS).**
- **INDIVIDUALS SUFFERING FROM A RANGE OF EYE CONDITIONS, SUNLIGHT EXPOSURE DISORDERS, OR INDIVIDUALS USING PHOTSENSITIVE MEDICATION MAY EXPERIENCE DISCOMFORT IF EXPOSED TO THE ULTRAVIOLET (UV) LIGHT EMITTED FROM THIS FIXTURE.**
- Be sure to save the packing carton in the unlikely event the device has to be returned for service.
- Do not spill water or other liquids into or on to the fixture, charging system, or IR remote.
- Be sure that the voltage of the power source matches the required voltage for the device.
- Do not open up the device for any reason. There are no user serviceable parts inside.
- Disconnect the device's main power when left unused for long periods of time.
- Never connect this device to a dimmer pack.
- Do not attempt to operate this device if it has been damaged in any way.
- Never operate this device with the cover removed.
- To reduce the risk of electrical shock or fire, do not expose the charging system, IR remote, or fixture to rain or moisture.
- Do not attempt to operate this device if the power cord has been frayed or broken.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in the event of an internal short.
- Disconnect from main power before making any type of connection.
- Never block the ventilation holes. Always be sure to mount this device in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- The charging system and fixture are intended for indoor use only. Use of these devices outdoors voids all warranties.
- Always mount this unit in a safe and stable matter.
- Please route your power cord out of the way of foot traffic. Power cords should be routed so they are not likely to be walked on, or pinched by items placed upon or against them.

**Maximum operating temperature for this fixture is 113 degrees F (45 degrees C). Do not operate this device when ambient temperature exceeds this value!**

**Keep flammable materials away from this fixture!**

**CHARGING DEVICES AND FIXTURE ARE DESIGNED FOR INDOOR USE ONLY! DO NOT EXPOSE TO RAIN OR MOISTURE!**

The device should be serviced by qualified service personnel when:

- A. The power-supply cord or the plug has been damaged.
- B. Objects have fallen on, or liquid has been spilled into, the device.
- C. The charging devices or fixture have been exposed to rain or water.
- D. The appliance does not appear to operate normally or exhibits a marked change in performance.

# SAFETY GUIDELINES

## FLIGHT CASE LID

When opening the flight case, the lid must be locked in place manually. The lid support prop is located on the right-hand side of the flight case, near the power cable storage compartment. The lower end of the prop is fixed to the flight case, and the free upper end contains a cut-out groove.

Once the lid has been opened, lift the upper end of the support bar and attach it to the recessed catch on the underside of the lid, along the right-hand side. Make sure that the catch is fully seated in the support bar's groove before reaching into the flight case.


**FAILURE TO PROPERLY FOLLOW THIS PROCEDURE CAN RESULT IN PERSONAL INJURY OR DAMAGE TO THE DEVICE, AS THE LID MAY SWING SHUT WITHOUT WARNING!**

See the illustration below for reference.







# OVERVIEW - FLIGHT CASE

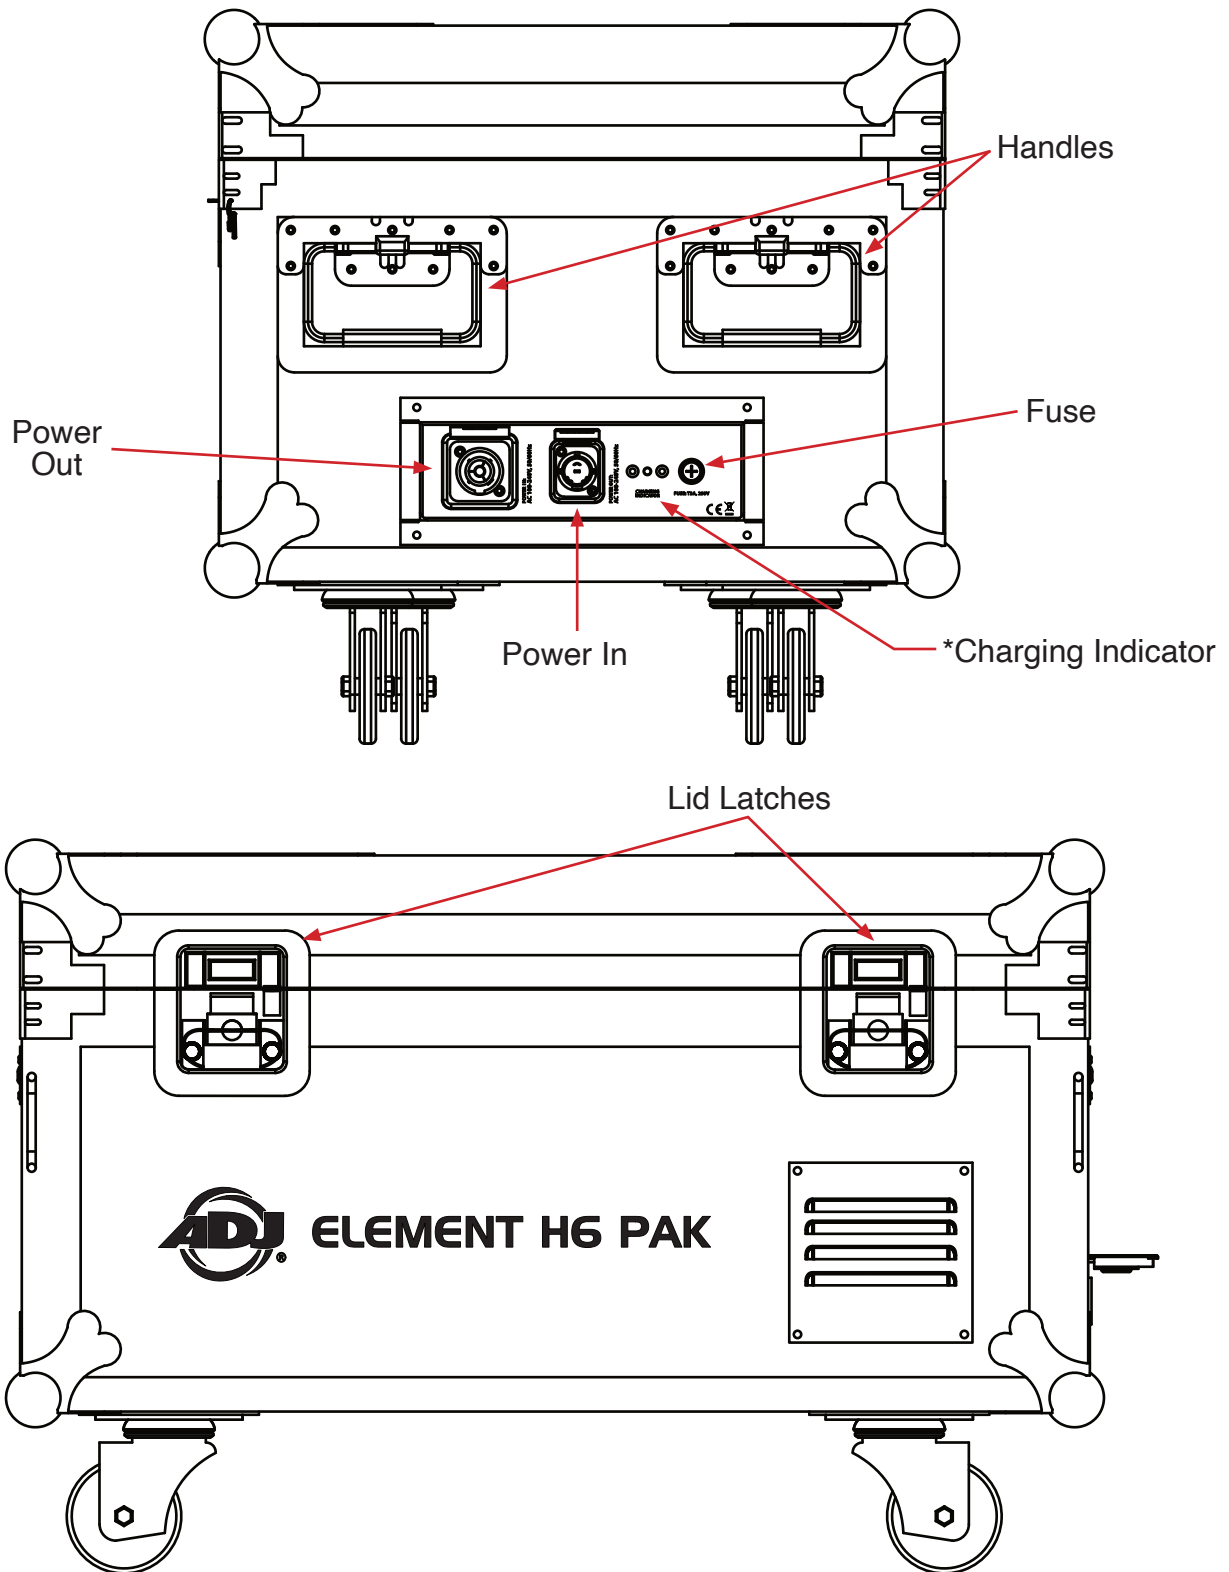

\*Note: Charge indicator is red when charging, and green when complete. Charge indicator on the case displays charge status of the entire six-unit set. For individual charge status, please refer to the charge indicator on each individual unit.

# OVERVIEW - LIGHTING FIXTURE

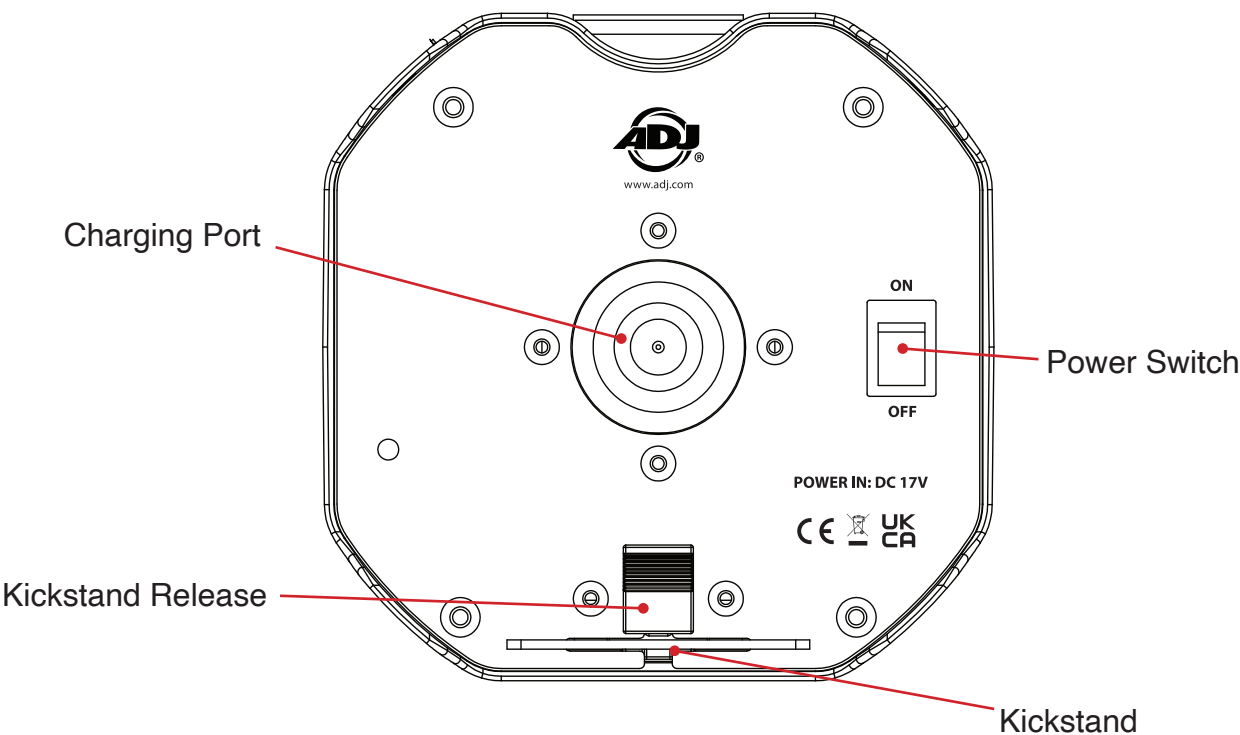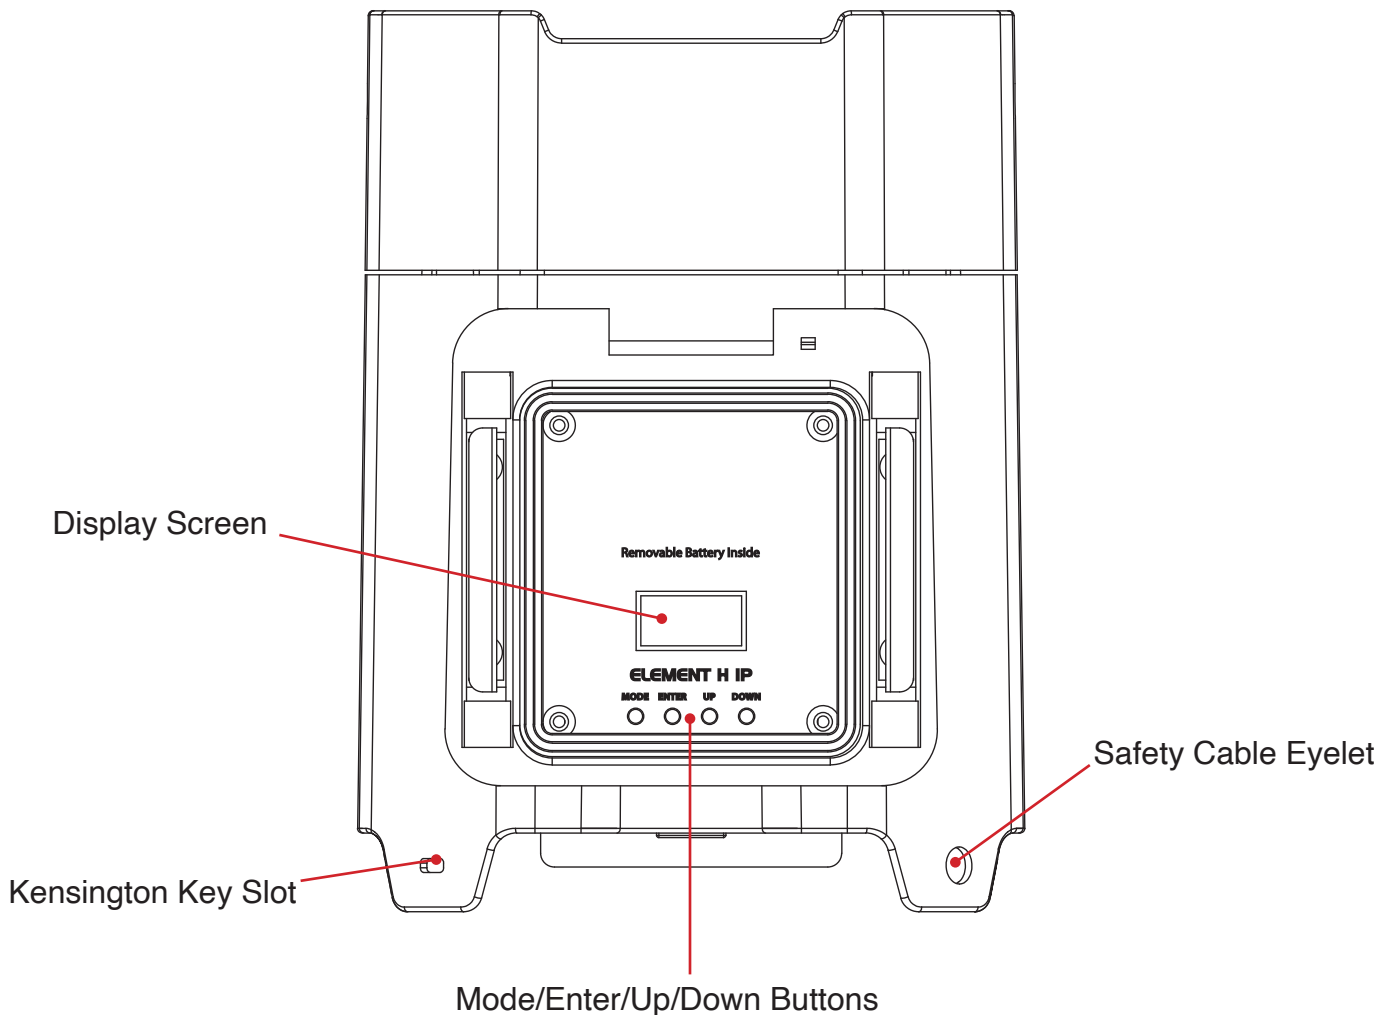

# ARIA SETUP AND GUIDELINES

**This device does not feature physical DMX connector ports. Therefore, in order to utilize DMX control, the user must first set up the device to run wireless DMX control. Follow the directions below to configure wireless DMX control:**

1. First, select the DMX Channel Mode for that you would like the device to operate in. Press MODE until the the “DMX Settings” menu is displayed on the screen. Use the UP or DOWN buttons to scroll to “DMX Channel Mode,” then press the SETUP button.
2. Use UP or DOWN to scroll through the DMX Channel Mode options, then press SETUP to con-firm your selection.
3. Next, enable the device’s Wireless capability. Press MODE until the “Personality” menu is displayed on the screen, then use UP or DOWN to scroll to “Wireless Settings” and press SETUP.
4. Use UP or DOWN to scroll to “Enable Wireless,” then press SETUP to select this option.
5. Use UP or DOWN once again to toggle this setting to “Yes,” then confirm by pressing SETUP.
6. Next, select the Wireless channel. Press MODE until the “Personality” menu is displayed on the screen again, then use UP or DOWN to scroll to “Wireless Settings” and press SETUP.
7. Use UP or DOWN to scroll to “Set Wireless Channel,” then press SETUP again.
8. Now use UP or DOWN to scroll to your desired Wireless channel. Selectable values range from 00 to 15.
9. Finally, set the DMX address. Press the MODE button until the “DMX Settings” menu is displayed on the screen, then use UP or DOWN to scroll to “DMX Address,” then press SETUP.
10. Use the UP or DOWN buttons to scroll to your desired DMX address, then press SETUP to confirm your selection. Available values range from 001 to 512. Refer to the DMX Addressing section of this manual for detailed guidance. Repeat these steps for each individual unit that you wish to use.

There are many factors that can affect and/or interrupt a wireless signal, including walls, glass, metal, objects, and people. Therefore, the following guidelines are recommended in order to maximize the chances of having a clear path for the wireless signal to reach the device:

- Install the device a minimum of 9.8 ft (3m) above audiences and/or ground level.
- Arrange the wireless antenna in an upright, vertical position.
- Position devices in direct line of sight of the transmitting controller.

Careful planning and testing of the selected installation location is critical to ensure optimum and reliable wireless operation.

# ARIA SETUP AND GUIDELINES

## 2.4GHZ VERSUS SUB-GIG (GHZ) FREQUENCIES:

Sub-GHz frequencies provide superior reliability and range compared to higher frequencies, making them perfect for consistent communication across vast distances or in difficult conditions. Devices operating in the sub-GHz range, which refers to frequencies below 1 GHz, can transmit signals over significant distances and can penetrate physical barriers such as walls and buildings more effectively. Additionally, these frequencies experience less interference compared to those in the heavily congested 2.4-GHz band, which is commonly used by wireless devices.

In the United States, the 900 MHz band is a versatile frequency range that is utilized by various services, with the FCC overseeing its allocation and regulation.

In the European Union, the 868 MHz frequency is designated by ETSI as the Sub-Gig frequency.

In summary, if an application demands high data rates and more bandwidth in urban or densely populated areas where interference management is feasible, the 2.4 GHz frequency is a suitable choice. On the other hand, for applications requiring long-range communication and better obstacle penetration, particularly in rural or industrial settings with fewer regulatory constraints, a sub-GHz frequency (<1 GHz) is a better option.


## INSTALLATION RECOMMENDATIONS:

With the many factors that affect and/or interrupt a wireless signal such as walls, glass, metal, objects, and people, it is highly recommended to:

- Install devices a minimum of 9.8 ft. (3m) above audiences and/or ground level where practical.
- Adjust the wireless antenna in a vertical upright position
- Position devices in direct line of sight of the controlling device

Careful planning and testing of the selected installation location is critical to ensure optimum and reliable wireless operation.

**9.8 ft (3m)  
Above Ground**

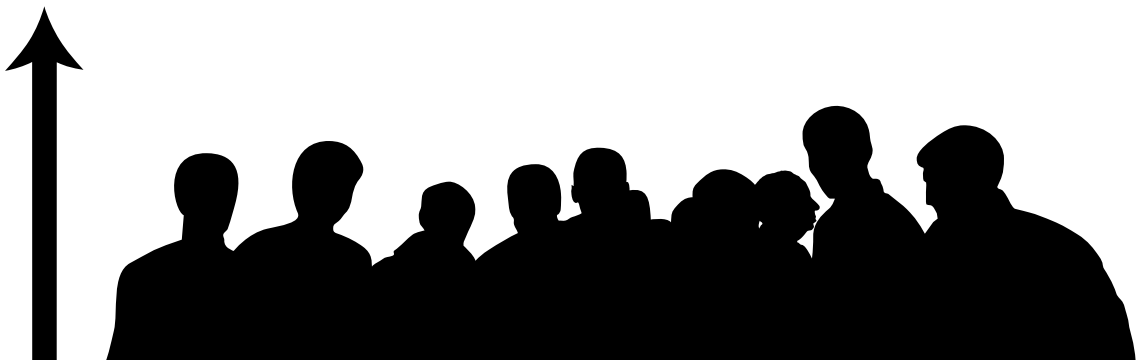

# ARIA SETUP AND GUIDELINES

## GENERAL INFORMATION

The Aria Bluetooth app has the ability to connect wirelessly to any device that has Aria wireless DMX installed and has Bluetooth enabled.

**Before installing the fixture in a remote location, double check that the fixture's main power is switched on, and that the Bluetooth function has been enabled in the fixture's system menu.** Certain fixtures may have Bluetooth disabled by default. If this function is disabled, then the fixture cannot be configured remotely using the Aria app, and will have to be configured directly from the fixture's control screen.

Additionally, the user should consider setting the fixture's No DMX setting to "Hold Last". This will allow the fixture to continue running using the current settings, even if the Aria app device moves out of range, the app is closed, or the signal is otherwise interrupted, minimizing disruption in the operation of the fixtures.

## LEGACY DEVICES

Please note that legacy connected devices, such as those using Wifly, E-Fly, or Magfly, are not compatible with this app. For such legacy devices, the use of a bridge is recommended, as the bridge can communicate with these devices via its SM220 protocol.

The Aria X2 BLE app is currently available from the Apple app store.

## FIXTURE IDENTIFICATION

Aria compatible devices can be identified and connected via the **Fixtures** tab in the app. This tab displays a field of twenty-four buttons that can be assigned to Aria compatible devices that are within range, and the buttons will automatically be assigned to devices in the order in which they are discovered. If more than twenty-four units are within range, it may be necessary to use the filter feature to search for the desired fixture. Button location can be edited by selecting the configuration key, then the user can drag and drop the buttons to the desired location and hit save to keep changes. Once a device is known to the app, it can also be assigned to a particular button. From that point forward, the assigned device will always be assigned to that button location.

**IMPORTANT NOTE:** For version 0.65 or higher, a shared system password is required to connect to any device.

Unlike wireless DMX, Bluetooth is a connect first protocol. To connect to a device or fixture, tap the assigned button in the **Fixtures** tab. If the connection is successful, a green frame will appear around the button, indicating that the app was able to retrieve the current channel values from the fixture. The app must be connected to a fixture in order to use its channel controls or view and change settings. Please note that not all Aria devices have channel controls.

Additionally, each fixture can only be connected to one device with the app at any given time. Once a fixture is connected to the app installed on one device, any other devices will be blocked from connecting. As a result, when setting up a new fixture for the first time, best practice is to have only a single user with the app open within range, in order to ensure that the fixture pairs to the intended user's device.

# ARIA SETUP AND GUIDELINES

The second table section shows all Aria devices detected in range. A checkmark indicates the device is currently assigned to a button. If more than 24 devices are within range, the user may remove or add devices to the buttons list by tapping a row to check or uncheck a device. If all buttons are full, it will be necessary to uncheck a device before adding another.

**Filter:** The user can filter which Aria devices get button assignments by tapping “filter” at the top of the view. A popup will appear where the user can enter text to filter devices by username, model name, or manufacturer. **Please note that these searches are case sensitive.**

*Note:* If a device shows an asterisk (\*) it means that there is no fixture profile currently available, and therefore there will be limited support available for that device. The user will still be able to connect and adjust channels if the device supports that feature, but the user will not be able to view how many channels the device has or the channel names.

## SECURITY

Each fixture must have a password saved to be secure. When a new fixture is installed for the first time, its password will automatically be set to the app’s system password on first connection. Once the password has been entered, the user will need to exit out to the main page containing the fixture buttons, then de-select and re-select the fixture to lock in the password. From that point forward only, controlling devices that use the correct password can connect to this fixture. **This security is now required by law in most jurisdictions.**

The app will detect any Aria capable fixture within range, even if the app does not have the password to that fixture and therefore cannot access that fixture. If that fixture is selected in the app, the green frame will momentarily appear around that fixture’s button, but then disappear. This indicates that the fixture is visible but inaccessible.

# IR REMOTE CONTROL

This unit can be operated using the ADJ UC IR24 remote control. **The unit can only be controlled when it has been set to Primary mode. The unit will NOT respond to commands when it has been set to Secondary mode.** When using the UC IR to control multiple units that are operating in primary/secondary mode, follow these steps to set up the units:


1. Power on the unit, and press MODE to scroll to the “Personality” menu, then press ENTER.
2. Use the UP and DOWN buttons to scroll to “Prim/Sec Mode”. Press ENTER, then use the UP and DOWN buttons to toggle between “Primary” and “Secondary”.
3. Press ENTER to confirm and return to the “Personality” menu.
4. Use UP and DOWN to scroll to “Wireless Settings” and press ENTER.
5. Use the UP and DOWN buttons select “Set Wireless Channel.” Press ENTER and use UP and DOWN to set the unit to your desired Wireless channel. Repeat these steps for each unit. Please note that all units should be set to the same Wireless channel.

## NOTES:

- Only one unit should be configured as the primary, while all the other units should be configured as secondaries.
- All units in the system should be set to the same Wireless channel. If all units are set to the same Wireless channel, and the units do not sync up and/or respond to commands, try using a different Wireless channel.
- All units should be set to the same DMX channel mode.
- If fixtures fail to sync, verify that all settings mentioned above are the same, then power all devices off, then switch them on again to re-establish the link.

# CONTROLS

- **ON and OFF:** When the ON button is pressed, the lighting fixture shall return to its last running state. When the OFF button is pressed, the unit shall go into stand by mode in a blackout state.
- **STROBE:** The unit shall strobe the selected color or program. The strobe rate can be adjusted with the + / - buttons. Buttons 0-15 are used to select the color.
- **SOUND:** Triggers the selected program steps based on sound input. The microphone sensitivity can then be adjusted with the +/- buttons.
- **COLOR:** When the color button is pressed, preset static colors can be selected using buttons 0-15. The intensity for the set color can be adjusted with the +/- buttons.
- **PROGRAM:** When the program button is pressed, internal programs can be selected by pressing buttons 0-15. The selected program’s speed can be adjusted with the +/- buttons.
- **+ and - buttons:** These buttons are used to adjust strobe rate, mic sensitivity, brightness intensity, or program run speed, depending on which mode is active. Single-level adjustments can be made with individual buttons presses, while large adjustments can quickly be made by press-ing and holding.
- **0-15 buttons:** These buttons are used to select preset static colors or internal programs, depending on which mode is active. Colors stored in buttons 0-15 can be edited from the units menu if desired.

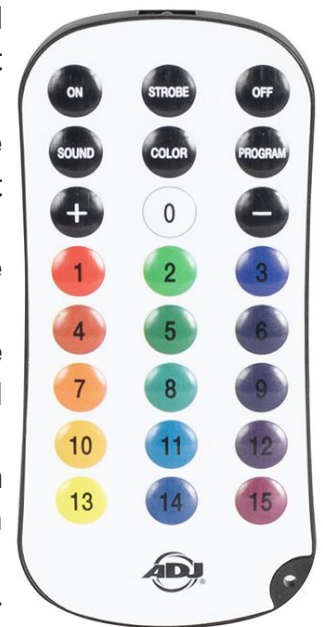

# INSTALLATION

## IP RATING

The ELEMENT H IP is **IP54** rated. Ingress of dust is not entirely prevented, but it will not enter in sufficient quantity to interfere with satisfactory operation of the device. The ELEMENT H IP is also protected against splashing water from any direction. **WHILE SOME DEGREE OF WATER RESISTANCE IS PRESENT, THE ELEMENT H IP FIXTURE IS NOT INTENDED FOR OUTDOOR USE. Please note that the charging components are not IP-rated at all, and are intended for use in dry, indoor conditions only.**

## FLAMMABLE MATERIAL WARNING!

Keep device a minimum of 5.0 feet (1.5m) away from flammable material and/or pyrotechnics.

## ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.

## DO NOT INSTALL THE DEVICE IF YOU ARE NOT QUALIFIED TO DO SO!

The unit **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.

Before installing or mounting any device, a professional equipment installer **MUST** be consulted to determine whether the mounting structure or surface is properly certified to safely support the combined weight of the fixture, clamps, cables, and accessories.

Maximum operating temperature **113 degrees F (45 degrees C)**. Do not operate the device if ambient temperatures exceeds this value.

This fixture should be installed away from walking paths, seating areas, and areas where unauthorized personnel might be able to reach the device by hand.

**NEVER** stand directly below the fixture when rigging, removing, or servicing.


Allow approximately 15 minutes for the fixture to cool down before servicing.



# INSTALLATION

## CLAMP INSTALLATION

The Element H IP features a mounting clamp attachment point on the side of the device, as well as an eyelet for safety cable at the bottom of one foot (see the illustration below). When mounting the fixture to a truss or any other suspended or overhead installation, be sure to secure appropriately rated clamps (not included) to the clamp attachment point, as well as an appropriately rated safety clamp.

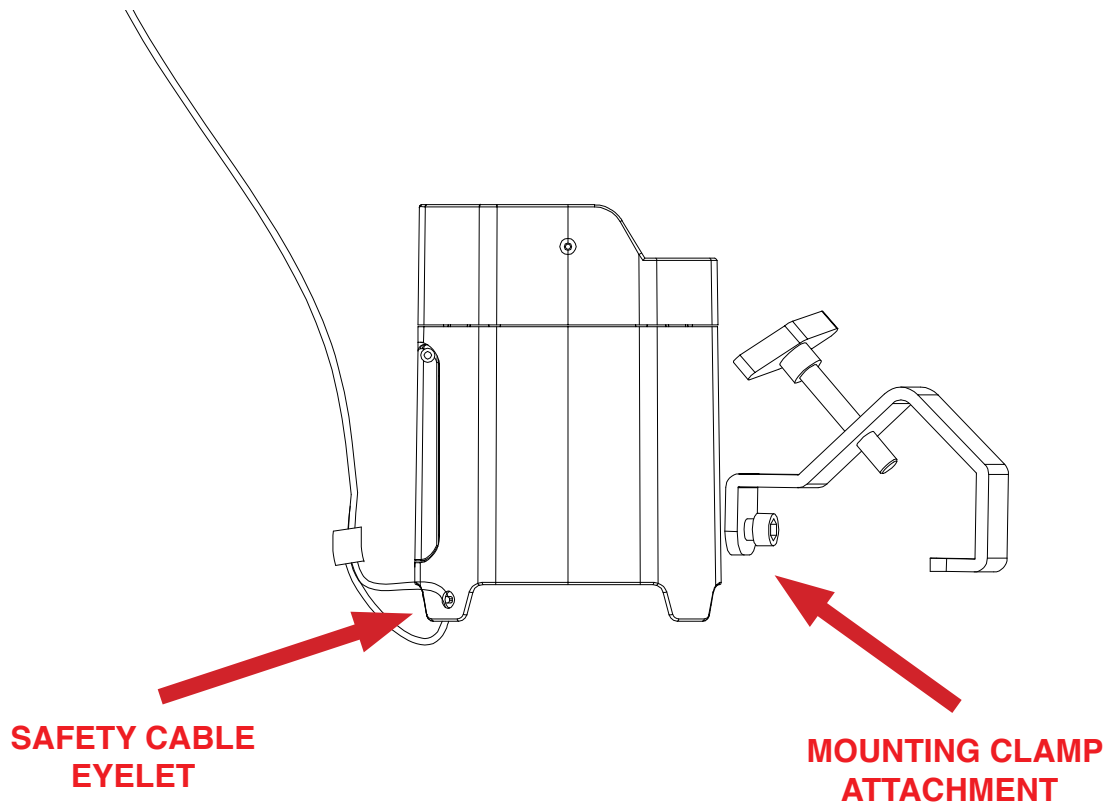

**SAFETY CABLE:**  
**ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIX-  
TURE IN A SUSPENDED ENVIRONMENT TO ENSURE THAT THE FIXTURE  
WILL NOT FALL IF THE CLAMP FAILS.**

## RIGGING


Overhead rigging requires extensive experience, including but not limited to: calculating working load limits, understanding the installation material being used, and periodic safety inspection of all installation material and the fixture itself. If you lack these qualifications, do not attempt to perform the installation yourself. Improper installation can result in bodily injury.

# INSTALLATION

## KICKSTAND FOR FLOOR PLACEMENT

The Element H IP can also be placed on the floor to provide an uplighting display, and features a retractable kickstand that allows the device to be angled in the direction of the desired display.


To deploy the kickstand, simply toggle the switch on the underside of the device, near the power charging port (1). The kickstand can then be deployed from the underside (2) at various notched increments, allowing a maximum angle of 65-90 degrees from the vertical axis (3).

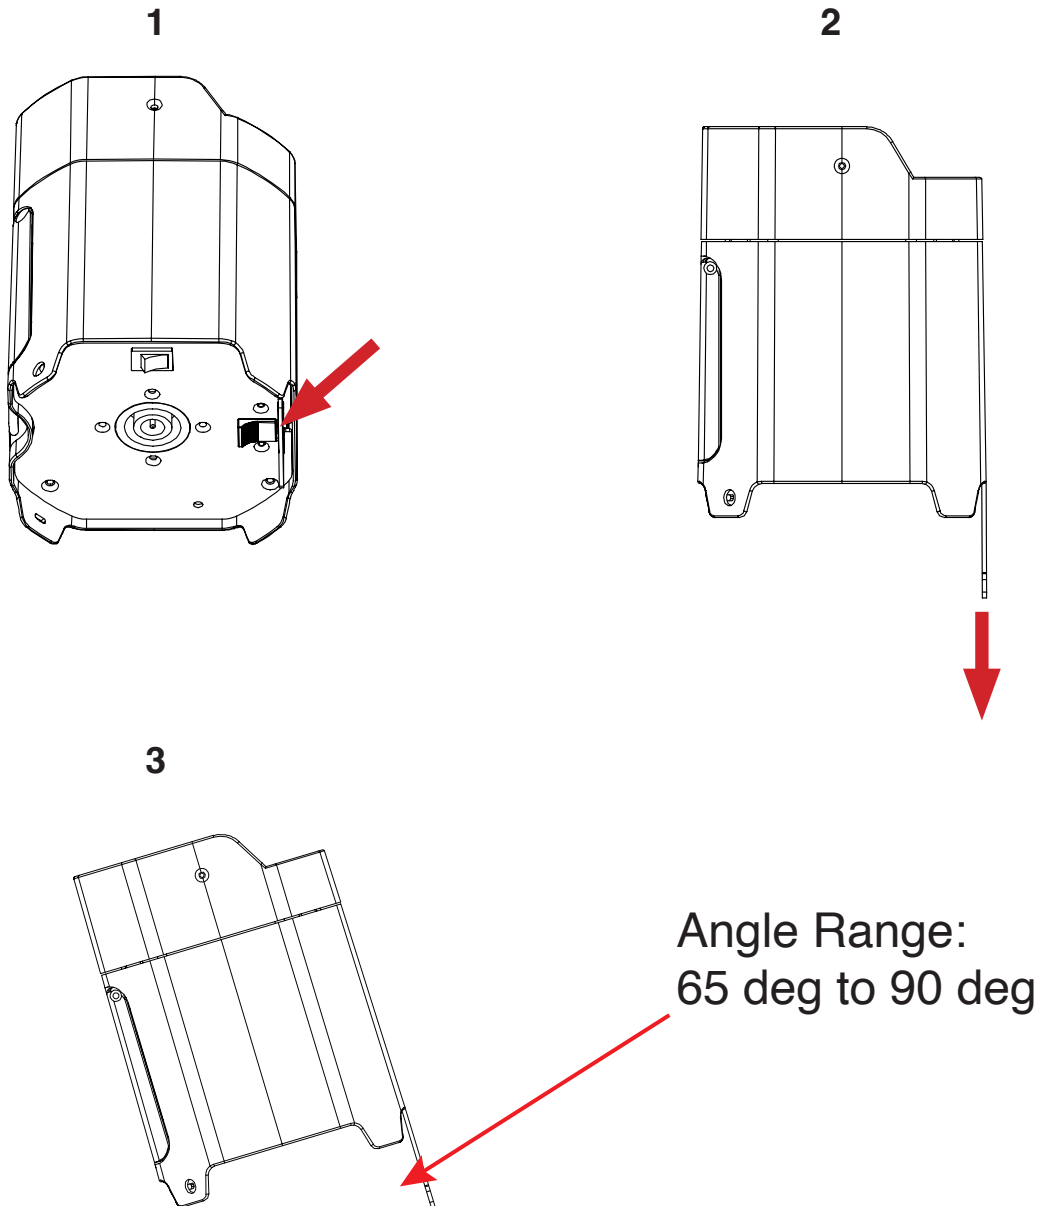


# INSTALLATION

## KENSINGTON KEY SLOT

The device features a slot for a Kensington-type security device that can be used to prevent theft. The key slot is located near the bottom of one of the device's feet, as shown in the illustration below. Be sure to attach the security device to a sturdy, fixed anchor point.

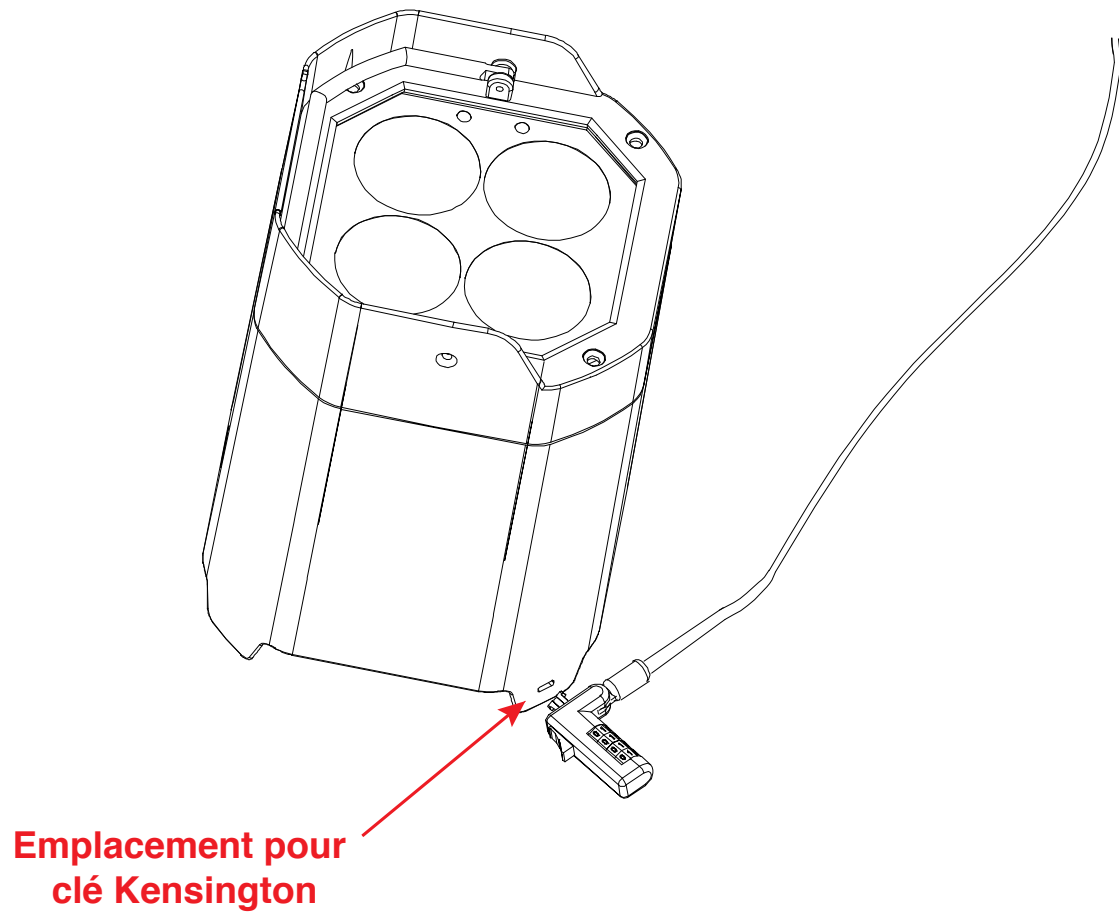

# BATTERY: IN-CASE CHARGING

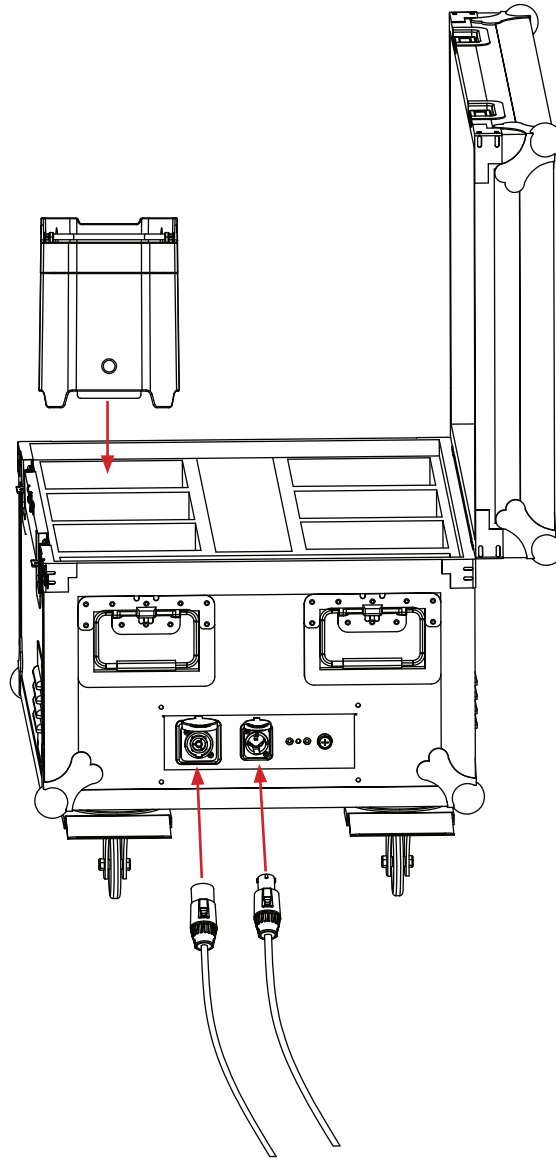

1. Lock the wheel casters by pressing down on the levers located near each caster.
2. Disengage the two latches and raise the case lid.
3. Once the lid has been opened, lift the upper end of the support bar and attach it to the recessed catch on the underside of the lid, along the right-hand side. Make sure that the catch is fully seated in the support bar's groove before reaching into the flight case. Please refer to **Safety Guidelines** section of this manual for detailed information.
4. Connect the included power cable into the Power-In port. If power linking cases together, please refer to the **Daisy Chain Power Linkage** section of this manual for details.
5. Place an ADJ Element H6 fixture in any one of the charging compartments in the flight case. Up to (6) units can be charged at one time. The charging indicator located beside the power ports will illuminate to indicate that your device is charging. **It is strongly recommended to leave the case lid open during the charging process.**

## BATTERY: REPLACEMENT



1. Power the unit down and disconnect from power. Lift the cover panel on the side of the unit, exposing the panel with the control screen. Use a screwdriver to remove the four screws at the corners of the display screen panel.
2. Carefully lift the display screen panel up and away from the body of the fixture, making sure not to damage any of the cables connected to the back of the panel or the gasket fitted around the edge of the panel.

# BATTERY: REPLACEMENT



3. With the display screen panel removed, the blue colored battery should be plainly visible. Locate the two white wires that run from the battery and link to a red wire and a black wire via a small white connector. Disconnect the connector, then remove the battery and replace with a new unit.

4. Reassemble the device by re-connecting the wire connector, then placing the display screen panel back in place. Please make sure that the gasket is fully seated around the edge of the panel. Replace the panel screws, and torque to **3.6 lb-in (4.2 kg-cm)**.

# BATTERY: GENERAL INFORMATION

## HANDLING PRECAUTIONS

**Do not short circuit the battery.** Avoid subjecting the battery to a short circuit, as doing so generates a very high current, resulting in overheating, electrolyte gel leakage, harmful fumes, explosion risk, or other damage to the battery.

**Mechanical shock.** Dropping, impacting, striking, or bending the unit, or subjecting the unit to any other types of mechanical shock may cause failure or shorten life of the battery.

**Do not disassemble the batteries.** Never disassemble the batteries, as doing so may result in an internal short circuit in the battery, leading to fire, explosion, release of harmful fumes, or other hazards. Electrolyte gel is harmful, and contact should be avoided whenever possible. Should the electrolyte gel come into contact with the skin or eyes, flush the area of contact immediately with fresh water and seek medical attention immediately.

**Do not expose battery to heat or fire.** Never incinerate or dispose of the batteries in fire, as this could result in an explosion.

**Do not expose the battery to water or liquids.** Never expose or immerse the batteries in liquids of any type, including water, seawater, soft drinks, juices, coffee, or other beverages.

**Battery Replacement.** For battery replacement please contact customer support.

**Never use a damaged battery.** Shipping carries a risk of damage to the battery. Should damage be observed, including damage to the plastic casing of the battery, deformation of the battery package, chemical or electrolyte odor, or leakage of the electrolyte gel, or any other miscellaneous damage, **DO NOT use the battery.** A battery with a odor of electrolyte or a gel leakage should be placed away from fire to avoid risk of fire or explosion.


**Battery Storage.** The battery should be stored at room temperature, with a charge of at least 50%. During long periods of storage, it is recommended that the battery be charged every 6 months. Doing so will prolong the life of the battery and will also make sure that the battery charge does not fall below the 30% mark.

**Other Chemical Reactions.** Because batteries rely on a chemical reaction to work, battery performance will deteriorate over time, even if stored for a long period of time without being used. In addition, if various usage conditions (such as charge, discharge, ambient temperature, etc.) are not maintained within the specified ranges, the life expectancy of the battery maybe shortened or the device in which the battery is used may be damaged by electrolyte gel leakage. If the batteries cannot maintain a charge for long periods of time, even when they are charged correctly, this may indicate the need to replace the battery.

**Battery Disposal.** Please dispose of battery according to local regulations.

# SYSTEM MENU

This fixture includes an easy to navigate control panel display, from which all necessary settings and adjustments can be made. Press the **MODE** button to scroll through the main menu options, then press **ENTER** to select the currently displayed option. Then use the **UP** and **DOWN** buttons to scroll through the sub-menu options until reaching the desired setting. Press the **MODE** button at any time to return to the main menu without making any adjustments.

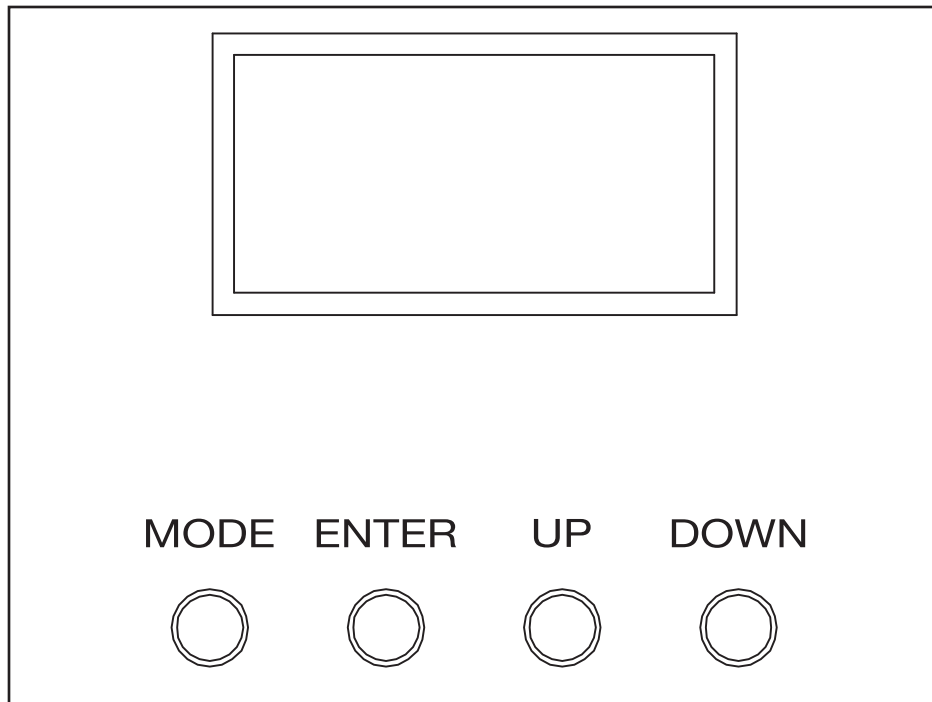



# SYSTEM MENU - ENGLISH

MAIN MENU	OPTIONS / VALUES (Default Settings in <b>BOLD</b> )		DESCRIPTION
DMX SETTINGS	DMX Address	<b>001</b> - 512	Set the starting DMX address of the device
	DMX Channel Mode	6ch	Set the DMX mode
		8ch	
		9ch	
		12ch	
		<b>14ch</b>	
		15ch	
		17ch	
	No DMX Status	<b>Hold Last</b>	Device holds last received channel values in the event that DMX signal is lost or interrupted
		Blackout	All channels go to 0 when DMX signal is lost or interrupted
		Manual Settings	All channels go to the last manual settings received when DMX signal is lost or interrupted
		Internal Programs	Unit default to the designated internal program when DMX signal is lost or interrupted
PERSONALITY	Prim/Sec Mode	Primary / <b>Secondary</b>	
	Aria	Aria Enable	<b>ON/OFF</b>
		Frequency	<b>2.4Ghz.</b>
			Sub-G US
			Sub-G EU
		2.4-G CH	<b>00~15</b>
		Sub-G CH	<b>00~09</b>
		Mesh	<b>ON/OFF</b>
		Bluetooth Enable	<b>ON/OFF</b>
	Dim Modes	<b>Standard</b> , Stage, TV, Architectural, Stage 2	
		Dim Delay	0 - 99
	Dim Curve	<b>Square</b> , Linear, Inv. Squa, S Curve	

# SYSTEM MENU - ENGLISH

MAIN MENU	OPTIONS / VALUES (Default Settings in <b>BOLD</b> )				DESCRIPTION
<b>PERSONALITY</b>	Display	Screen Saver Delay	Off, 1sec - <b>10sec</b>		Time before display goes to sleep; "Off" keeps screen on at all times
		Screen Lock	Off - <b>30sec</b> , 1 min		
		Rotate Display 180	Yes / <b>No</b>		
	Language	Passcode = 050	<b>English</b> / Spanish		
	IR Button Colors	Button 0	Red	000 - 255	Refer to <b>IR Default Values</b> section of this manual for detailed info
			Green	000 - 255	
			Blue	000 - 255	
			White	000 - 255	
			Amber	000 - 255	
			UV	000 - 255	
		Button 1	Red	000 - 255	
			Green	000 - 255	
			Blue	000 - 255	
			White	000 - 255	
			Amber	000 - 255	
			UV	000 - 255	
		...	...	...	
		Button 15	Red	000 - 255	
			Green	000 - 255	
			Blue	000 - 255	
			White	000 - 255	
			Amber	000 - 255	
			UV	000 - 255	
	Service	Passcode = 011	Factory Restore	Yes / <b>No</b>	Returns unit to default factory settings

# SYSTEM MENU - ENGLISH

MAIN MENU	OPTIONS / VALUES (Default Settings in <b>BOLD</b> )			DESCRIPTION
<b>MANUAL CONTROL</b>	Red	<b>000</b> - 255		
	Green	<b>000</b> - 255		
	Blue	<b>000</b> - 255		
	White	<b>000</b> - 255		
	Amber	<b>000</b> - 255		
	UV	<b>000</b> - 255		
	Color Macros	<b>000</b> - 255		
	Color Temp Linear	<b>000</b> - 255		
	Color Temp Presets	<b>Off</b> , 2300k, 2400k, 2500k...9900k		
	Shutter	<b>000</b> - <b>255</b>		
	Dimmer	<b>000</b> - <b>255</b>		
	Internal Prog.	<b>Off</b> , Prog 0, Prog 1...Prog 13		
	Internal Prog. Speed	<b>000</b> - 255		
	Internal Prog. Fade	<b>000</b> - 255		
<b>INTERNAL PROGRAMS</b>	Program 0	Speed	1 - 255 (default = <b>127</b> )	1 is slowest, 255 is fastest
		Fade	<b>0</b> - 255	0 disables fade, 255 is fastest
	Program 1	Speed	1 - 255 (default = <b>127</b> )	1 is slowest, 255 is fastest
		Fade	<b>0</b> - 255	0 disables fade, 255 is fastest
	...	...	...	...
	Program 13	Speed	1 - 255 (default = <b>127</b> )	1 is slowest, 255 is fastest
		Fade	<b>0</b> - 255	0 disables fade, 255 is fastest
<b>INFORMATION</b>	LED Temperature	xxx F / xxx C		Displays current device temperature
	Aria ID	xx:xx:xx:xx:xx:xx		
	Software Version	x.xx		Displays current software version
<b>BATTERY</b>	Charging Time	xx hours		Time remaining until fully charged
	Current Life	xxx %		Battery life remaining (% of full charge)
	Operation Mode	Standard 6		6 hour battery life (approximate)
		<b>Saver 12</b>		12 hour battery life (approximate)

# SYSTEM MENU - SPANISH

MAIN MENU	OPTIONS / VALUES (Default Settings in <b>BOLD</b> )		DESCRIPTION
CONFIGURACION DMX	Direccion DMX	<b>001</b> - 512	Set the starting DMX address of the device
	DMX Channel Mode	6ch	Modo Canales DMX
		8ch	
		9ch	
		12ch	
		<b>14ch</b>	
		15ch	
		17ch	
	Estado DMX	<b>Tener Ultimo</b>	El dispositivo conserva los últimos valores de canal recibidos en caso de que se pierda o interrumpa la señal DMX.
		Apagon	Todos los canales pasan a 0 cuando se pierde o interrumpe la señal DMX.
		Configuracion Manual	Todos los canales vuelven a la última configuración manual recibida cuando se pierde o interrumpe la señal DMX.
		Programas Internos	La unidad vuelve de forma predeterminada al programa interno designado cuando se pierde o interrumpe la señal DMX.
PERSONALIDAD	Prim/Sec Mode	Primary / <b>Secondary</b>	
	Configuracion Aria	Activar Aria	<b>ON/OFF</b>
		Eligir la frecuencia de radio Aria	<b>2.4Ghz.</b>
			Sub-G US
			Sub-G EU
		Eligir el canal Aria 2.4Ghz	<b>00~15</b>
		Eligir el canal Aria Sub-G	<b>00~09</b>
		Eligir Mesh de Aria	<b>ON/OFF</b>
		Activar Bluetooth	<b>ON/OFF</b>
	Dim Modos	<b>Standard</b> , Stage, TV, Architectural, Stage 2	
		Dim Delay	0 - 99
	Dim Curve	<b>Cuadrado</b> , Lineal, inversión Cuadrado, S Curva	

# SYSTEM MENU - SPANISH

MAIN MENU	OPTIONS / VALUES (Default Settings in <b>BOLD</b> )				DESCRIPTION	
PERSONALIDAD	Monitor	Retraso del protector de pantalla	Off, 1sec - <b>10sec</b>		Tiempo antes de que la pantalla entre en modo de suspensión; “Apagado” mantiene la pantalla encendida en todo momento	
		Bloqueo de pantalla táctil	Off - <b>30sec</b> , 1 min			
		Girar la pantalla 180	Yes / <b>No</b>			
		Código de acceso				
	Idioma	Código de acceso	<b>English</b> / Spanish			
	Colores del botón de control IR	Botón 0	Rojo	000	- 255	Consulte la sección Valores predeterminados de IR de este manual para obtener información detallada.
			Verde	000	- 255	
			Azul	000	- 255	
			Blanco	000	- 255	
			Ambar	000	- 255	
			UV	000	- 255	
		Botón 1	Rojo	000	- 255	
			Verde	000	- 255	
			Azul	000	- 255	
			Blanco	000	- 255	
			Ambar	000	- 255	
			UV	000	- 255	
		...	...	...		
		Botón 15	Rojo	000	- 255	
			Verde	000	- 255	
			Azul	000	- 255	
			Blanco	000	- 255	
			Ambar	000	- 255	
			UV	000	- 255	
		Servicio	Passcode = 011	Restauracion de fabrica	Yes / <b>No</b>	

# SYSTEM MENU - SPANISH

MAIN MENU	OPTIONS / VALUES (Default Settings in <b>BOLD</b> )			DESCRIPTION
MANUAL CONTROL	Rojo	000-255		
	Verde	000-255		
	Azul	000-255		
	Ambar	000-255		
	Macros de Color	000-255		
	Temperatura de Color 2300-9900K Lineal	000-255		
	Preajustes de Temperatura de Color	Off, 2300k, 2400k, 2500k, 2600k... 9900k		
	Estrobo	000-255		
	Dimmer	000-255		
	Programas Internos	Off, Prog 0, Prog 1... Prog 13		
	Velocidad de Programas Internos	000-255		
	Descolorarse de Programas Internos	000-255		
PROGRAMAS INTERNOS	Programa 0	Velocidad	1-255 ( <b>127</b> )	1 es el más lento, 255 es el más rápido
		Descolorarse	0-255	0 desactiva el desvanecimiento, 255 es el más rápido
	Programa 1	Speed	1-255 ( <b>127</b> )	1 es el más lento, 255 es el más rápido
		Fade	0-255	0 desactiva el desvanecimiento, 255 es el más rápido
	...	...	...	...
	Programa 13	Speed	1-255 ( <b>127</b> )	1 es el más lento, 255 es el más rápido
		Fade	0-255	0 desactiva el desvanecimiento, 255 es el más rápido
INFORMACION	Temperatura de los LEDs	xxx F / xxx C		Displays current device temperature
	Aria ID	xx:xx:xx:xx:xx:xx		
	Version de software	x.xx		Displays current software version
BATERIA	Tiempo de carga	xx horas		Tiempo restante hasta la carga completa
	Cargar	xxx%		Duración restante de la batería (% de carga completa)
	Modos de operacion	Estandar 6		Duración de la batería de 6 horas (aproximadamente)
		Ahorrardor 12		12 hour battery life (approximate)

# DMX ADDRESSING

All fixtures should be given a DMX starting address when operating with a DMX controller, in order to ensure that the correct fixture responds to the correct control signal. This digital starting address is the channel number from which the fixture starts to “listen” to the digital control signal sent out from the DMX controller. This starting DMX address is assigned by setting the correct DMX address on the digital control display on the fixture.

You can set the same starting address for all fixtures or a group of fixtures, or set different addresses for each individual fixture. Setting all fixtures to the same DMX address will cause all fixtures to react in the same way. In this case, please note that changing the settings of one channel will affect all the fixtures simultaneously.

If you set each fixture to a different DMX address, each unit will start to “listen” to the channel number you have set, based on the quantity of DMX channels of each fixture. That means changing the settings of one channel will only affect the selected fixture.

As an example, when operating this fixture model in 6 channel mode, you should set the starting DMX address of the first unit to 1, the second unit to 7 ( $1 + 6$ ), the third unit to 13 ( $1 + 6 + 6$ ), and so on. Refer to the chart below for more details.

Channel Mode	Unit 1 Addr	Unit 2 Addr	Unit 3 Addr	Unit 4 Addr
6-Ch	1	7	13	19
8-Ch	1	9	17	25
9-Ch	1	10	19	28
12-Ch	1	13	25	37
14-Ch	1	15	29	43
15-Ch	1	16	31	46
17-Ch	1	18	35	52

# DMX TRAITS

CHANNEL							DMX VALUES	FUNCTION
6CH	8CH	9CH	12CH	14CH	15CH	17CH		
1	1	1	1	1	1	1	000 - 255	<b>All Red</b> , 0-100%
2	2	2	2	2	2	2	000 - 255	<b>All Green</b> , 0-100%
3	3	3	3	3	3	3	000 - 255	<b>All Blue</b> , 0-100%
4	4	4	4	4	4	4	000 - 255	<b>All White</b> , 0-100%
5	5	5	5	5	5	5	000 - 255	<b>All Amber</b> , 0-100%
6	6	6	6	6	6	6	000 - 255	<b>All UV</b> , 0-100%
			7		7	7	000 - 255	<b>Color Macros</b> , see <b>Color Macros Chart</b> section of this manual
			8		8	8	000 - 255	<b>Color Temperature 2300-9900K Linear</b> 0 - 100%
			9		9	9		<b>White Color Temperature Presets</b>
							000 - 022	Open
							023 - 099	Presets, see <b>White Color Temperature Preset Chart</b> section of this manual
							100 - 255	No Function
	7	7	10	7	10	10		<b>Shutter, Strobe</b>
							000 - 031	LEDs Off
							032 - 063	LEDs On
							064 - 095	Strobe Effect, slow to fast
							096 - 127	LEDs On
							128 - 159	Pulse Effect in Sequences
							160 - 191	LEDs On
							192 - 223	Random Strobe Effect, slow to fast
							224 - 255	LEDs On
	8	8	11	8	11	11	000 - 255	<b>Dimmer Intensity</b> , 0-100%
		9	12	9	12	12	000 - 255	<b>Dimmer Fine</b>
			10	10	13	13		<b>Auto Programs</b>
							000 - 010	Off
							011 - 026	Auto Program 1
							026 - 043	Auto Program 2
							044 - 060	Auto Program 3
							061 - 076	Auto Program 4
							077 - 093	Auto Program 5
							094 - 110	Auto Program 6
							111 - 126	Auto Program 7
							127 - 143	Auto Program 8
							144 - 160	Auto Program 9
							161 - 176	Auto Program 10
							177 - 193	Auto Program 11
							194 - 210	Auto Program 12
							211 - 226	Auto Program 13
							227 - 255	No Function



# DMX TRAITS

CHANNEL							DMX VALUES	FUNCTION
6CH	8CH	9CH	12CH	14CH	15CH	17CH		
				11	14	14	000 - 255	<b>Auto Programs Speed</b> , slow to fast
				12	15	15	000 - 255	<b>Auto Programs Fade</b> , least to most
				13		16		<b>Dim Mode</b>
							000 - 020	Default to Unit Setting
							021 - 040	Standard
							041 - 060	Stage
							061 - 080	TV
							081 - 100	Architectural
							101 - 120	Theatre
							121 - 140	Stage 2
								<b>Dim Speed</b>
							141	0.1s
							142	0.2s
							143	0.3s
							144	0.4s
							145	0.5s
							146	0.6s
							147	0.7s
							148	0.8s
							149	0.9s
							150	1.0s
							151	1.5s
							152	2.0s
							153	3.0s
							154	4.0s
							155	5.0s
							156	6.0s
							157	7.0s
							158	8.0s
							159	9.0s
							160	10.0s
							161 - 255	Default to Unit Setting
				14		17		<b>Dim Curves</b>
							000 - 020	Square
							021 - 040	Linear
							041 - 060	Inv. Squa.
							061 - 080	S. Curve
							081 - 255	No Function

# IR DEFAULT VALUES

BUTTON	RED	GREEN	BLUE	WHITE	AMBER	UV
0	255	255	255	255	255	0
1	255	0	0	0	0	0
2	0	255	0	0	0	0
3	0	0	255	0	0	0
4	255	46	0	0	0	0
5	0	255	28	0	0	0
6	17	0	75	0	0	0
7	255	83	0	63	63	0
8	0	255	52	0	0	0
9	32	0	75	22	22	0
10	0	0	0	255	255	0
11	0	114	160	0	0	0
12	100	0	97	0	0	0
13	255	255	0	255	255	0
14	0	75	136	0	0	0
15	146	0	80	0	0	0

## EDITING RGBA IR BUTTON VALUES

These fixtures allow the user to create custom RGBA values and assign them to the numbered keys (0-15) on the remote control. Follow the steps below:

In the main system menu, press MODE to navigate to “Personality,” then press ENTER. Use the UP and DOWN buttons to scroll to “IR Button Colors,” then press ENTER again.

1. Use the UP and DOWN buttons to scroll to the number of the remote button that you would like to use. Options range from “Button 0” to “Button 15.” Press ENTER to select the button shown on the display screen.
2. Create a custom color for the button you have selected by using the UP and DOWN buttons to scroll through the color component options (Red, Green, Blue, or Amber). Press ENTER to select a color component option, then use the UP and DOWN buttons to adjust the intensity of that color component option. Selectable values range from 000 to 255. Repeat this process until you have set the desired Red, Green, Blue, and Amber intensities to create your custom color.

**NOTE:** Once you have created and assigned a custom RGBA value to a remote button, the default color for the remote button will be overridden. This means that the output color of the fixture may no longer resemble the color shown on the remote button. The only way to return to the default RGBA value is to reset the unit to the default factory settings by navigating to Personality > Service > Factory Restore.

**NOTE:** If multiple units have been linked in a primary-secondary set up, the custom RGBA values only need to be set up on the primary unit. The custom RGBA settings will carry over automatically to any secondary units in the system.

# COLOR MACROS


DMX VALUES	COLOR MACRO	DMX VALUES	COLOR MACRO
0-3	Off	128-131	G+B+W
4-7	Red	132-135	G+B+A
8-11	Green	136-139	G+B+UV
12-15	Blue	140-143	G+W+A
16-19	White	144-147	G+W+UV
20-23	Amber	148-151	G+A+UV
24-27	UV	152-155	B+W+A
28-31	R+G	156-159	B+W+UV
32-35	R+B	160-163	B+A+UV
36-39	R+W	164-167	W+A+UV
40-43	R+A	168-171	R+G+B+W
44-47	R+UV	172-175	R+G+B+A
48-51	G+B	176-179	R+G+B+UV
52-55	G+W	180-183	R+G+W+A
56-59	G+A	184-187	R+G+W+UV
60-63	G+UV	188-191	R+G+A+UV
64-67	B+W	192-195	R+B+W+A
68-71	B+A	196-199	R+B+W+UV
72-75	B+UV	200-203	R+B+A+UV
76-79	W+A	204-207	R+W+A+UV
80-83	W+UV	208-211	G+B+W+A
84-87	A+UV	212-215	G+B+W+UV
88-91	R+G+B	216-219	G+B+A+UV
92-95	R+G+W	220-223	G+W+A+UV
96-99	R+G+A	224-227	B+W+A+UV
100-103	R+G+UV	228-231	R+G+B+W+A
104-107	R+B+W	232-235	R+G+B+W+UV
108-111	R+B+A	236-239	R+G+B+A+UV
112-115	R+B+UV	240-243	R+G+W+A+UV
116-119	R+W+A	244-247	R+B+W+A+UV
120-123	R+W+UV	248-251	G+B+W+A+UV
124-127	R+A+UV	252-255	R+G+B+W+A+UV



# WHITE COLOR TEMPERATURE PRESETS





Colors shown are an approximate representation. <https://www.luxalight.eu/en/cie-converto>

DMX VALUE	COLOR TEMPERATURE (K)	DMX VALUE	COLOR TEMPERATURE (K)
0-22	No Function	62	6200
23	2300	63	6300
24	2400	64	6400
25	2500	65	6500
26	2600	66	6600
27	2700	67	6700
28	2800	68	6800
29	2900	69	6900
30	3000	70	7000
31	3100	71	7100
32	3200	72	7200
33	3300	73	7300
34	3400	74	7400
35	3500	75	7500
36	3600	76	7600
37	3700	77	7700
38	3800	78	7800
39	3900	79	7900
40	4000	80	8000
41	4100	81	8100
42	4200	82	8200
43	4300	83	8300
44	4400	84	8400
45	4500	85	8500
46	4600	86	8600
47	4700	87	8700
48	4800	88	8800
49	4900	89	8900
50	5000	90	9000
51	5100	91	9100
52	5200	92	9200
53	5300	93	9300
54	5400	94	9400
55	5500	95	9500
56	5600	96	9600
57	5700	97	9700
58	5800	98	9800
59	5900	99	9900
60	6000	100	10000
61	6100		

# DIMMER CURVES AND DIMMER MODES

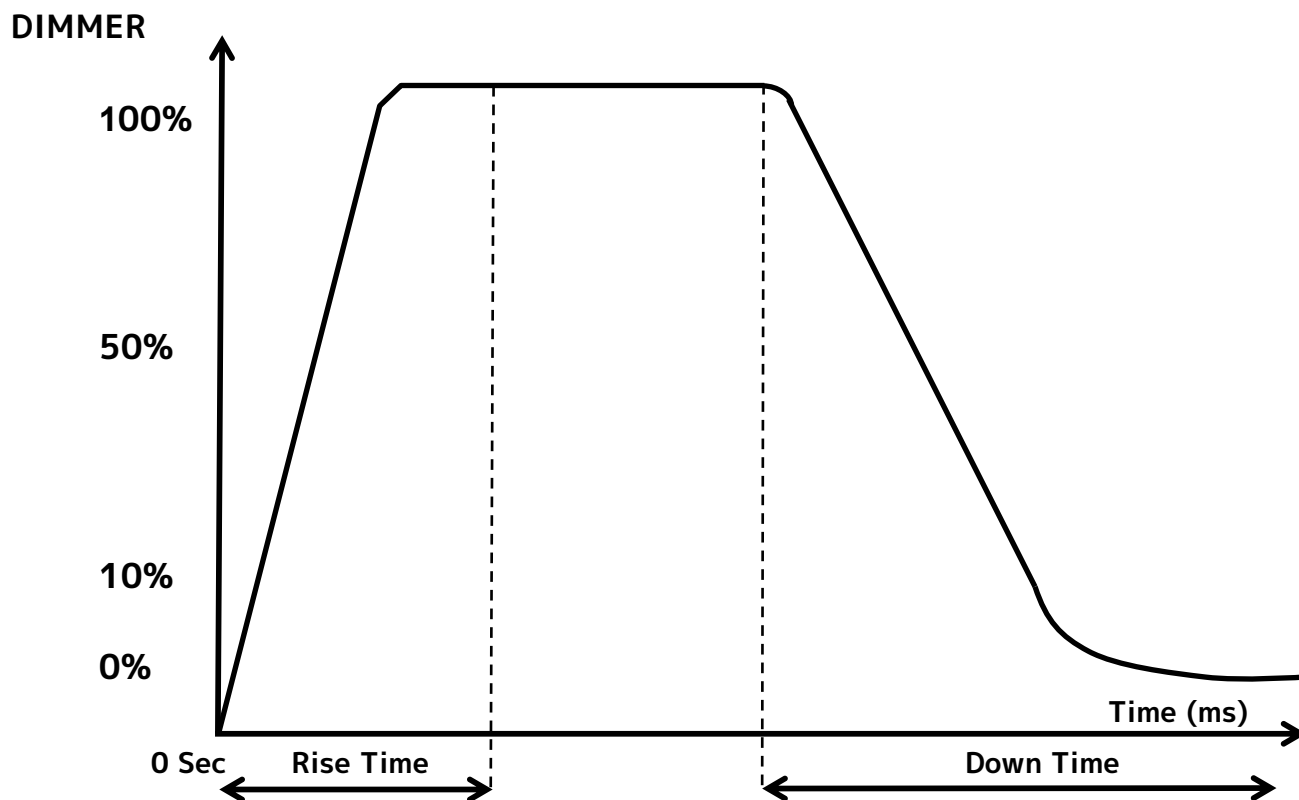

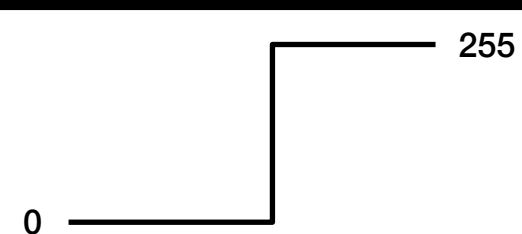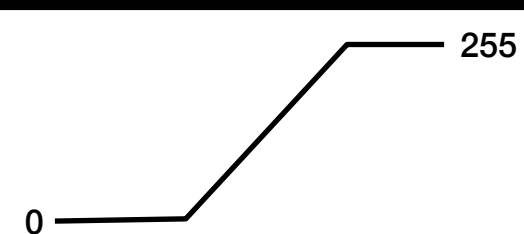Dimming Curve Ramp Effect	0 sec Fade Time		1 sec Fade Time	
				
	Rise Time (ms)	Down Time (ms)	Rise Time (ms)	Down Time (ms)
Standard (default)	0	0	0	0
Stage	780	1100	1540	1660
TV	1180	1520	1860	1940
Architectural	1380	1730	2040	2120
Theatre	1580	1940	2230	2280
Stage 2	0	1100	0	1660

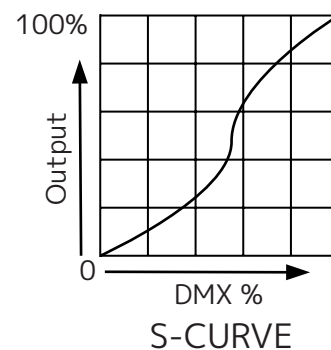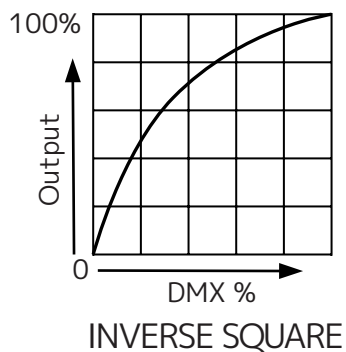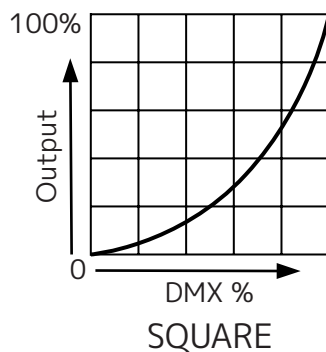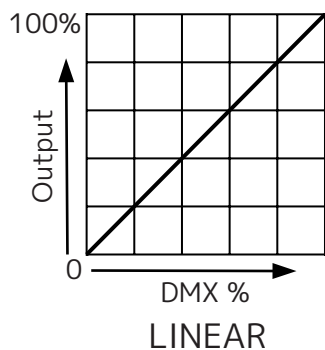

# CLEANING & MAINTENANCE

**WARNING! DISCONNECT UNIT FROM POWER BEFORE PERFORMING ANY CLEANING OR MAINTENANCE PROCEDURES!**

**ALWAYS ALLOW THE FIXTURE TO COOL FOR AT LEAST 15 MINUTES BEFORE PERFORMING ANY CLEANING OR MAINTENANCE!**

## CLEANING

Frequent cleaning is recommended to ensure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky, or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics. Clean periodically with a soft cloth to avoid dirt/debris accumulation.

**NEVER** use alcohol, solvents, or ammonia-based cleaners.

## MAINTENANCE

Regular inspections are recommended to ensure proper function and extended life. There are no user serviceable parts inside this fixture. Please refer all other service issues to an authorized ADJ service technician. Should you need any spare parts, please order genuine parts from an authorized ADJ dealer.

Please refer to the following points during routine inspections:

- A detailed electrical check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation, resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue or sediments.

# DAISY CHAIN POWER LINKAGE

This feature allows multiple flight cases to be linked together by way of the power input and output sockets. The maximum number of devices that can be connected in this manner is as follows:

- 4 flight cases using a 15-Amp plug.
- 5 flight cases using a 20-Amp plug.

After this quantity has been reached, a new power outlet must be used to accommodate additional charging cases.

It is recommended to leave the case lids open when charging in order to avoid the accumulation of excess heat inside the cases.

Linked devices must be of the same make and model type. **DO NOT** mix devices!

# TORQUE SETTINGS FOR SCREWS

**TORQUE DRIVERS (Recommended):** UTICA TS-30 (Shown)

**TORQUE DRIVER (Alternate):**

- Proto J6107A
- Wiha 28887




**The recommended torque setting for the Element H IP / Element H IP Chrome is as follows:**

- 3.6 lb-in (4.2 kg-cm) for display screen panel / battery cover screws
- 11.3 lb-in (13.0 kg-cm) for all other screws

**CAUTION! DO NOT OVER TORQUE SCREWS AS THIS CAN CAUSE LEAKAGE ISSUES!**

# FUSE REPLACEMENT





The flight case features a replaceable fuse. To replace, disconnect the flight case from the power source, then use a screw driver to unscrew the fuse holder located beside the power ports. Remove the bad fuse and replace with a new one, then screw the fuse holder back in. ***Replace only with a new fuse of the same T5A 250V rating.***

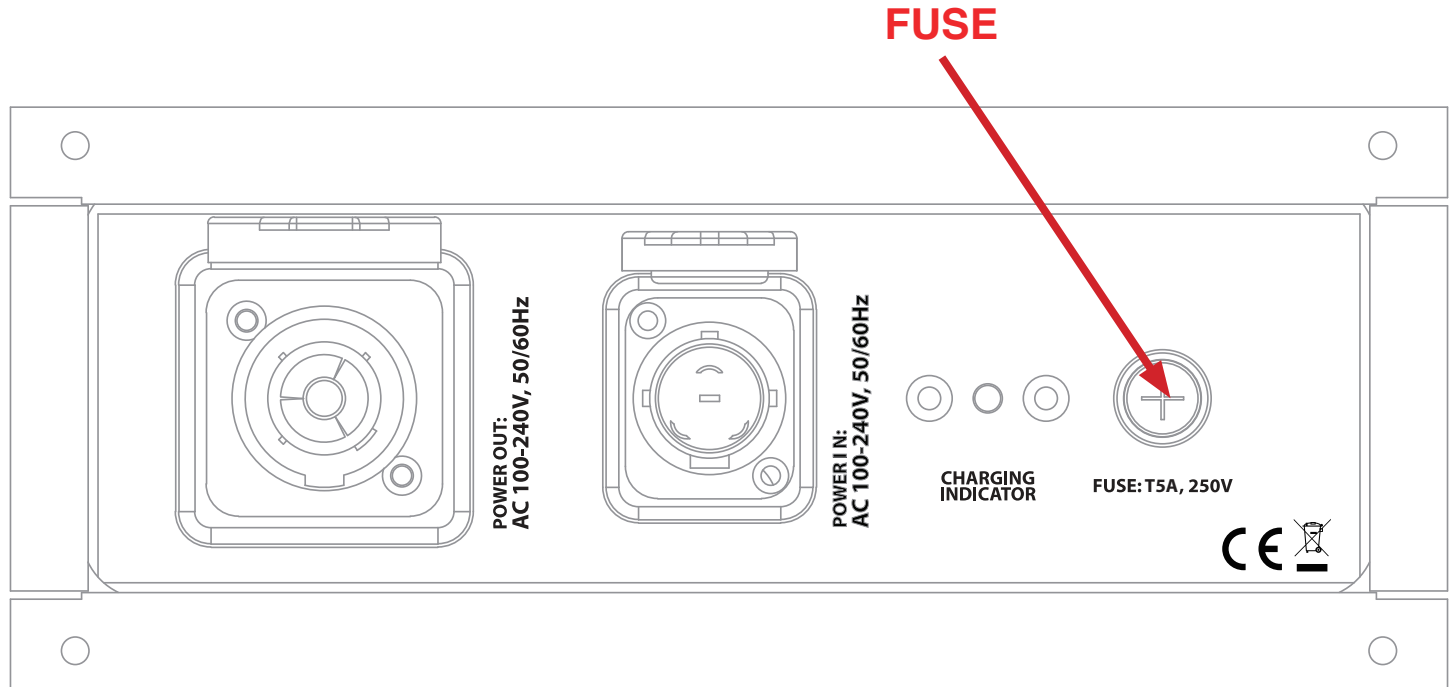



# DIMENSIONAL DRAWINGS

Dimensions not to scale.

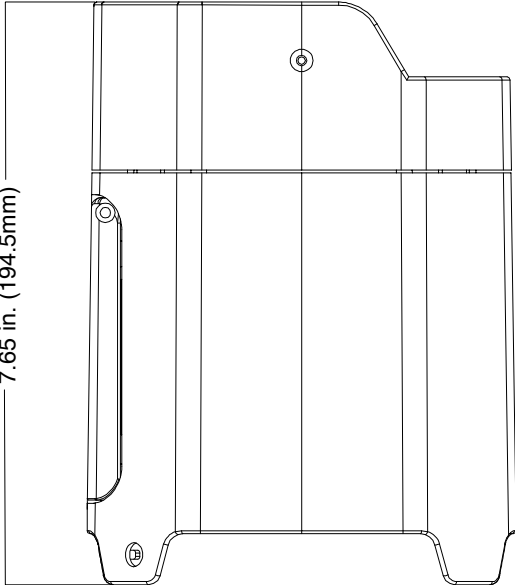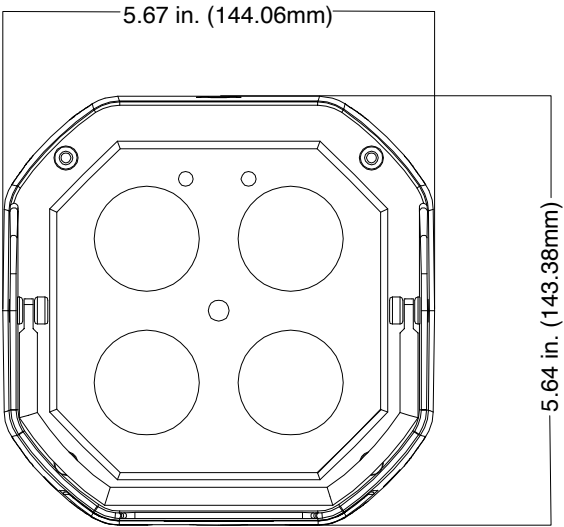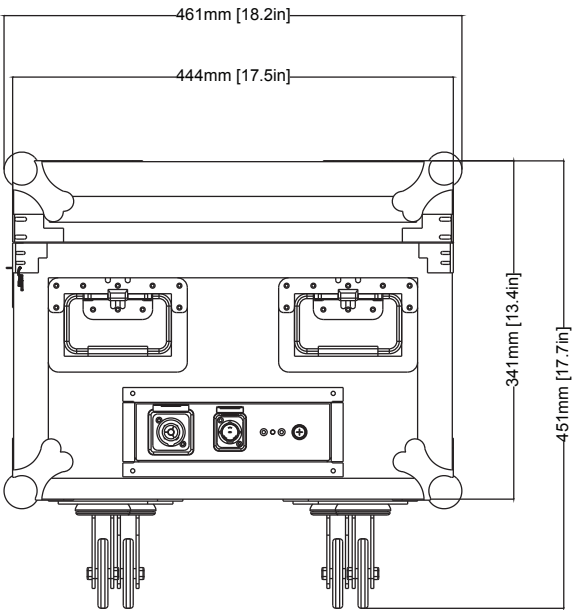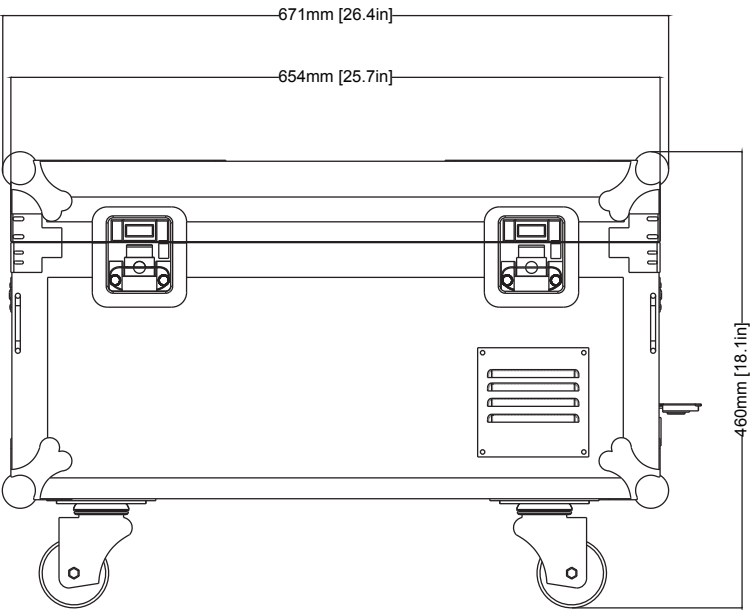

# SPECIFICATIONS

## Element H6 Pak includes:

- (6) Element H IP Black Fixtures
- (1) Element H6 FC charging Flight Case
- (6) Mirage Q6 IPCB Charging bases and power supplies
- (1) UCIR24 Wireless Infrared Controller
- (1) IP65 Locking Power Cable

## Element H6 Pak Features:

- Houses / Transports and Charges (6) Element H IP™ fixtures

## Element H6 Pak Dimensions / Weight (loaded case with 6 fixtures):

- Length: 18.2" (461mm)
- Width: 26.4" (671mm)
- Vertical Height: 18.1" (460mm)
- Loaded Weight: 84.66 lbs. (38.4 kg)

## Pak Electrical / Thermal:

- Power Input: AC100VAC~240VAC, 50/60Hz
- IP65 Power Locking Input and Output
- Max Power Consumption: 200 Watts
- Power Draw: 3A max
- Charge status indicator
- -4°F to 113°F (-20°C to 45°C)

## Fixture Specifications

### Optical:

- 4 x 20-Watt RGBAW+UV LEDs (6-in-1 - Red, Green, Blue, Amber White & UV)
- Life expectancy: rated at 50,000 hrs.
- LUX: 1117 @ 2M; 298 @ 4M
- Beam angle: 17.6°
- Field angle: 28.7°

### Connection:

- Aria X2 Wireless Management System
- With Wired Digital Communication Network
- Contact Charging system. \*Charging base and power supply included

### Control:

- Aria X2 Wireless Management System
- 7 DMX Channel modes: 6, 8, 9, 12, 14, 15 or 17 channels
- Remote control: Aria X2 Wireless Management System, UC-IR (Included)
- 5 Operational modes: RGBAW+UV Dimmer Mode; Auto Run Mode (13 programs, & 1 color/fade combo mode); Static Color mode; and Wireless DMX Control

## Features:

- IP54 Rated: partial protection from dust and water splashes
- Built-in kickstand to angle fixture when sitting on the floor
- 4-touch button OLED display inside cover panel
- Built-in Aria X2 wireless DMX with signal LED indicator
- 63 built-in Color Macros
- Variable RGBAW+UV color mixing offers a smooth, seemingly unlimited color palette - Great for Stage or Wall Washing!
- LED pulse and strobe effect (0.2Hz-11Hz)
- Flicker Free Operation
- Electronic Dimming: 0 - 100% with 6 dim modes and 4 dim curves
- Run all night – No duty cycle
- Battery charge indicator on each fixture
- Energy Save Mode

## Battery:

- Battery Type: fixed polymer lithium battery
- Battery Energy: 59.2WH (Watt Hours)
- Battery Weight: 0.24 kg.
- Battery Voltage: 14.8V
- Battery Capacity: 4000mAh (Typical Capacity)
- Total Lithium Ion Cells: 4 pieces
- Battery Wrap Material: PVC sleeving + highland barley paper
- Battery Charge Time: 6 Hours
- Battery Life: 6 Hours in Normal mode and 12 hours in Energy save mode(single color)
- Easy to replace battery

## Electrical:

- Power Draw Total (All LED's @ Full On): 20W
- Voltage operation: DC17V

## Dimensions / Weight:

- Dimensions (LxWxH): 5.64" x 5.67" x 7.65" / 143.38 x 144.06 x 194.5mm
- Weight: 5.3 lbs. / 2.4kg.

## Certifications:

- cETLus (Control #4002034)
- CE Compliant
- IP54 Outdoor rated

## **FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **FCC RADIO FREQUENCY INTERFERENCE WARNINGS & INSTRUCTIONS**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### **Europe Energy Saving Notice**

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you



