


ELIMINATOR[®]

LIGHTING

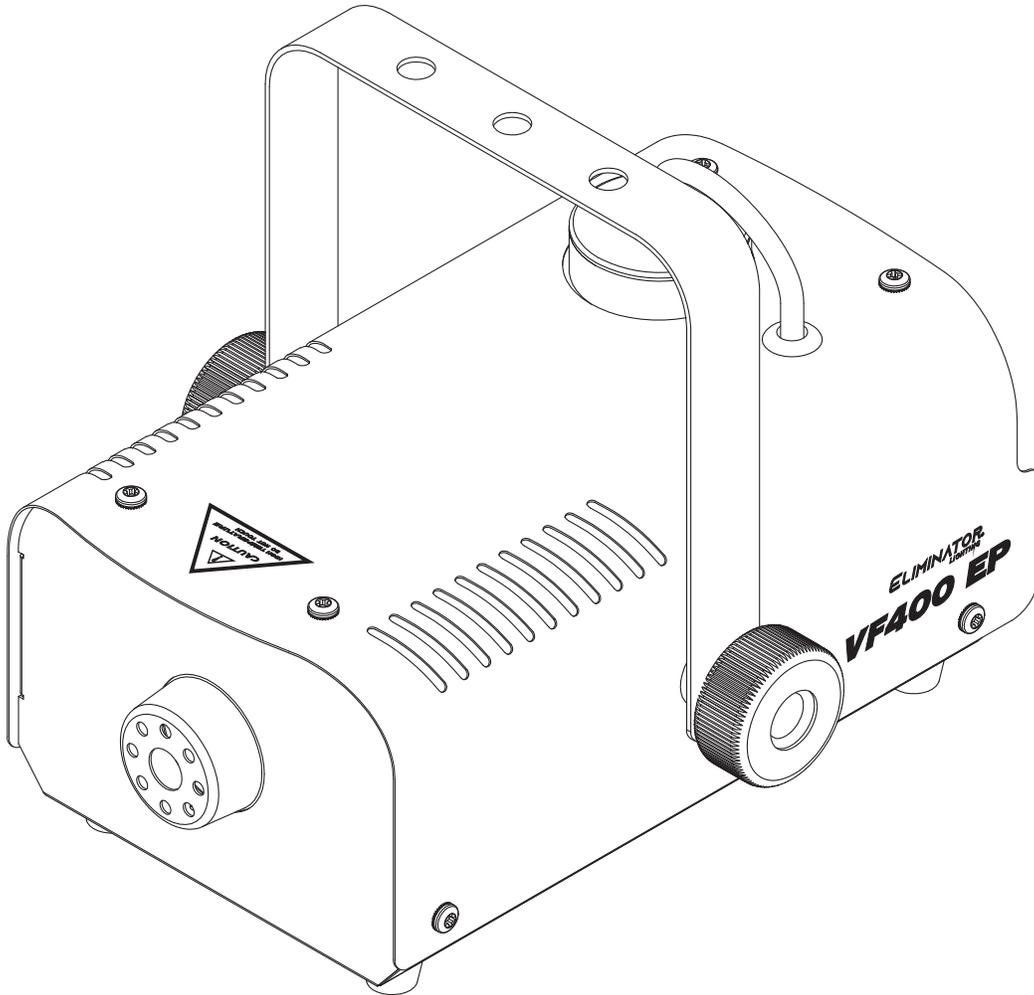

VF400 EP

User Manual

Caution: Fog machines may set off smoke alarms!

©2024 **Eliminator Lighting** all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. Eliminator logo and identifying product names and numbers herein are trademarks of Eliminator Lighting. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-Eliminator brands and product names are trademarks or registered trademarks of their respective companies.

Eliminator Lighting and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

Eliminator Lighting

6122 S. Eastern Ave. Los Angeles, CA. 90040
323-582-2650 | Fax 323-532-2941 | www.adj.com | info@adj.com

ADJ SUPPLY Europe B.V

Junostraat 2 6468 EW Kerkrade, The Netherlands
+31 (0)45 546 85 00 | Fax +31 45 546 85 99
www.adj.eu | info@adj.eu

ADJ PRODUCTS GROUP Mexico

AV Santa Ana 30 Parque Industrial Lerma, Lerma, Mexico 52000
+52 (728) 282-7070

DOCUMENT VERSION



Due to additional product features and/or enhancements, an updated version of this document may be available online. Please check www.adj.com for the latest revision/update of this manual before beginning installation and/or programming.

Date	Document Version	Software Version >	DMX Channel Mode	Notes
01/15/24	1.0	N/A	N/A	Initial release

CONTENTS

General Information	4
Limited Warranty (USA Only)	5
Warranty Registration Features	6
Safety Guidelines	7
Overview	8
Installation Guidelines	9
Remote Operation	12
Fuse Replacement Storage and Maintenance Trouble Shooting	13
Dimensional Drawings	14
Specifications	15

GENERAL INFORMATION

INTRODUCTION

Congratulations on your purchase of one of the most reliable fog machines on the market today! The VF400 EP commercial fog machine has been designed to perform reliably for years when the guidelines in this booklet are followed. Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this unit. These instructions contain important information regarding safety during usage and maintenance.

CUSTOMER SUPPORT

Tel: (323) 213-4592 | Fax: (323) 582-2941

www.adj.com | support@eliminatorlighting.com

Warning! To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

Caution! There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, as doing so will void your manufacturer's warranty. In the event that your unit requires service, please contact Eliminator Lighting for assistance.

SAFETY NOTICE! NEVER POINT OR AIM A FOG MACHINE TOWARDS PEOPLE OR THEIR CLOTHING. THIS UNIT EMITS HOT VAPOR AND SHOULD BE USED WITH THE SAME CARE THAT WOULD BE OBSERVED WHEN USING AN ELECTRIC KETTLE OR AN IRON.

PLEASE recycle the shipping carton whenever possible.

LIMITED WARRANTY (USA ONLY)

- A. Eliminator Lighting, an ADJ Products, LLC brand, hereby warrants, to the original purchaser, Eliminator Lighting products to be free of manufacturing defects in material and workmanship for a prescribed period from the date of purchase (see specific warranty period on reverse). This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, you must obtain a Return Authorization number (RA#) before sending back the product—please contact ADJ Products, LLC Service Department at 800-322-6337. Send the product only to the Eliminator Lighting factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Eliminator Lighting will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, Eliminator Lighting shall have no liability whatsoever for loss of or damage to any such accessories, or for the safe return thereof.
- C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which Eliminator Lighting concludes, after inspection, affects the reliability of the product, if the product has been repaired or service by anyone other than ADJ Products, LLC factory unless prior written authorization was issued to purchaser by Eliminator Lighting; if the product is damaged because not properly maintained as set forth in the instruction manual.
- D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check up. During the period specified above, Eliminator Lighting will replace defective parts at its expense with new or refurbished parts, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Eliminator Lighting under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Eliminator Lighting. All products covered by this warranty were manufactured after August 15, 2012, and bear identifying marks to that effect.
- E. Eliminator Lighting reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by Eliminator Lighting in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and/or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Eliminator Lighting be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.
- G. This warranty is the only written warranty applicable to Eliminator Lighting products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

LIMITED WARRANTY PERIODS

- **All Eliminator Lighting products (except laser diodes) = 1-year (365 days) Limited Warranty** (Such as: Special Effect Lighting, Intelligent Lighting, UV lighting, Strobes, Fog Machines, Bubble Machines, Mirror Balls, Par Cans, Trussing, Lighting Stands etc. excluding LED and lamps)
- **Laser Products = 1 Year (365 Days) Limited Warranty** (excludes laser diodes which have 6 month limited warranty)
- **Batteries = 180 Day Limited Warranty** (excluding batteries which have a 180 day limited warranty)

WARRANTY REGISTRATION

This device carries a one year (365 days) limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items, whether under warranty or not, must be freight pre-paid and accompanied by a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper included in the shipping carton. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. You may obtain a R.A. number by contacting our customer support team on our customer support number. All packages returned to the service department not displaying a R.A. number on the outside of the package will be returned to the shipper.



FEATURES

- High efficiency heater block for minimal residue
- Quick warm up time and reheating time
- 0.25 liter internal fog fluid tank
- Fluid level indicator
- Wired remote operation

SAFETY GUIDELINES

- In the event that the device needs to be returned to Eliminator Lighting for service, ship the device in the original packaging and materials only.
- To reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.
- Do not spill water or other liquids into or on to your unit.
- Ensure that the fog fluid is poured only into the fluid reservoir. Avoid spilling fog fluid into or onto other internal components.
- Ensure that the voltage of the power source matches the required voltage of the device.
- Do not remove the cover for any reason! There are no user serviceable parts inside this device.
- Disconnect the unit from power during long periods of non-use.
- Never connect this device to a dimmer pack!
- Do not operate this device if it has been damaged in any way.
- Never operate this unit with the cover removed.
- Do not attempt to operate this unit if the power cord is frayed or broken.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in the event of an internal short.
- Disconnect from main power before attempting to make any type of connection.
- Never block the ventilation holes, and always be sure to mount this unit in an area that will allow proper ventilation. Allow at least 6" (15cm) clearance between this device and a wall.
- This unit is intended for indoor use only, and use of this product outdoors voids all warranties.
- Follow proper storage guidelines when storing for extended periods. See the **Proper Storage and Maintenance** section of this manual for details.
- Always mount this unit in a safe and stable manner.
- Always route your power cord out of the path of foot traffic. Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
- The fixture should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged.
 - B. Objects have fallen onto, or liquid has been spilled into, the unit.
 - C. The unit has been exposed to rain or water.
 - D. The unit does not appear to operate normally or exhibits a marked change in performance.

OVERVIEW

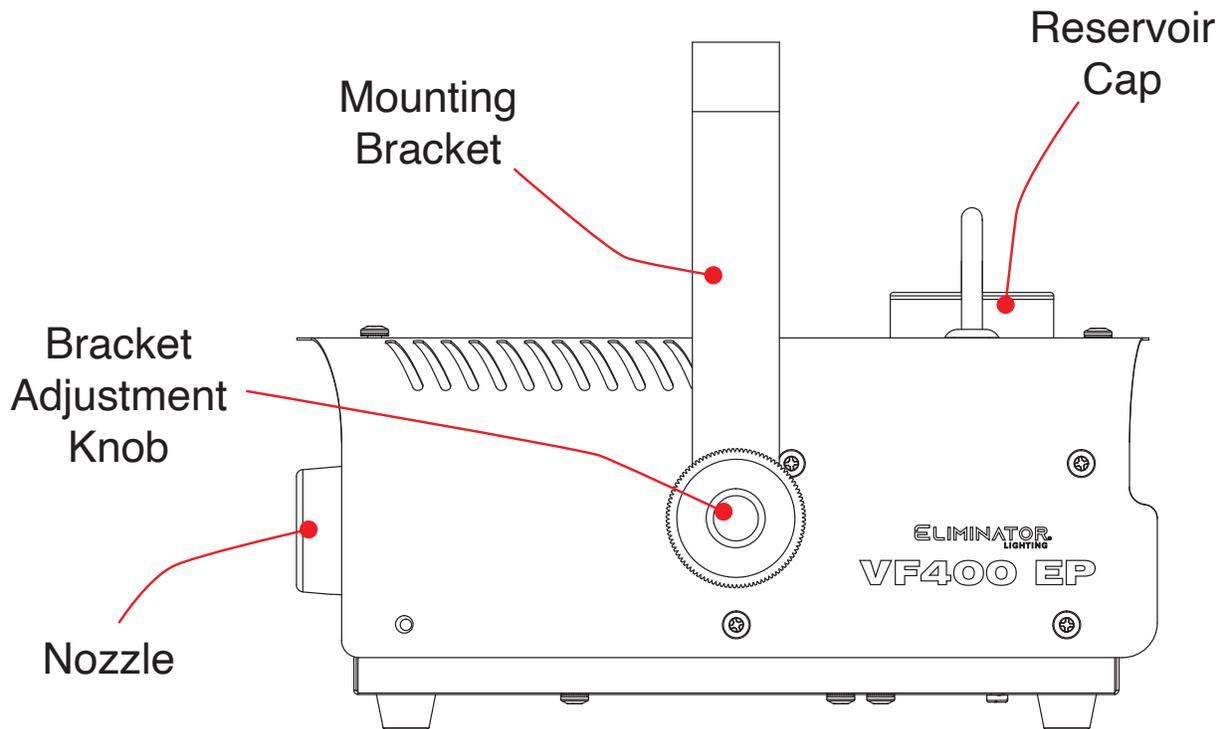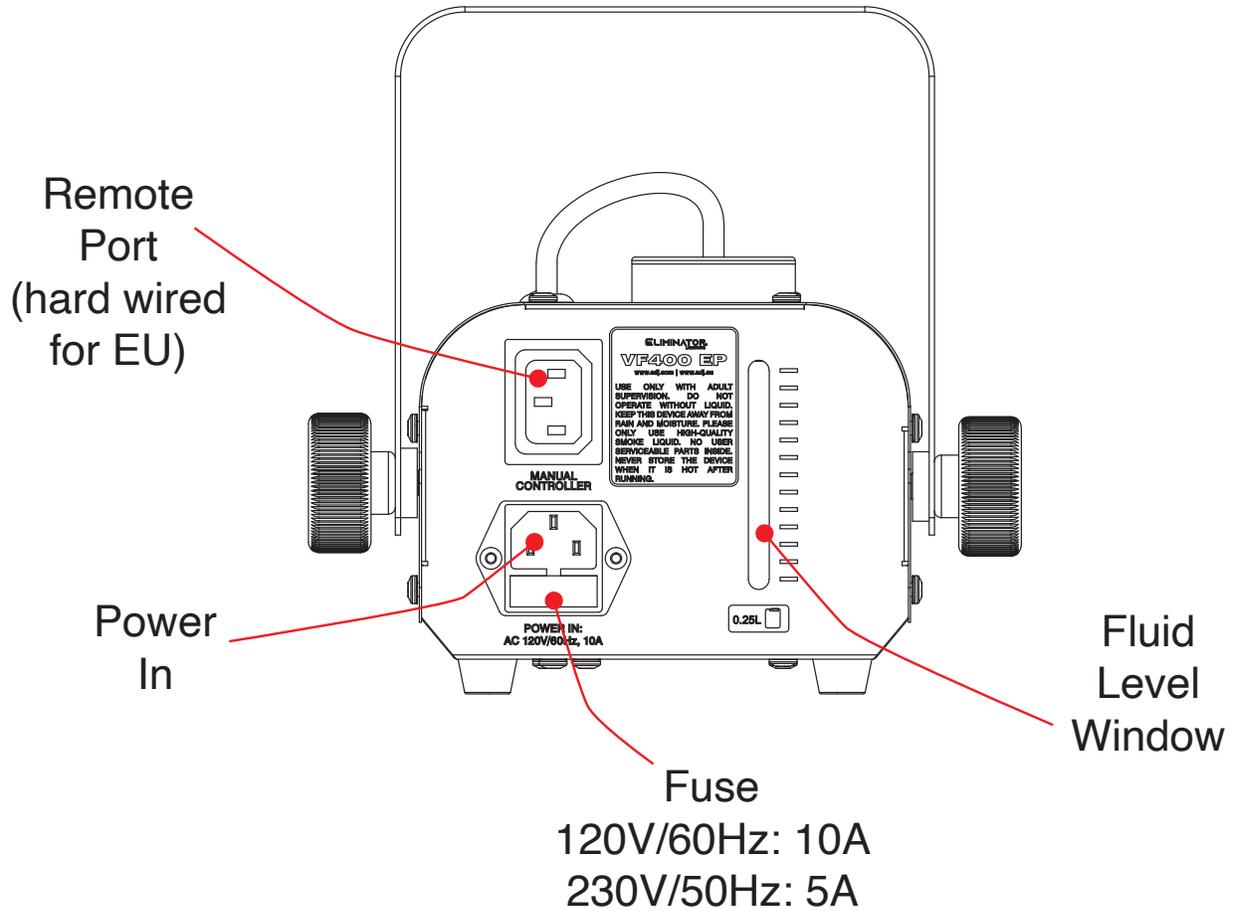

INSTALLATION GUIDELINES



ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.

DO NOT INSTALL THE FIXTURE IF YOU ARE NOT QUALIFIED TO DO SO!

Fixture **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations. Before rigging/mounting the fixture to any metal truss/structure or placing the fixture on any surface, a professional equipment installer **MUST** be consulted to determine if the metal truss/structure or surface is properly certified to safely hold the combined weight of the fixture, clamps, cables, and accessories.

Overhead fixture installation must always be secured with a secondary safety attachment, such as an appropriately rated safety cable that meets all local, national, and country codes and regulations.

Fixture should be installed away from walking paths, seating areas, or areas where unauthorized personnel might reach the fixture by hand.

NEVER stand directly below the fixture when rigging, removing, or servicing.

If the unit is installed in a suspended or hanging configuration, it should be mounted using a mounting clamp (not provided), and affixing it to the mounting bracket that is provided with the unit. Always ensure that the unit is firmly fixed to avoid vibration and slipping during operation. Always ensure that the structure that you are attaching the unit to is secure and is able to support at least 10 times the unit's weight. Also, always use a safety cable that can hold 12 times the unit's weight when installing the fixture. The equipment must be installed by a professional, and it must be installed in a place where it is out of the reach of people's grasp.

GENERAL SET UP


1. Open the shipping carton and carefully remove the unit from the shipping carton. Remove all the packing material from the device, paying special attention to the area around the nozzle.
2. Set the fog machine on a flat dry surface. Remove the included bracket from the packaging and attach it to the sides of the fog machine using the supplied hardware. Please note that the bracket is easily detachable and is not required for table-top usage. However, when the device is installed in a suspended environment, use of the bracket is required.
3. Fill the fog fluid reservoir with ADJ brand fog juice only, then replace the cap.
4. Firmly attach the remote control unit to the remote control socket located on the back of the unit. Please note that devices for the EU market will have the remote hard-wired to the device.
5. Plug the unit into a power supply that meets the device's voltage requirements. A red LED on the remote control will illuminate, indicating that the device is warming up. Once the device is warmed up, a green LED will illuminate on the remote (the red LED should also remain illuminated). This indicates that the unit is ready to emit fog.
6. Press the button on the remote to emit fog. Refer to the **Remote Operation** section of this manual for detailed information.

INSTALLATION GUIDELINES

CLAMP MOUNTING

When installing this device suspended from a truss, make sure that the device hangs in a level position in order to prevent leakage from the fluid reservoir. Be sure this fixture is kept at least 0.2m (7.9in.) away from any flammable materials (decoration etc.).

Insert a mounting clamp of the appropriate rating through one of the holes at the top of the mounting bracket, then secure the clamp in place with a bolt of the appropriate rating. **Always use and install a safety cable of the appropriate weight rating as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.**

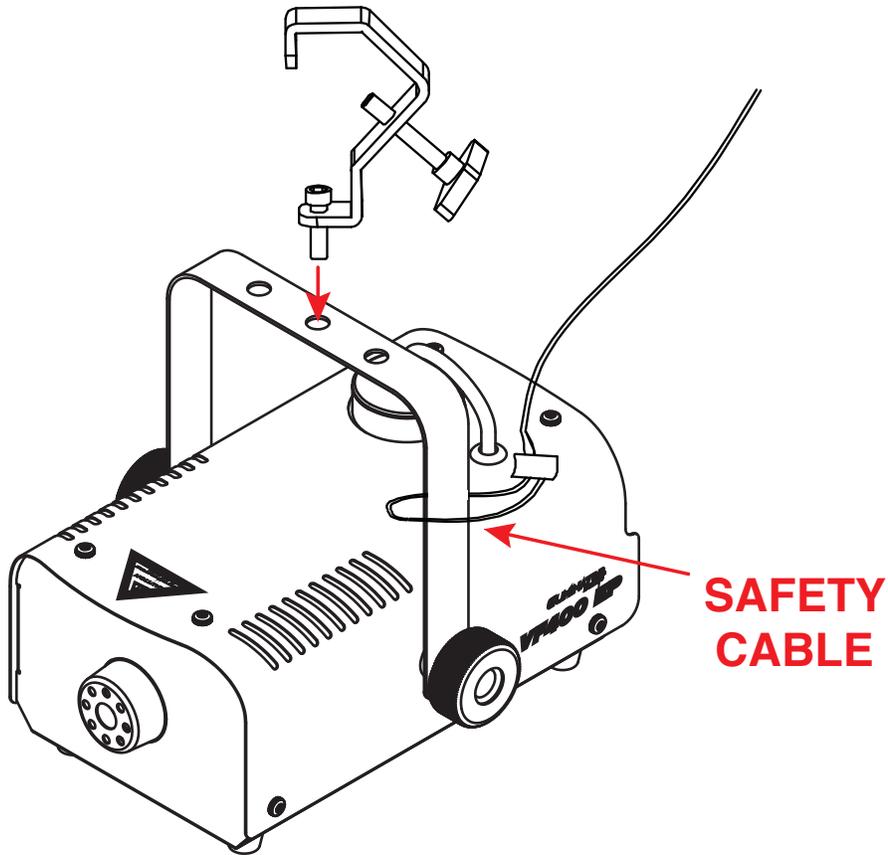

ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THE FIXTURE WILL NOT FALL IF THE CLAMP FAILS.


INSTALLATION GUIDELINES

RIGGING

Overhead rigging requires extensive experience, including but not limited to: calculating working load limits, understanding the installation material being used, and periodic safety inspection of all installation material and the fixture itself. If you lack these qualifications, do not attempt to perform the installation yourself. Improper installation can result in bodily injury.

FIXTURE INSTALLATION

This device is fully operational in two different mounting positions: hanging in a level position from a truss, or set on a flat level surface. **Regardless of configuration, the device should be in a level position in order to prevent leakage from the fluid reservoir.** Be sure this fixture is kept at least 0.2m (7.9in.) away from any flammable materials (decoration etc.). Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails. Never use the carrying handles for secondary attachment.

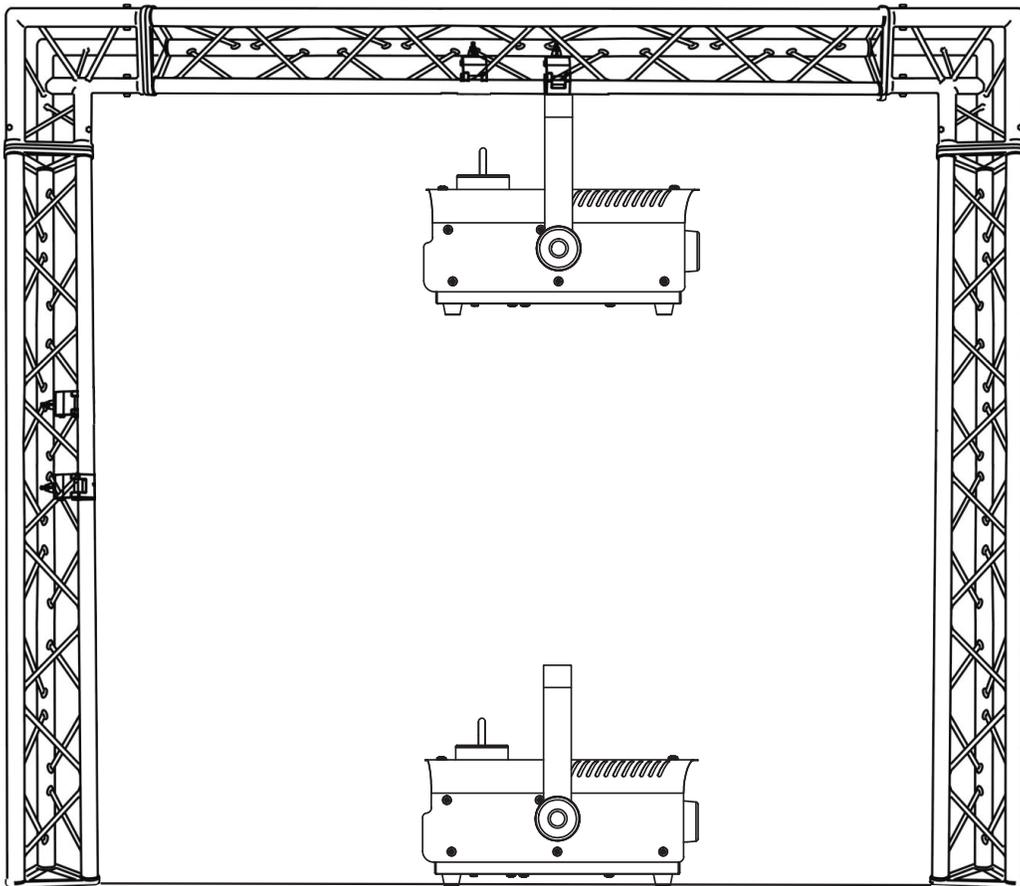

FALLING FIXTURES CAN CAUSE SEVERE INJURY OR SERIOUS EQUIPMENT DAMAGE! FOR THIS REASON, FIXTURES SHOULD BE INSTALLED AND INSPECTED ONLY BY QUALIFIED PERSONNEL. DO NOT INSTALL THE UNIT IF YOU LACK THE QUALIFICATIONS TO DO SO, OR IF YOU HAVE DOUBTS ABOUT THE SAFETY AND SECURITY OF THE INSTALLATION SETUP OR LOCATION!



ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THE FIXTURE WILL NOT FALL IF THE CLAMP FAILS.

REMOTE OPERATION

Always be sure to maintain an adequate supply of fog juice in the fluid reservoir. Running the fog machine dry will result in pump failure and/or clogging, and is the most common cause of failure in fog and haze machines. We recommend use of ADJ brand fog juice only!

Remote Operation: Connect the Z-VG400EP-R remote to the fog machine. Please note the devices for the EU market will have the remote hard-wired to the device. Once the machine is plugged in and turned on, a red power LED on the remote will illuminate to indicate that the device is receiving power and warming up. Allow at least two to three minutes for the device to fully warm up, at which point a green LED on the remote will illuminate, indicating the unit is ready to emit fog. To emit fog, simply press and hold the button on the remote for desired length of time.

If the green LED is on and the unit does not emit fog after the button is pressed for 30 seconds, check that the fluid tank has a sufficient amount of fog fluid.

Caution: Disconnect from the power supply before removing or replacing the remote control unit.



FUSE REPLACEMENT

Disconnect the unit from its power source. Remove the power cord from the unit, then find the fuse holder located inside the power socket. Insert a flat-head screw driver into the power socket and gently pry out the fuse holder. Remove the bad fuse and replace with a new of the same rating (**10A for the 120V version, or 5A for the 230V version**). Please note that the fuse holder also has a holder for a spare fuse.




STORAGE AND MAINTENANCE

Store your device in a cool area only, and cover the device to prevent dust buildup. When storing for long periods of time, it is strongly advised to run the device at least once every 3-4 months, due to the fact that long periods of inactivity can severely shorten the operational life of the device. Only run water based fog juice through your device. Never run plain water, vinegar, or any other liquid solution through your device, as running anything other than water based fog juice will seriously damage your device.

TROUBLE SHOOTING

If you experience low fog output, pump noise, or no fog output at all, disconnect the device from power and discontinue use immediately. Do not continue to push the remote control's activation button, as this may cause damage to the device. Check fluid level, the external fuse or breaker, and remote connection, and verify that the wall outlet is sending power. If none of these factors prove to be the cause of the problem, and the unit still fails to operate correctly, the unit may require service. Please contact customer support for further instructions. Please do not return the unit to your dealer without contacting customer support first.

DIMENSIONAL DRAWINGS

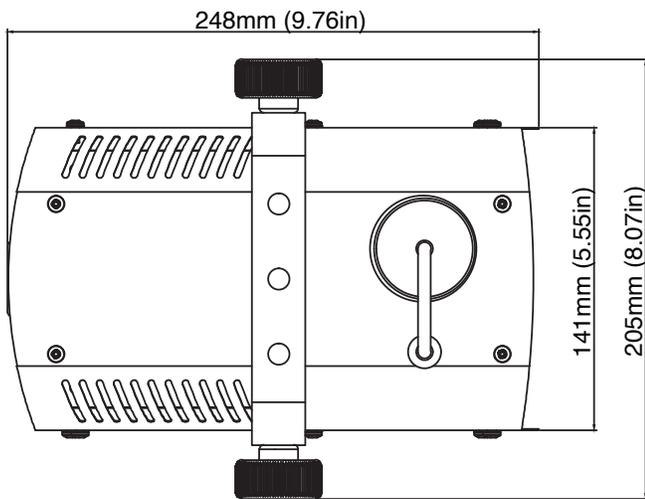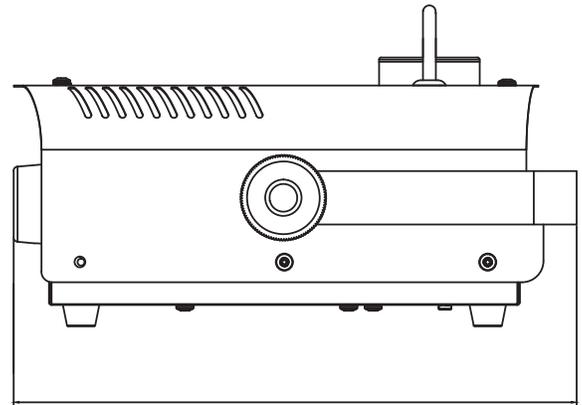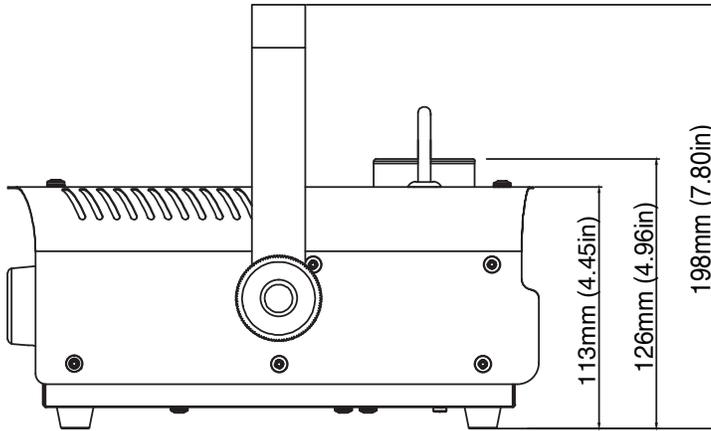

SPECIFICATIONS

- 400W mobile Fog Machine
- High efficiency heater block burns through fog with less residue
- Warm-up time: 2-3 minutes
- Reheating Time: 30 Seconds
- Second Fog Shooting Time: Around 37 Seconds
- Output: 3,000 cubic ft. per min
- Internal fog fluid tank: .25 Liter (full tank of fluid last 34 min.)
- Fluid level indicator
- Includes Eliminator Z-VG400EP-R wired remote
- Only use high quality, water-based fog fluid
- Dimensions - Bracket Raised (LxWxH): 9.76" x 8.07" x 7.80" / 248mm x 205mm x 198mm
- Dimensions - Bracket Collapsed (LxWxH): 10.35" x 8.07" x 4.96" / 263mm x 205mm x 126mm
- Weight: 3.1 lbs. / 1.4 kg.

