


USB drive Formatting instructions for WiFly NE1

If the USB drive is not recognised by the NE1 (Error MSG USB not found) execute the following steps to make the USB drive suitable for the NE1:

- Put the USB drive in the USB port on your PC
- Go to File Explorer
- Right click the USB drive and select “**Format...**”
- Select “**FAT32**” under “File System”.
- Select “**Default allocation size**” under “Allocation unit size”. **This is very important!**

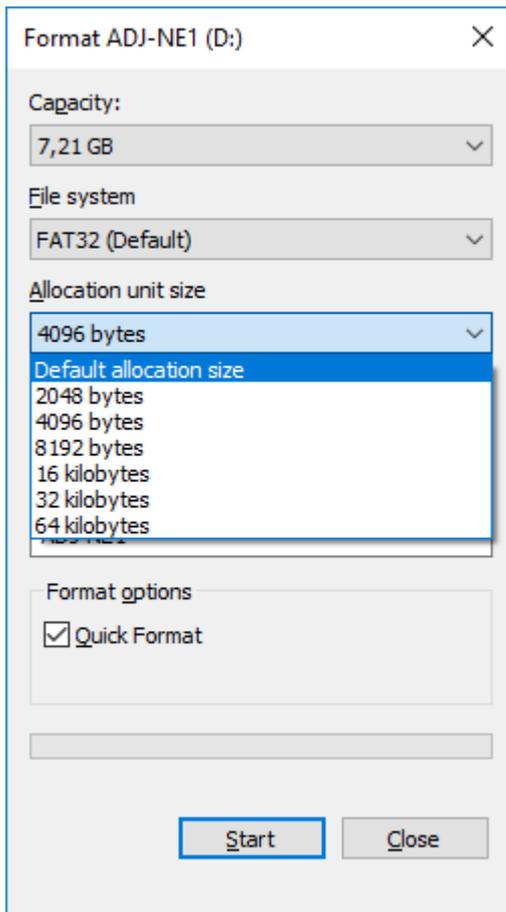

- Rename the USB drive to “**ADJ-NE1**” under “Volume name”.
- Select “**Quick Format**” under “Format options”.
- Press “**Start**” and wait until the process is completed.

The USB drive is now ready for use with the WiFly NE1.