

Some extra functionalities:

SHIFT + JOG turn	– Seek in track like in the Pioneer CDJ series
SHIFT + SYNC	– setting the deck as MASTER TEMPO
SHIFT + HOTCUE 1-4	– Delete the hot cue (works also for hot cues 5-8 if this page is switched on)
SHIFT + BEND plus/minus buttons	– Tempo Fader range select from 2 to 100%
SHIFT + VINYL	– SLIP/FLUX mode - on/off
SHIFT + LOAD	– unloads the deck
CUES button	– Change the hot cue page (1-4 to 5-8 – when is light on)
LOCK	– Sets KEY LOCK on
VINYL	– Scratch mode on/off.
BROWSE	– Folder browsing switch (When ON)
SAMPLER	– Favorites browsing switch (When ON)
BROWSER KNOB	– track/folder/favorites selection (depends on the BROWSER & SAMPLER Buttons state)
A/B	– Deck switching A/C (Left hand decks in traktor)
C/D	– Deck switching B/D (Right hand decks in traktor)
BLANK BUTTON on both sides of the controller	– Deck FX Assign when ON, and FX selection modifier when hold pressed in.
BLANK BUTTON + SELECT Knob	– FX Select
Effect select knob	– Effect function knob 3
Effect Parameter knob	– FX DRY/WET

- The highlighted button will indicate what direction to turn the jog wheel to beat match, or which pitch bend button to press (Press the highlighted pitch bend button to beat match)
- All possible visual LED Feedback is provided. When function is ON the corresponding LED will light ON indicating working function.
- The load buttons will switch ON when the corresponding deck is not having any track loaded in.
- Pitch bend buttons highlight when the track is out of beat with the Master track.