

COB CANNON LP200STX

User Manual

©2025 ADJ Products, LLC all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ADJ Products, LLC logo and identifying product names and numbers herein are trademarks of ADJ Products, LLC. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ADJ Products, LLC brands and product names are trademarks or registered trademarks of their respective companies.

ADJ Products, LLC and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

Europe Energy Saving Notice
Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

DOCUMENT VERSION



Due to additional product features and/or enhancements, an updated version of this document may be available online. Please check www.adj.com for the latest revision/update of this manual before beginning installation and/or programming.

| Date | Document Version | Software Version | DMX Channels | Notes |
|------------|------------------|------------------|----------------------------------|---|
| 10/24/2024 | 1.0 | 1.00 | 5/8A/8B/9/10A/10B/12/13/16/20 Ch | Initial Release |
| 01/22/2025 | 1.1 | N/C | No Change | Updated Specifications; Added FCC Statement |
| 02/06/2025 | 1.2 | N/C | No Change | Updated Installation Guidelines |
| 09/09/2025 | 1.3 | N/C | No Change | Update Dimensions, Specifications |
| 04/29/2026 | 1.4 | N/C | No Change | Update Specifications |
| | | | | |

CONTENTS

| | |
|---|-----------|
| General Information | 4 |
| Features | 5 |
| Safety Precautions | 6 |
| Overview | 7 |
| Installation Guidelines | 8 |
| Accessory Installation | 14 |
| Aria Setup | 16 |
| System Menu | 17 |
| Dim Modes & Dim Curves | 20 |
| DMX Setup | 21 |
| DMX Traits | 23 |
| Color Temperature | 26 |
| Color Macros | 27 |
| Remote Device Management (RDM) | 29 |
| IR Remote Control | 30 |
| IR Default Values Editing RGBAL IR Button Values | 31 |
| Daisy Chain Power-Linking Cleaning and Maintenance | 32 |
| Fuse Replacement | 33 |
| Specifications | 34 |
| Dimensional Drawings | 35 |
| FCC Statement | 36 |

GENERAL INFORMATION

INTRODUCTION

Please read and understand all instructions in this manual carefully and thoroughly before attempting to operate these products. These instructions contain important safety and use information.

UNPACKING

This device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect the device for damage and be sure all accessories necessary to operate the device have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support at the number listed below. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

CUSTOMER SUPPORT

Contact ADJ Service for any product related service and support needs. Also visit forums.adj.com with questions, comments or suggestions.

Parts: To purchase parts online visit:

<http://parts.adj.com> (US)

<http://www.adjparts.eu> (EU)

ADJ SERVICE USA - Monday - Friday 8:00am to 4:30pm PST

Voice: 800-322-6337 | support@adj.com

ADJ SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET

Voice: +31 45 546 85 60 | support@adj.eu

ADJ PRODUCTS LLC USA

6122 S. Eastern Ave. Los Angeles, CA. 90040

323-582-2650 | www.adj.com | info@adj.com

ADJ SUPPLY Europe B.V

Junostraat 2 6468 EW Kerkrade, The Netherlands

+31 (0)45 546 85 00 | www.adj.eu | info@adj.eu

ADJ PRODUCTS GROUP Mexico

AV Santa Ana 30 Parque Industrial Lerma, Lerma, Mexico 52000

+52 (728) 282-7070

LIMITED WARRANTY

For up-to-date warranty information regarding your device, please visit ADJ's warranty information page online or scan the QR codes below.



USA: <https://www.adj.com/pages/warranty-information>



EU: https://www.adj.eu/terms_and_conditions

It is strongly recommended to power the fixture down completely when not in use. Doing so will reduce wear on the fixture due to sustained or extended operational periods, thereby maximizing its operational lifespan.

FEATURES

- Embedded Aria X2 Wireless Management System
- Primary / Secondary Mode
- Flicker Free operation (No flickering on camera)
- Produces powerful, smooth RGBAL color mixing with rich palettes of color
- Scissor yoke allows fixture to be mounted on truss or set on the ground
- Optional Barn Doors (BAR001) sold separately

INCLUDED ITEMS:

- (1) 50-degree lens
- (1) 40-degree lens
- UCIR24 Wireless IR Remote
- Power Cord
- Scissor Yoke
- Omega Bracket


SAFETY PRECAUTIONS



PROTECTION CLASS 1 - FIXTURES MUST BE PROPERLY GROUNDED.





THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF, AS DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURERS'S WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.

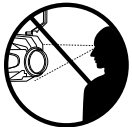

**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE
RETINA INJURY RISK - MAY INDUCE BLINDNESS!
SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!**

- **Ambient operating temperature range is -4°F to 104°F (-20°C to 40°C)!**
- **DO NOT TOUCH** the fixture housing during operation. Disconnect the power and allow approximately 15 minutes for the fixture to cool down before servicing.
- **DO NOT** shake the fixture, and avoid brute force when installing and/or operating the fixture.
- **DO NOT** operate the fixture if the power cord has become frayed, crimped and/or damaged. If the power cord is damaged, replace immediately with a new one of the same power rating.
- **DO NOT** attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- **DO NOT** attempt to operate this unit if it has been damaged in any way.
- Disconnect from main power before making any type of connection.
- **DO NOT** block any air ventilation slots. All fan and air inlets must remain clean and never blocked. Allow approx. 6" (15cm) between fixture and other devices or a wall for proper cooling.
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- **DO NOT** remove the cover for any reason.
- When installing fixture in a suspended environment, always use mounting hardware that is no less than M10 x 25mm, and always install fixture with an appropriately rated safety cable.
- **NEVER** plug this unit in to a dimmer pack.
- During long periods of non-use, disconnect the unit's main power.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the point where they exit from the unit.
- Cleaning - The fixture should be cleaned only as recommended by the manufacturer.
- Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug have been damaged.
 - B. Objects have fallen onto, or liquids have been spilled into, the fixture.
 - C. The fixture does not appear to operate normally or exhibits a marked change in performance.
 - D. The fixture has fallen and/or has been subjected to extreme handling.

OVERVIEW

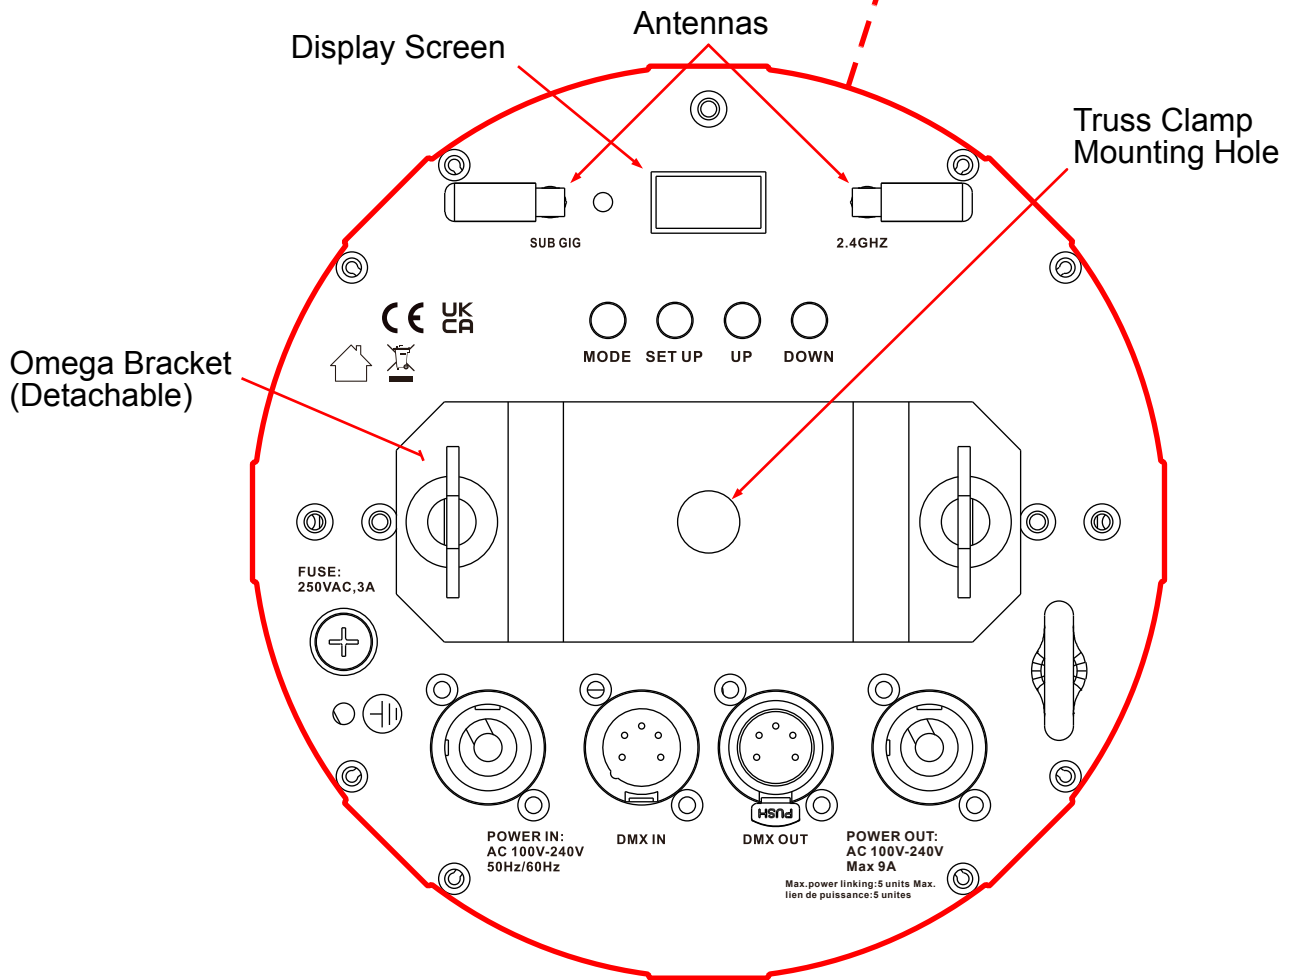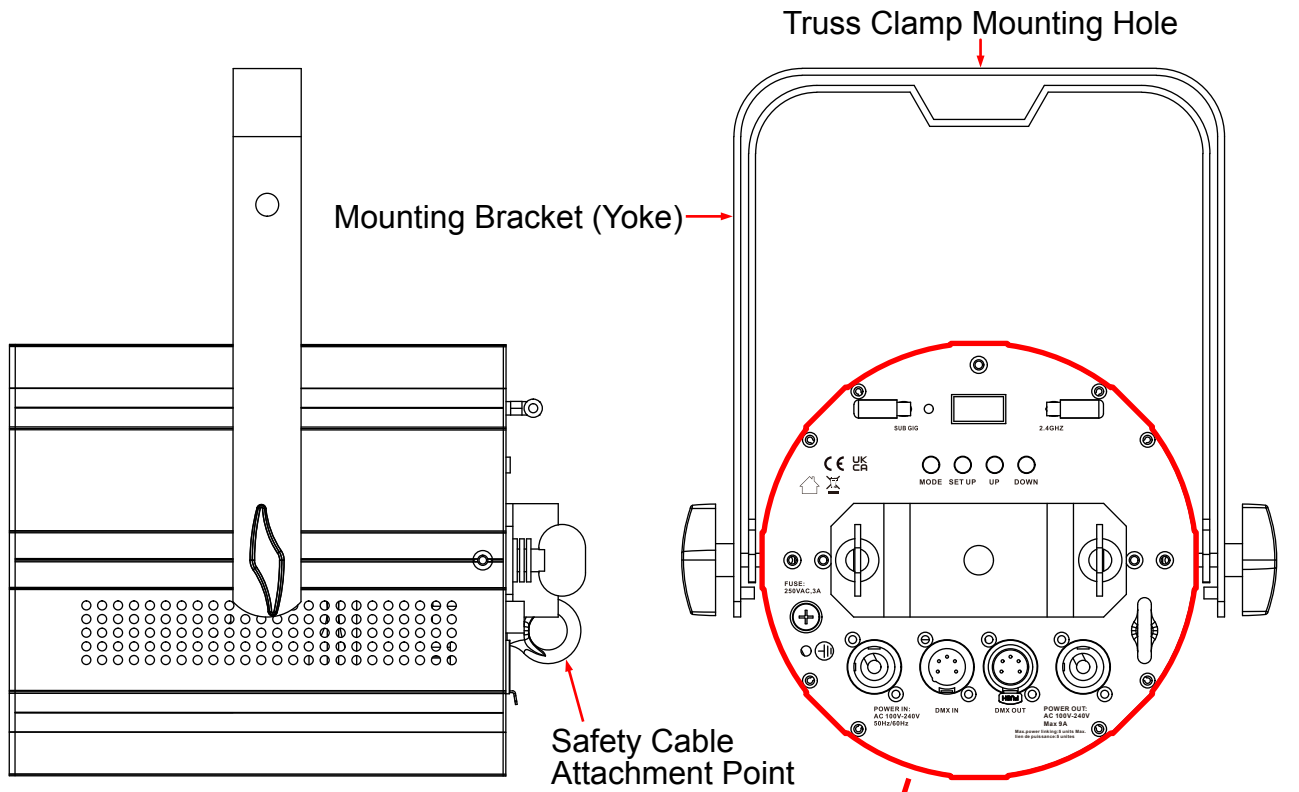

INSTALLATION INSTRUCTIONS



DO NOT INSTALL THE FIXTURE IF YOU ARE NOT QUALIFIED TO DO SO!

Fixture **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.

When installing the unit, the trussing or area of installation must be able to hold 10 times the weight of the unit and any attached accessories without any deformation. The unit must be secured with a secondary safety attachment, e.g. an appropriately-rated safety cable.

Before rigging/mounting a single fixture to any metal truss/structure or placing the fixture(s) on any surface, a professional equipment installer **MUST** be consulted to determine if the metal truss/structure or surface is properly certified to safely hold the combined weight of the fixture(s), clamps, cables, and accessories.

Ambient operating temperature range is **-4°F to 104°F (-20°C to 40°C)**. Do not operate this device when ambient temperature falls outside this range.

Fixture(s) should be installed away from walking paths, seating areas, or areas where unauthorized personnel might reach the fixture by hand.

NEVER stand directly below the fixture(s) when rigging, removing, or servicing.

Overhead fixture installation must always be secured with a secondary safety attachment, such as an appropriately rated safety cable that can hold 10 times the weight of the fixture.

Overhead mounting requires extensive experience, including calculating working load limits, knowledge of installation material being used, and periodic safety inspection of all installation material as well as the unit itself. If you lack these qualifications, do not attempt the installation yourself.

The installation should be checked by a skilled person once a year.

It is strongly recommended to power the fixture down completely when not in use. Doing so will reduce wear on the fixture due to sustained or extended operational periods, thereby maximizing the fixture's operational lifespan.

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.


The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 2.32 m is not expected.

INSTALLATION GUIDELINES

RIGGING

Overhead rigging requires extensive experience, including among others, calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

This fixture is designed to be mounted vertically (hanging or upright), or horizontally (perpendicular to vertical axis) only.

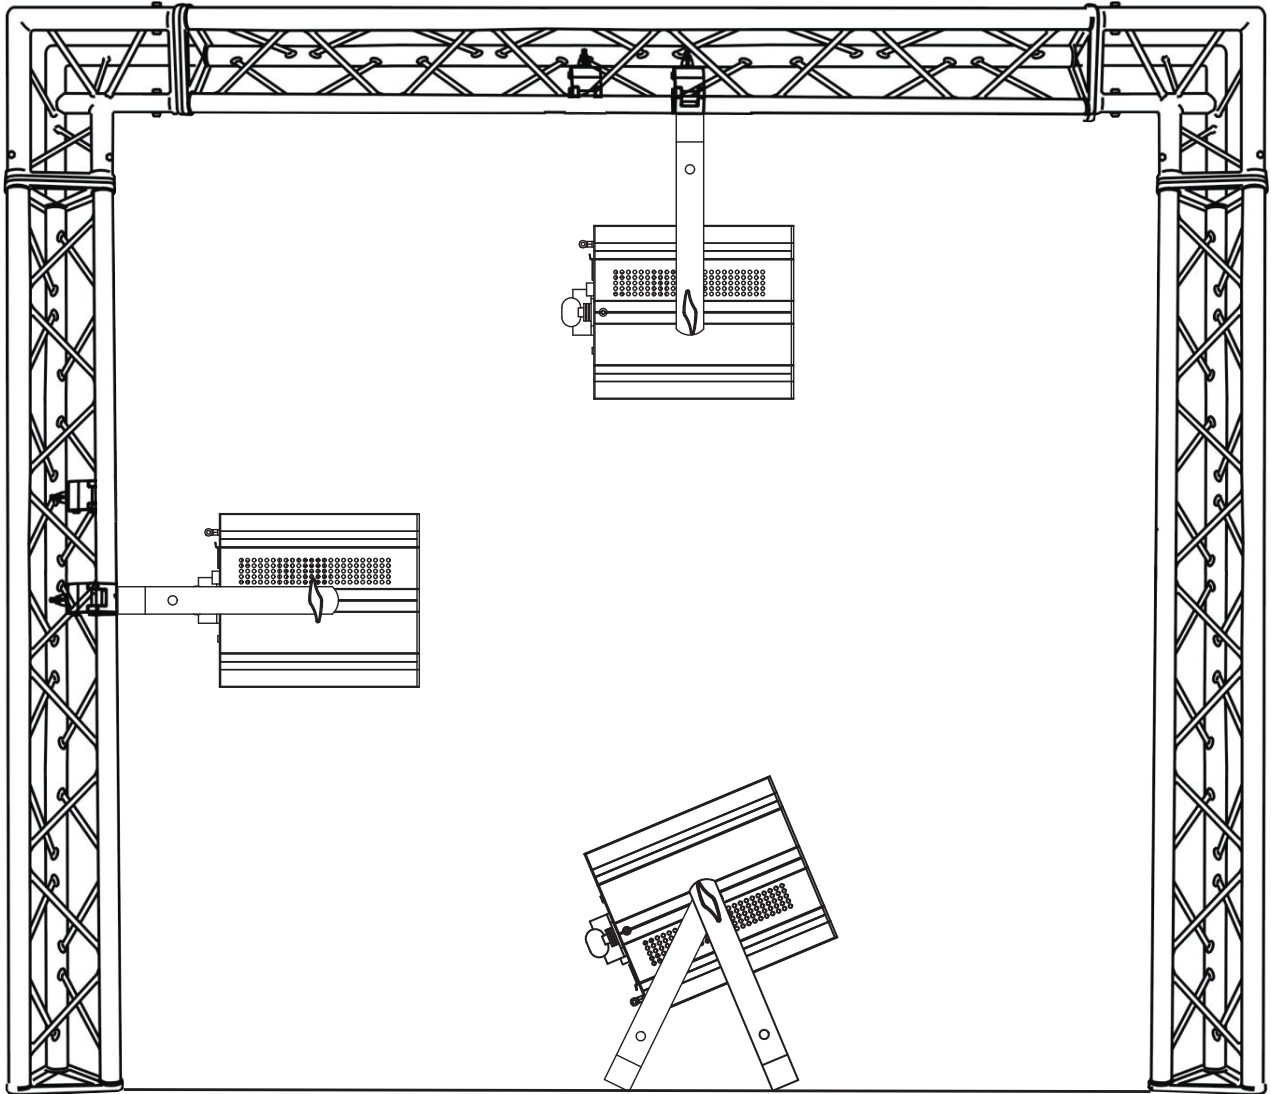

FALLING FIXTURES CAN CAUSE SEVERE INJURY OR SERIOUS EQUIPMENT DAMAGE! FOR THIS REASON, FIXTURES SHOULD BE INSTALLED AND INSPECTED ONLY BY QUALIFIED PERSONNEL. DO NOT INSTALL THE UNIT IF YOU LACK THE QUALIFICATIONS TO DO SO, OR IF YOU HAVE DOUBTS ABOUT THE SAFETY AND SECURITY OF THE INSTALLATION SETUP OR LOCATION!



ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THE FIXTURE WILL NOT FALL IF THE CLAMP FAILS.


INSTALLATION GUIDELINES

POTENTIAL INTERNAL FIXTURE DAMAGE FROM EXTERNAL SOURCES OF LIGHT BEAMS

External sources of light beams from direct sunlight, lighting and moving head fixtures, and lasers, which are focused directly towards the exterior housing and/or penetrate the front lens opening of Elation lighting fixtures, can cause severe internal damage including burning of optics, dichroic color filters, glass and metal gobos, prisms, animation wheels, frost filters, iris, shutters, motors, belts, wiring, discharge lamps, and LEDs.

This issue is not specific only to Elation lighting fixtures, but rather it is a common issue with lighting fixtures from all manufacturers. Although there is no true way to fully prevent this issue from happening, the guidelines below can reduce the risk of potential damage. Contact Elation Service for more details.


DO NOT EXPOSE THE FIXTURE AND/OR FRONT LENS OPENING TO LIGHT BEAMS FROM DIRECT SUNLIGHT, OTHER LIGHTING OR MOVING HEAD FIXTURES, AND LASERS DURING UNPACKING, INSTALLATION, USE, AND EXTENDED IDLE TIMES OUTDOORS. DO NOT FOCUS A LIGHT BEAM FROM ONE LIGHTING FIXTURE DIRECTLY TOWARDS ANOTHER.

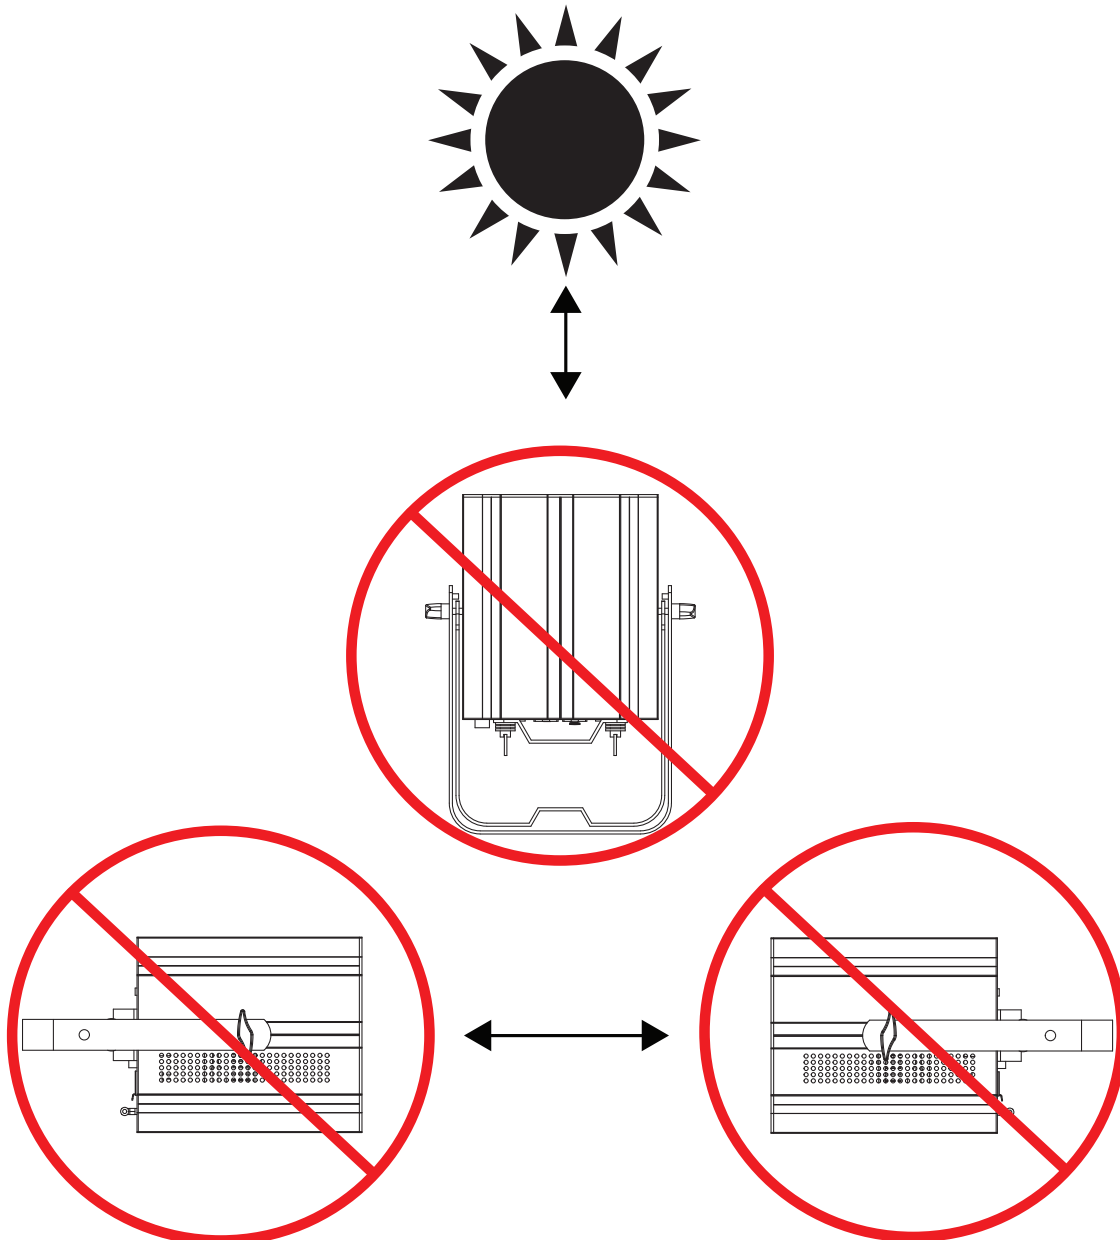

INSTALLATION GUIDELINES

CLAMP INSTALLATION - MOUNTING BRACKET

This fixture features an attachment point for a mounting clamp at the top of the mounting bracket. Align the hole in the mounting clamp with the hole in the mounting bracket, insert a bolt of the proper size through bolt the clamp and bracket, and secure in place with a matching nut and washer. Attach a separate SAFETY CABLE of the appropriate weight rating by looping the cable around the mounting bracket, and securing the other end of the cable to a suitable anchoring point.

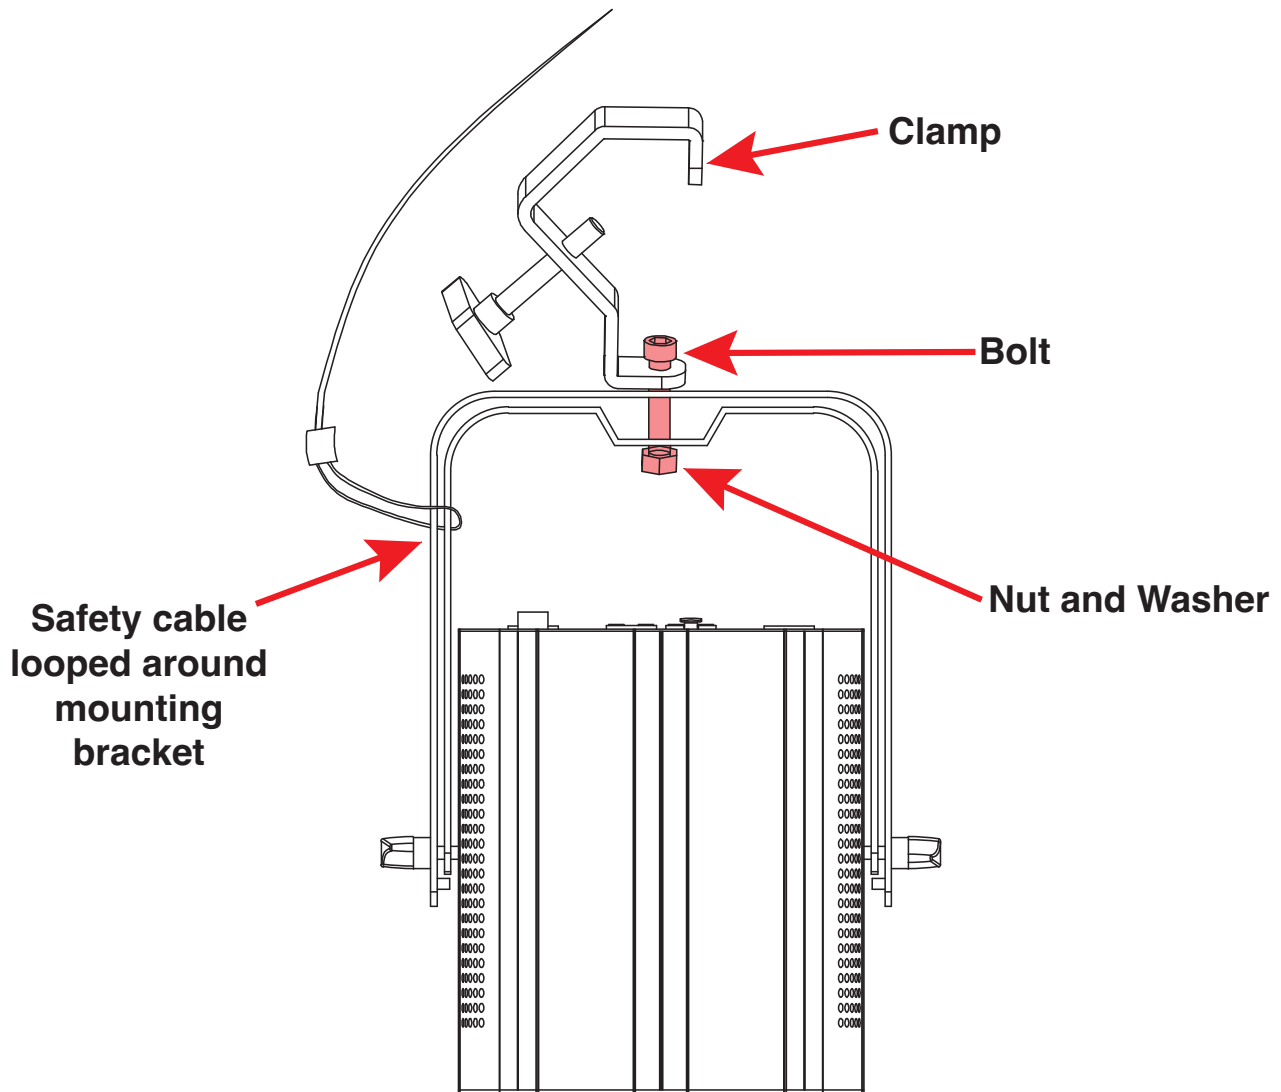


SAFETY CABLE:

ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THAT THE FIXTURE WILL NOT FALL IF THE CLAMPS FAIL.

INSTALLATION GUIDELINES

CLAMP INSTALLATION - OMEGA BRACKET

This fixture features an attachment point for an Omega bracket located near the control panel. Align the hole in the mounting clamp with the hole in the Omega bracket, insert a bolt of the proper size through bolt the clamp and bracket, and secure in place with a matching nut. Attach the entire clamp and bracket assembly to the fixture by inserting the twist-lock fasteners into the Omega bracket mounting holes on the fixture, then turn the twist locks to secure in place. Attach a separate SAFETY CABLE of the appropriate weight rating by looping the cable around the mounting bracket, and securing the other end of the cable to a suitable anchoring point.

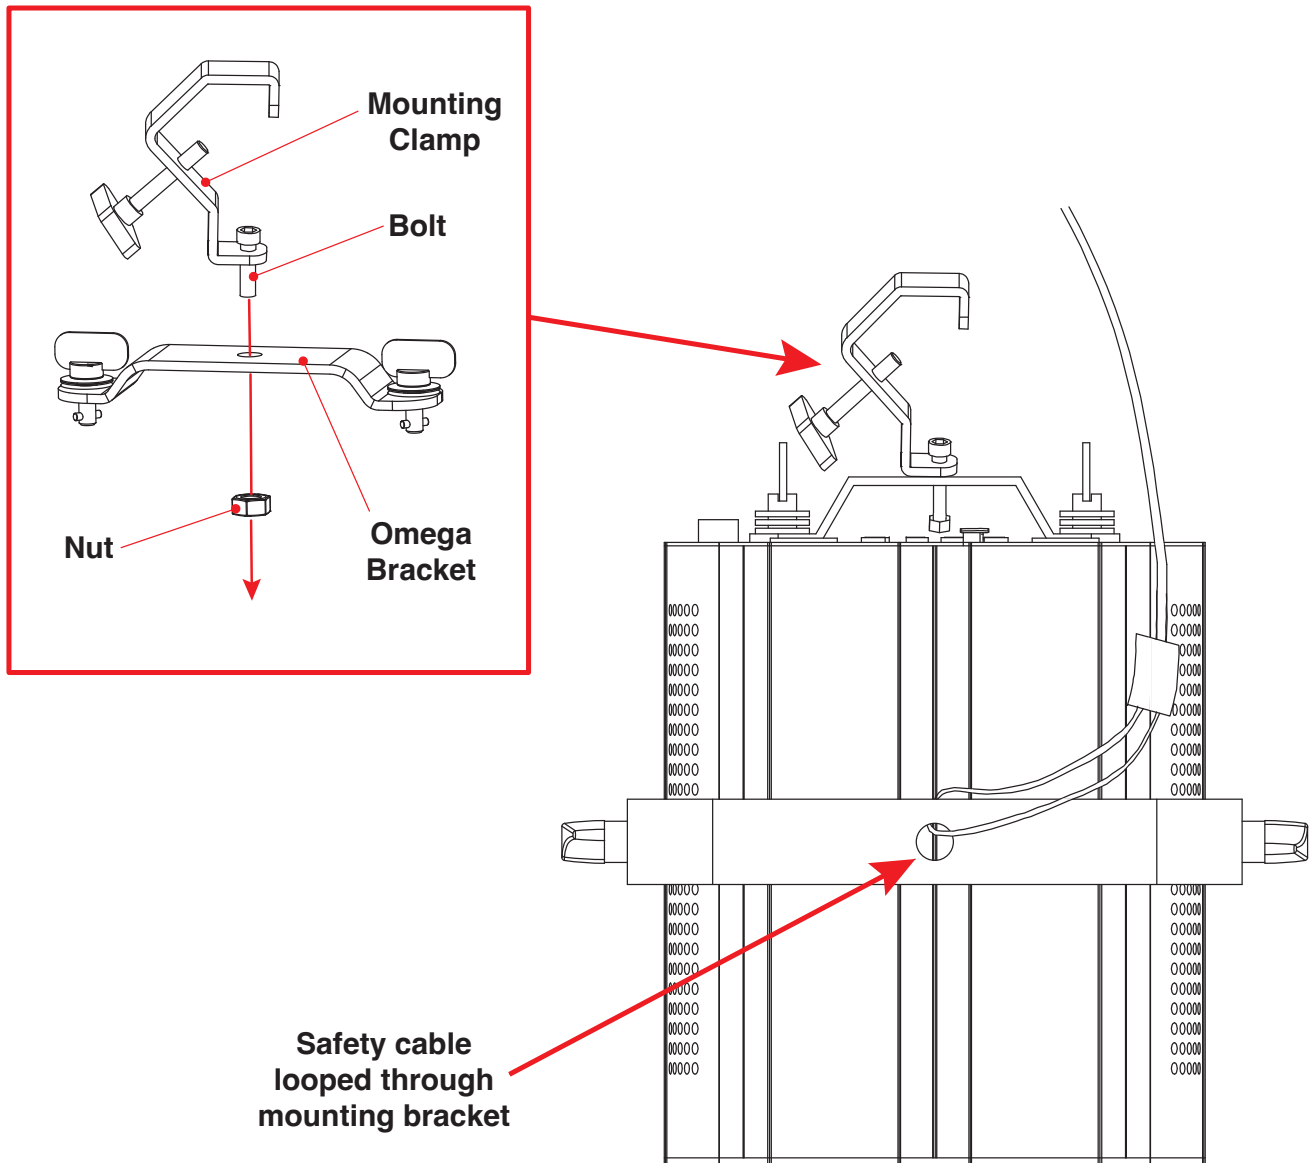

SAFETY CABLE:




ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THAT THE FIXTURE WILL NOT FALL IF THE CLAMPS FAIL.

INSTALLATION GUIDELINES

STAND MOUNTING

This unit can also be installed atop a tripod stand. Simply secure the Omega bracket to the bottom face of the device, then insert the threaded bolt on the top of the tripod stand through the hole in the Omega bracket. Tighten the nut onto the threaded bolt to secure the mounted device in place.

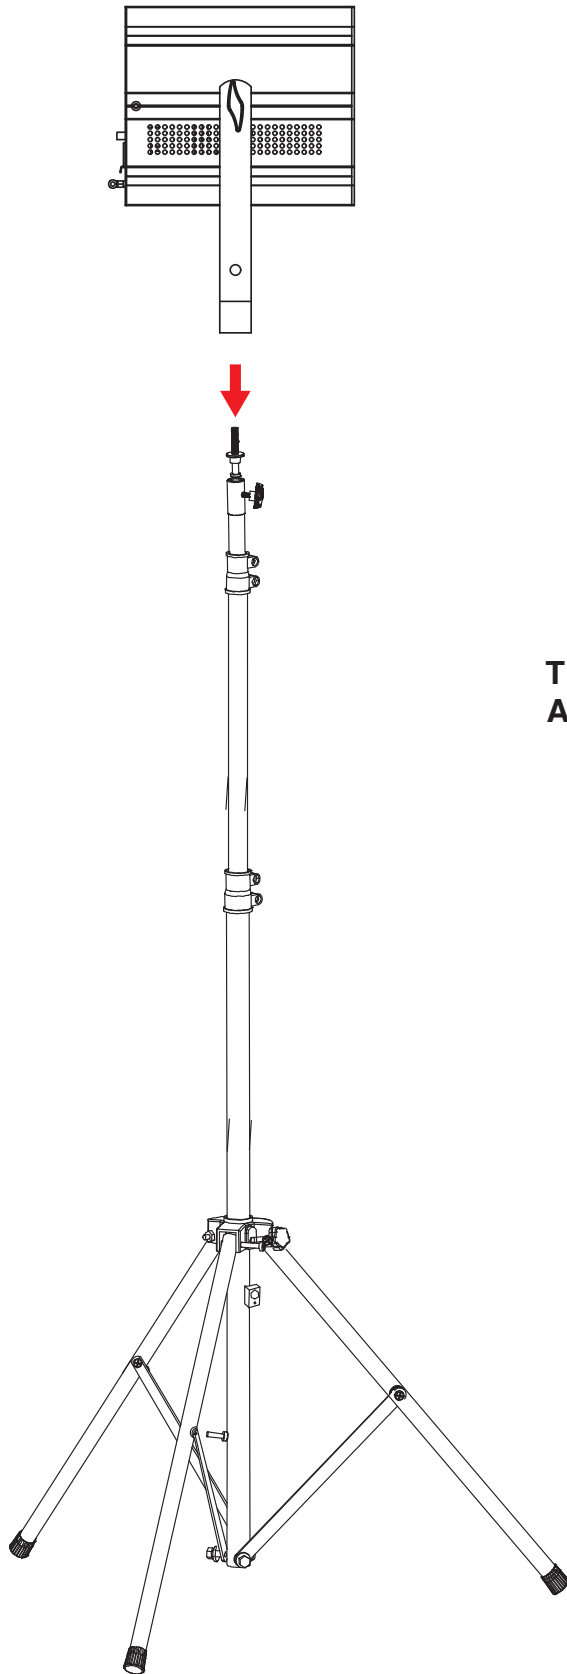

CAUTION!


MAKE SURE THAT THE TRIPOD LEGS AND ALL TELESCOPING ELEMENTS OF THE TRIPOD STAND ARE LOCKED IN PLACE BEFORE INSTALLING THE DEVICE ATOP THE STAND!

**POSITION THE TRIPOD STAND AND MOUNTED DEVICE ONLY ON FLAT, STABLE SURFACES!
DEPLOY TRIPOD LEGS FULLY IN ORDER TO MAXIMIZE STABILITY!**

ACCESSORY INSTALLATION

LENSES


Two interchangeable lenses (40-degree and 50-degree) are included with this fixture. To change lenses, carefully remove the retainer clip from the inside of the lens frame, being careful not to scratch or otherwise damage the lens that is fitted. Remove the lens and replace with the new lens, and install the retainer clip to secure in place.

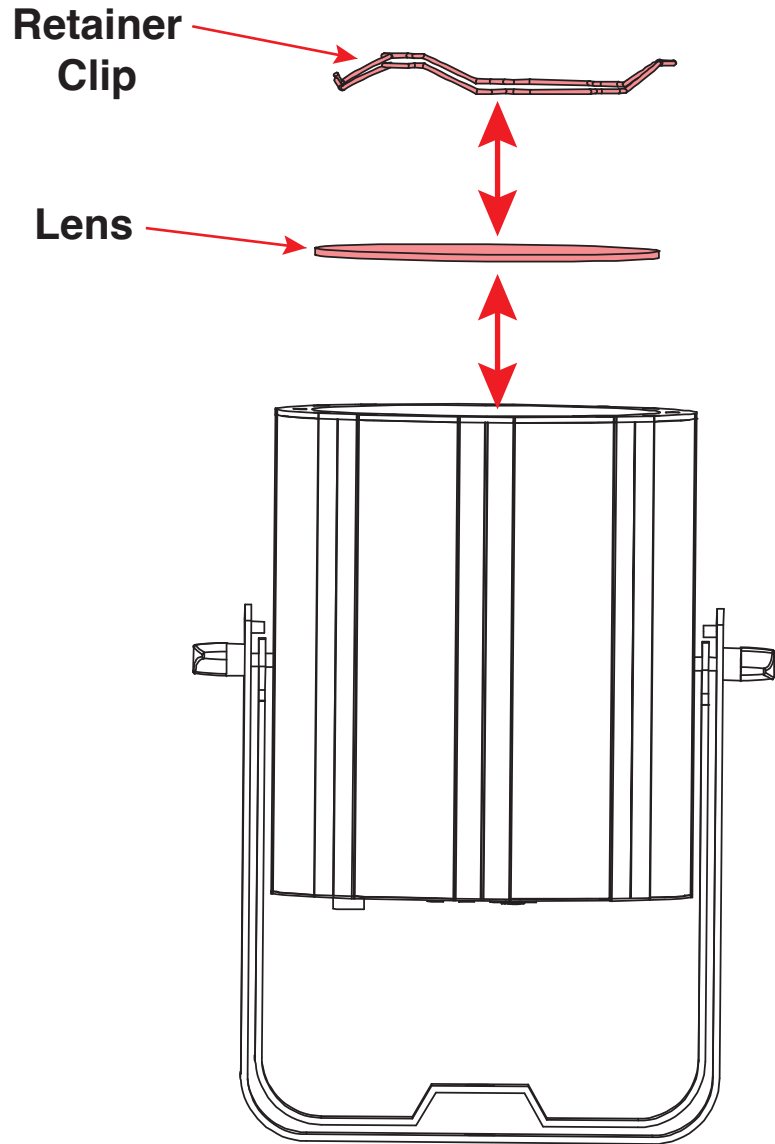

ACCESSORY INSTALLATION

Barndoors

This fixture can be fitted with an optional barndoor assembly. To install this accessory, align the three (3) mounting holes on the base of the barndoor assembly with matching mounting holes on the fixture's lens frame. Insert the fasteners and tighten to secure the barndoor assembly in place.

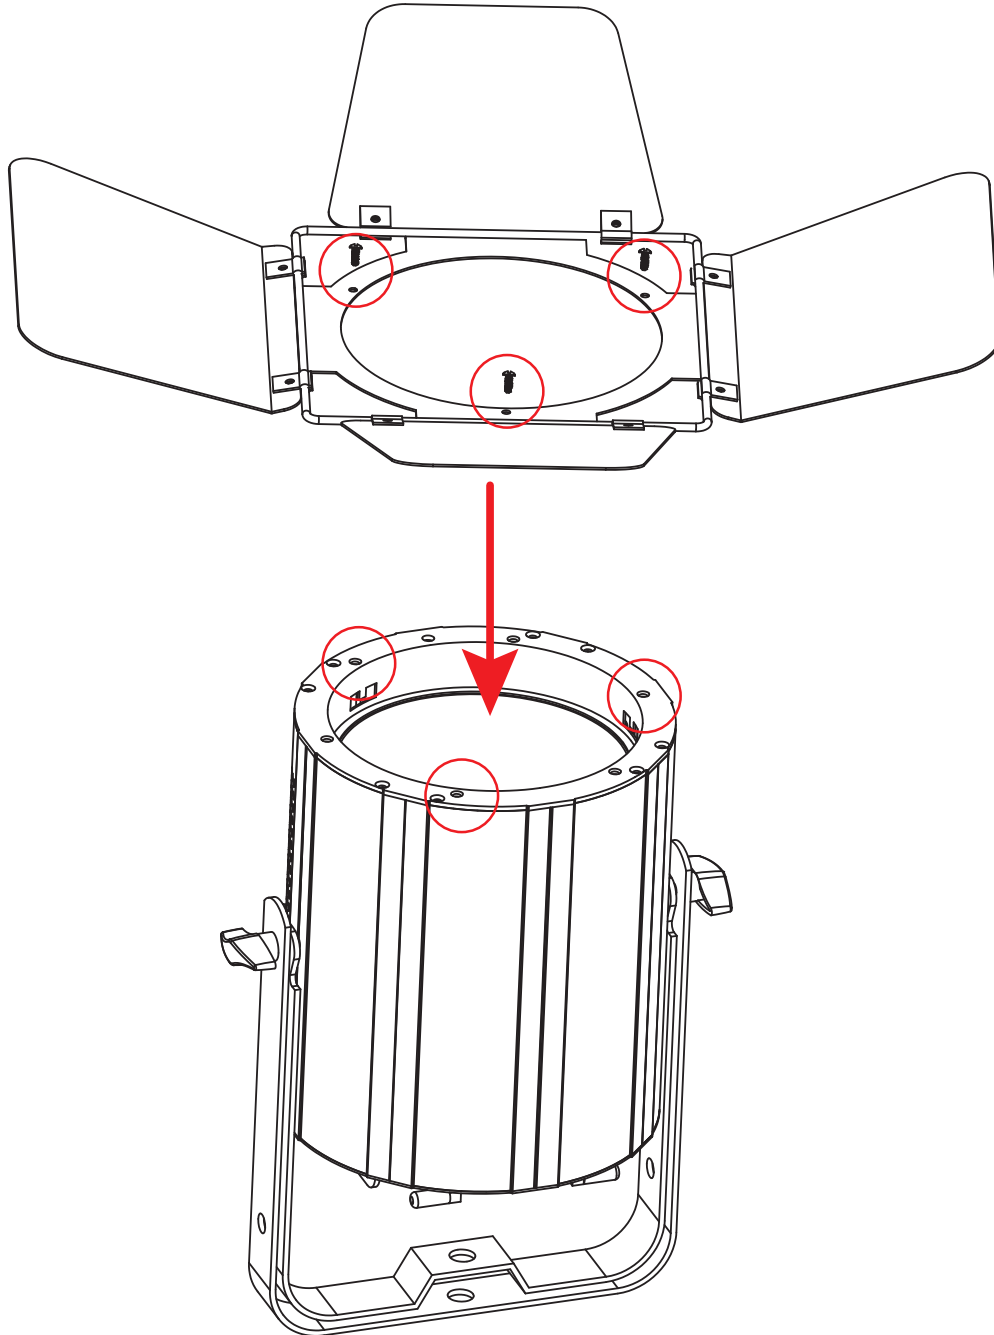

ARIA SETUP

2GHZ Versus Sub-Gig (GHz) Frequencies:

Sub-GHz frequencies provide superior reliability and range compared to higher frequencies, making them perfect for consistent communication across vast distances or in difficult conditions. Devices operating in the sub-GHz range, which refers to frequencies below 1 GHz, can transmit signals over significant distances and can penetrate physical barriers such as walls and buildings more effectively. Additionally, these frequencies experience less interference compared to those in the heavily congested 2.4-GHz band, which is commonly used by wireless devices.

If an application demands high data rates and more bandwidth in urban or densely populated areas where interference management is feasible, the 2.4 GHz frequency is a suitable choice. On the other hand, for applications requiring long-range communication and better obstacle penetration, particularly in rural or industrial settings with fewer regulatory constraints, a sub-GHz frequency (<1 GHz) is a better option.


Installation Recommendations:

With the many factors that affect and/or interrupt a wireless signal such as walls, glass, metal, objects, and people, it is highly recommended to:

- Install devices a minimum of 9.8 ft. (3m) above audiences and/or ground level where practical.
- Adjust the wireless antenna in a vertical upright position
- Position devices in direct line of sight of the controlling device

Careful planning and testing of the selected installation location is critical to ensure optimum and reliable wireless operation.

**9.8 ft (3m)
Above Ground**

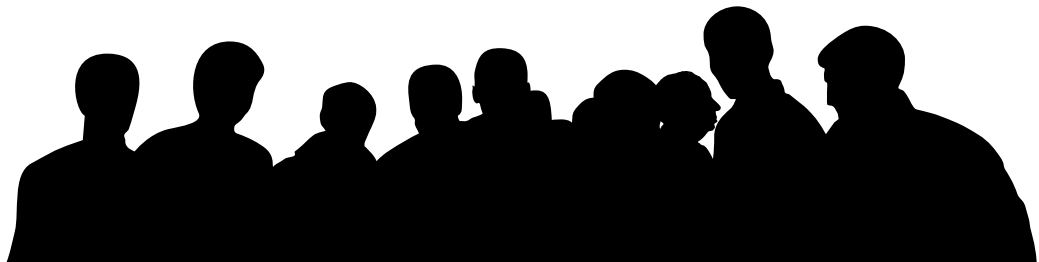


By default, Aria functionality is switched Off. To access this fixture's Aria capabilities, use the system menu to navigate to **Personality > Aria > Aria Enable**, and toggle this setting to ON. Aria functionality should now be enabled.

SYSTEM MENU

The fixture includes an easy to navigate system menu control panel display where all necessary settings and adjustments are made.

- **MODE:** Scroll through main menu options.
- **UP:** Scroll up in currently displayed menu.
- **DOWN:** Scroll down in currently displayed menu.
- **SETUP:** Select an option or confirm a selection.

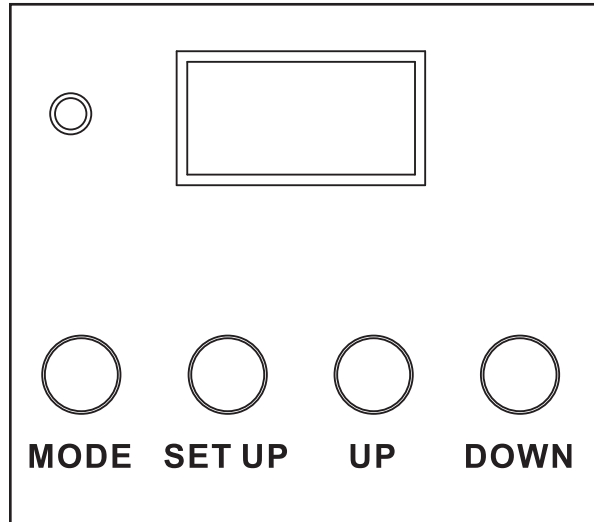

SCREEN LOCK

This fixture includes a display lock feature which automatically shuts off the display screen after a certain period of inactivity. This feature is OFF by default, which means that the display will always remain on regardless of inactivity, but can be configured to kick in after up to 10 minutes of inactivity. This setting can be configured by using the system menu to navigate to Personality > Display > Lock. To unlock the controls, press and hold the MODE button until the controls unlock.


SYSTEM MENU

| MAIN MENU | OPTIONS/VALUES (default values in bold) | | | |
|--------------------|---|---|---------------------------|-----------|
| DMX Set | Address | 001 - 512 | | |
| | Ch Mode | 5ch, 8ch-A, 8ch-B, 10ch-A , 10ch-B, 12ch, 13ch, 16ch, 20ch | | |
| | No DMX | Hold , Blackout, Manual, Int Prog | | |
| Personality | Primary/Secondary | Primary / Secondary | | |
| | Signal | DMX or Aria | | |
| | | Aria In/DMX Out | On / Off | |
| | Aria | Aria Enable | On / Off | |
| | | Frequency | 2.4 Ghz | |
| | | | Sub Gig US | |
| | | | Sub Gig EU | |
| | | 2.4 Ghz CH | 00 - 15 | |
| | | Sub Gig CH | 00 - 09 | |
| | | Mesh | On / Off | |
| | Bluetooth Enable | On / Off | | |
| | RDM | On / Off | | |
| | Dim Mode | Standard , Stage, TV, Archi, Theatre, Stage 2 | | |
| | | Dim Speed | 0.1s - 10s | |
| | Dim Curve | Linear, Square , Inv Squa, S Curve | | |
| | LED Rfrsh | 900, 1000, 1100, 1200 , 1300, 1400, 1500, 2500, 4000, 5000, 10k, 15k, 20k, 25k | | |
| | IR Function | On / Off | | |
| | IR Button Colors | Button 0 | Red | 000 - 255 |
| | | | Green | 000 - 255 |
| | | | Blue | 000 - 255 |
| | | | Amber | 000 - 255 |
| | | | Lime | 000 - 255 |
| | | Button 1 | Red | 000 - 255 |
| | | | Green | 000 - 255 |
| | | | Blue | 000 - 255 |
| | | | Amber | 000 - 255 |
| | | | Lime | 000 - 255 |
| | | ... | ... | ... |
| Button 15 | | Red | 000 - 255 | |
| | | Green | 000 - 255 | |
| | | Blue | 000 - 255 | |
| | | Amber | 000 - 255 | |
| | | Lime | 000 - 255 | |
| Display | | Save Dlay | 1 - 10 | |
| | | Lock | Off , 1min - 10min | |
| | | Rotate Display 180° | Yes | |
| | | | No | |
| | Auto | | | |
| Rotate | dISP / dSIP | | | |
| Temperature Unit | °C / °F (°C is default for EU , °F is default for US) | | | |
| Service | Passcode = 050 | Calibrate | Red 000 - 255 | |
| | | | Green 000 - 255 | |
| | | | Blue 000 - 255 | |
| | | | Amber 000 - 255 | |
| | | | Lime 000 - 255 | |
| | | DMX LED | Enable / Disable | |
| Restore | Yes / No | | | |





SYSTEM MENU

| MAIN MENU | OPTIONS/VALUES (default values in bold) | | | |
|-----------------|---|--|------------------------|----------------|
| Manual | Red | 000 - 255 | | |
| | Green | 000 - 255 | | |
| | Blue | 000 - 255 | | |
| | Amber | 000 - 255 | | |
| | Lime | 000 - 255 | | |
| | Clr Macro | 000 - 255 | | |
| | Clr Temp | 000 - 255 | | |
| | Clr Temp Pr | Off , 2300k, 2400k, 2500k...9900k | | |
| | Shutter | 000 - 255 | | |
| | Dimmer | 000 - 255 | | |
| | Internal Programs | Off , Prog 0, Prog 1...Prog 13 | | |
| | Internal Program Speed | 000 - 255 (default = 127) | | |
| | Internal Program Fade | 000 - 255 | | |
| | Int Progs | Prog 0 | Speed | 000 - 255 |
| Fade | | | 000 - 255 | |
| Sound | | | On / Off | |
| Prog 1 | | Speed | 000 - 255 | |
| | | Fade | 000 - 255 | |
| | | Sound | On / Off | |
| ... | | ... | ... | |
| Prog 13 | | Speed | 000 - 255 | |
| | | Fade | 000 - 255 | |
| | | Sound | On / Off | |
| Info | | Hours | Pwr On Hr 1 | xxxxxx Hrs |
| | | | Pwr On Hr 2 | xxxxxx Hrs |
| | Pwr On Rst | | Passcode = 050 | |
| | Temp | xxx° | xxx F / xxx C | |
| | | Max Temp 1 | xxx F / xxx C | |
| | | Max Temp 2 | xxx F / xxx C | |
| | | Temp Rst | Yes / No | Passcode = 050 |
| | DMX Value | Red | | |
| | | Green | | |
| | | ... | | |
| | | Auto Prog | | |
| | RDM UID | xxxxxx | | |
| | Error Logs | Fixture Errors | List errors one by one | |
| Reset Error Log | | Yes / No | Passcode = 050 | |
| Soft Vers | x.xx | | | |

DIMMER MODES AND CURVES

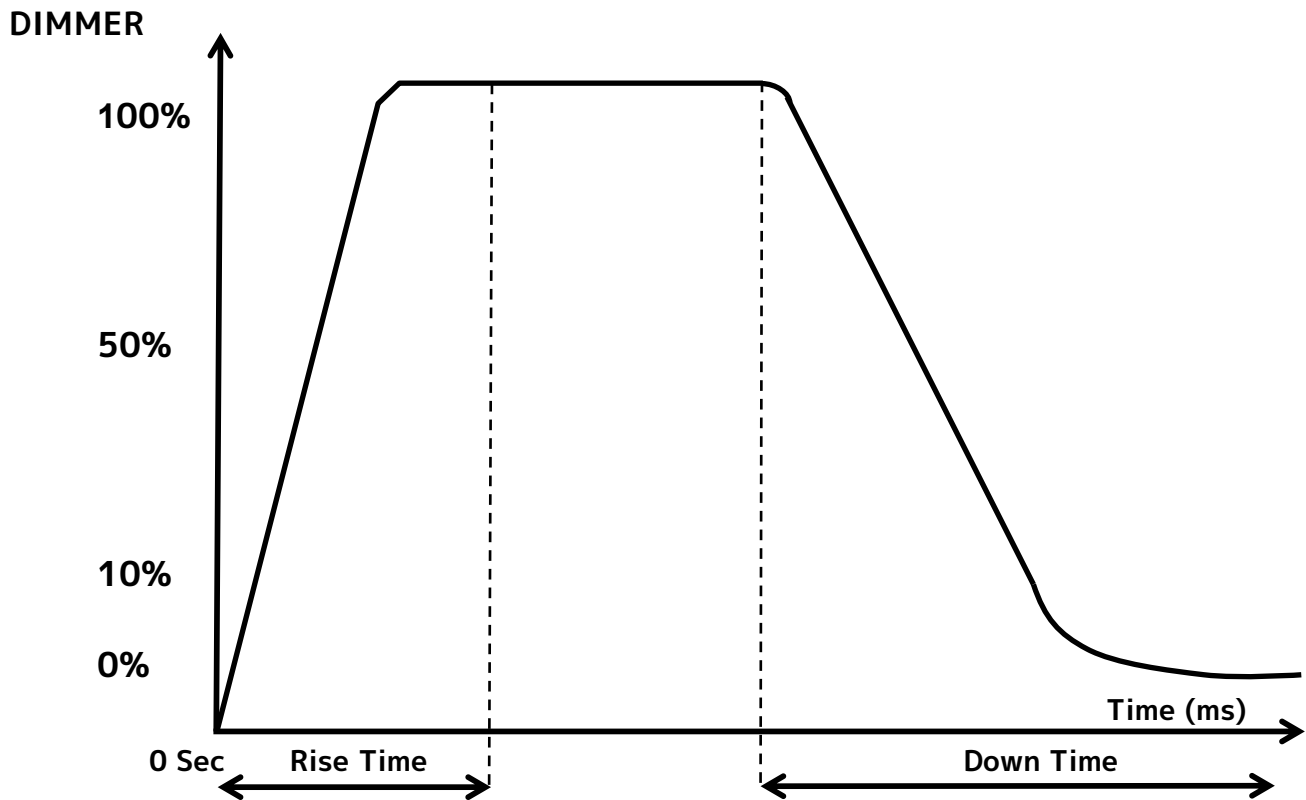

| Dimming Curve Ramp Effect | 0 sec Fade Time | | 1 sec Fade Time | |
|------------------------------|-----------------|----------------|-----------------|----------------|
| | Rise Time (ms) | Down Time (ms) | Rise Time (ms) | Down Time (ms) |
| Standard (default) | 0 | 0 | 0 | 0 |
| Stage | 780 | 1100 | 1540 | 1660 |
| TV | 1180 | 1520 | 1860 | 1940 |
| Architectural | 1380 | 1730 | 2040 | 2120 |
| Theatre | 1580 | 1940 | 2230 | 2280 |
| Stage 2 | 0 | 1100 | 0 | 1660 |

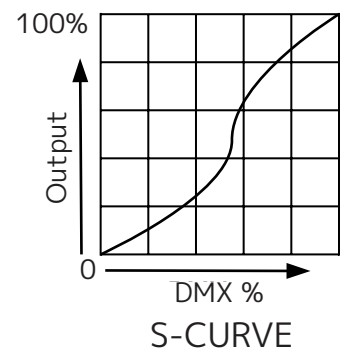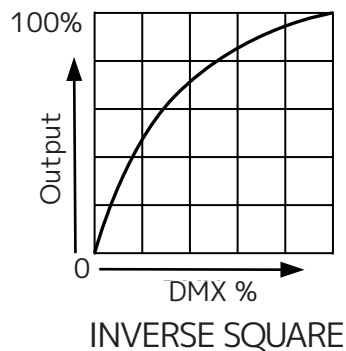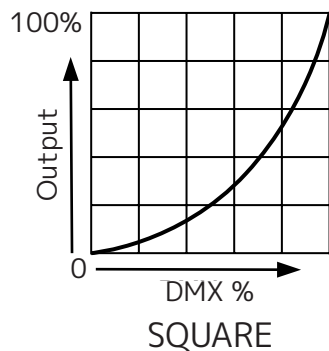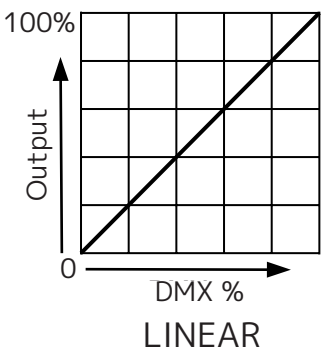



DMX SETUP

DMX-512: DMX is short for Digital Multiplex. This is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA “IN” and DATA “OUT” XLR terminals located on all DMX fixtures (most controllers only have a DATA “OUT” terminal).

DMX Linking: DMX is a language allowing all makes and models of different manufacturers to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, try to use the shortest cable path possible when using several DMX fixtures. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example, a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line: at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

Data Cable (DMX Cable) Requirements (For DMX Operation): This device can be controlled via DMX-512 protocol, and features multiple DMX channel modes. Your unit and your DMX controller require a 5-pin XLR connector for data input and data output. If you are making your own cables, be sure to use standard 110-120 Ohm shielded cable (This cable may be purchased at almost all pro lighting stores). Your cables should be made with a male XLR connector at one end and a female XLR connector on the other. Also remember that DMX cable must be daisy chained and cannot be split.

Special Note: Line Termination. When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 110-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator (ADJ part number Z-DMX/T) will decrease the chances of erratic behavior.

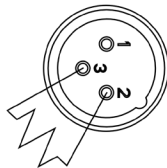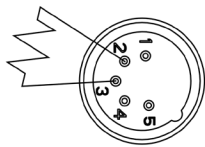

A DMX512 terminator reduces signal errors, avoiding most signal reflection interference. Connect PIN 2 (DMX-) and PIN 3 (DMX+) of the last fixture in series with a 120 Ohm, 1/4 W Resistor to terminate the DMX512.

DMX SETUP

DMX ADDRESSING

All fixtures should be given a DMX starting address when operating with a DMX controller, in order to ensure that the correct fixture responds to the correct control signal. This digital starting address is the channel number from which the fixture starts to “listen” to the digital control signal sent out from the DMX controller. The assignment of this starting DMX address is achieved by setting the correct DMX address on the digital control display on the fixture.

You can set the same starting address for all fixtures or a group of fixtures, or set different addresses for each individual fixture. Setting all fixtures to the same DMX address will cause all fixtures to react in the same way. In this case, please note that changing the settings of one channel will affect all the fixtures simultaneously.

If you set each fixture to a different DMX address, each unit will “listen” starting at the channel number you have set, based on the quantity of DMX channels of each fixture. That means changing the settings of one channel will only affect the selected fixture.

As an example, when operating this device in 5 channel mode, you should set the starting DMX address of the first unit to 1, the second unit to 6 (1 + 5), the third unit to 11 (1 + 5 + 5), and so on. (See the chart below for more details.)

| Channel Mode | Unit 1 Address | Unit 2 Address | Unit 3 Address | Unit 4 Address |
|----------------|----------------|----------------|----------------|----------------|
| 5 Channels | 1 | 6 | 11 | 16 |
| 8A/B Channels | 1 | 9 | 17 | 25 |
| 9 Channels | 1 | 10 | 19 | 28 |
| 10A/B Channels | 1 | 11 | 21 | 31 |
| 12 Channels | 1 | 13 | 25 | 37 |
| 13 Channels | 1 | 14 | 27 | 40 |
| 16 Channels | 1 | 17 | 33 | 49 |
| 20 Channels | 1 | 21 | 41 | 61 |

DMX TRAITS

| CHANNEL | | | | | | | | | | DMX VALUES | FUNCTION |
|---------|-------|-------|------|--------|--------|-------|-------|-------|-------|------------|--|
| 5 CH | 8A CH | 8B CH | 9 CH | 10A CH | 10B CH | 12 CH | 13 CH | 16 CH | 20 CH | | |
| 1 | 1 | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | Red |
| | | | | | | | | | | 0-255 | 0 - 100% |
| | | | | 2 | | | | | 2 | | Red Fine |
| | | | | | | | | | | 0-255 | Red fine adjustment, 16 bit |
| 2 | 2 | | 2 | 3 | 2 | 2 | 2 | 2 | 3 | | Green |
| | | | | | | | | | | 0-255 | 0 - 100% |
| | | | | 4 | | | | | 4 | | Green Fine |
| | | | | | | | | | | 0-255 | Green fine adjustment, 16 bit |
| 3 | 3 | | 3 | 5 | 3 | 3 | 3 | 3 | 5 | | Blue |
| | | | | | | | | | | 0-255 | 0 - 100% |
| | | | | 6 | | | | | 6 | | Blue Fine |
| | | | | | | | | | | 0-255 | Blue fine adjustment, 16 bit |
| 4 | 4 | | 4 | 7 | 4 | 4 | 4 | 4 | 7 | | Amber |
| | | | | | | | | | | 0-255 | 0 - 100% |
| | | | | 8 | | | | | 8 | | Amber Fine |
| | | | | | | | | | | 0-255 | Amber fine adjustment, 16 bit |
| 5 | 5 | | 5 | 9 | 5 | 5 | 5 | 5 | 9 | | Lime |
| | | | | | | | | | | 0-255 | 0 - 100% |
| | | | | 10 | | | | | 10 | | Lime Fine |
| | | | | | | | | | | 0-255 | Lime fine adjustment, 16 bit |
| | | 1 | | | 6 | 6 | 6 | 6 | 11 | | Color Macros |
| | | | | | | | | | | 0-255 | Refer to Color Macros section of this manual |
| | | 2 | 6 | | 7 | | 7 | 7 | 12 | | Color Temperature |
| | | | | | | | | | | 0-255 | 2300K - 9900K Linear |
| | | | | | | | | | | | Shutter, Strobe |
| | | | | | | | | | | 0-31 | LEDs Off |
| | | | | | | | | | | 32-63 | LEDs On |
| | | | | | | | | | | 64-95 | Strobe effect, slow to fast |
| | 6 | 3 | 7 | | 8 | 7 | 8 | 8 | 13 | 96-127 | LEDs On |
| | | | | | | | | | | 128-159 | Pulse effect in sequences |
| | | | | | | | | | | 160-191 | LEDs On |
| | | | | | | | | | | 192-223 | Random strobe effect, slow to fast |
| | | | | | | | | | | 224-255 | LEDs On |
| | 7 | 4 | 8 | | 9 | 8 | 9 | 9 | 14 | | Dimmer Intensity |
| | | | | | | | | | | 0-255 | Intensity 0 - 100% |
| | 8 | 5 | 9 | | 10 | 9 | 10 | 10 | | | Dimmer Fine |
| | | | | | | | | | | 0-255 | Dimmer fine adjustment, 16 bit |

DMX TRAITS

| CHANNEL | | | | | | | | | | DMX VALUES | FUNCTION |
|---------|-------|-------|------|--------|--------|-------|-------|-------|-------|------------|----------------------------|
| 5 CH | 8A CH | 8B CH | 9 CH | 10A CH | 10B CH | 12 CH | 13 CH | 16 CH | 20 CH | | |
| | | | | | | 10 | | 11 | 15 | | Auto Programs |
| | | | | | | | | | | 0-10 | Off |
| | | | | | | | | | | 11-26 | Program 1 |
| | | | | | | | | | | 27-43 | Program 2 |
| | | | | | | | | | | 44-60 | Program 3 |
| | | | | | | | | | | 61-76 | Program 4 |
| | | | | | | | | | | 77-93 | Program 5 |
| | | | | | | | | | | 94-110 | Program 6 |
| | | | | | | | | | | 111-126 | Program 7 |
| | | | | | | | | | | 127-143 | Program 8 |
| | | | | | | | | | | 144-160 | Program 9 |
| | | | | | | | | | | 161-176 | Program 10 |
| | | | | | | | | | | 177-193 | Program 11 |
| | | | | | | | | | | 194-210 | Program 12 |
| | | | | | | | | | | 211-226 | Program 13 |
| | | | | | | | | | | 227-255 | No Function |
| | | | | | | 11 | | 12 | 16 | | Auto Programs Speed |
| | | | | | | | | | | 0-255 | Slow to fast |
| | | | | | | 12 | | 13 | 17 | | Auto Programs Fade |
| | | | | | | | | | | 0-255 | Least fade to most fade |
| | | 6 | | | | | 11 | 14 | 18 | | Dim Mode |
| | | | | | | | | | | 0-20 | Default to unit setting |
| | | | | | | | | | | 21-40 | Standard |
| | | | | | | | | | | 41-60 | Stage |
| | | | | | | | | | | 61-80 | TV |
| | | | | | | | | | | 81-100 | Architectural |
| | | | | | | | | | | 101-120 | Theatre |
| | | | | | | | | | | 121-140 | Stage 2 |
| | | | | | | | | | | | Dim Speed |
| | | | | | | | | | | 141 | 0.1 sec |
| | | | | | | | | | | 142 | 0.2 sec |
| | | | | | | | | | | 143 | 0.3 sec |
| | | | | | | | | | | 144 | 0.4 sec |
| | | | | | | | | | | 145 | 0.5 sec |
| | | | | | | | | | | 146 | 0.6 sec |
| | | | | | | | | | | 147 | 0.7 sec |
| | | | | | | | | | | 148 | 0.8 sec |
| | | | | | | | | | | 149 | 0.9 sec |
| | | | | | | | | | | 150 | 1.0 sec |
| | | | | | | | | | | 151 | 1.5 sec |
| | | | | | | | | | | 152 | 2.0 sec |
| | | | | | | | | | | 153 | 3.0 sec |
| | | | | | | | | | | 154 | 4.0 sec |
| | | | | | | | | | | 155 | 5.0 sec |
| | | | | | | | | | | 156 | 6.0 sec |
| | | | | | | | | | | 157 | 7.0 sec |
| | | | | | | | | | | 158 | 8.0 sec |
| | | | | | | | | | | 159 | 9.0 sec |
| | | | | | | | | | | 160 | 10.0 sec |
| | | | | | | | | | | 161-255 | Default to unit setting |

DMX TRAITS

| CHANNEL | | | | | | | | | | DMX VALUES | FUNCTION |
|---------|-------|-------|------|--------|--------|-------|-------|-------|-------|------------|-------------------------|
| 5 CH | 8A CH | 8B CH | 9 CH | 10A CH | 10B CH | 12 CH | 13 CH | 16 CH | 20 CH | | |
| | | 7 | | | | | 12 | 15 | 19 | | Dim Curves |
| | | | | | | | | | | 0-20 | Square |
| | | | | | | | | | | 21-40 | Linear |
| | | | | | | | | | | 41-60 | Inv Squa |
| | | | | | | | | | | 61-80 | S Curve |
| | | | | | | | | | | 81-255 | No Function |
| | | 8 | | | | | 13 | 16 | 20 | | Refresh Rate |
| | | | | | | | | | | 0-15 | Default to unit setting |
| | | | | | | | | | | 16-30 | 900 Hz |
| | | | | | | | | | | 31-45 | 1000 Hz |
| | | | | | | | | | | 46-60 | 1100 Hz |
| | | | | | | | | | | 61-75 | 1200 Hz |
| | | | | | | | | | | 76-90 | 1300 Hz |
| | | | | | | | | | | 91-105 | 1400 Hz |
| | | | | | | | | | | 106-120 | 1500 Hz |
| | | | | | | | | | | 121-135 | 2500 Hz |
| | | | | | | | | | | 136-150 | 4000 Hz |
| | | | | | | | | | | 151-165 | 5000 Hz |
| | | | | | | | | | | 166-180 | 10000 Hz |
| | | | | | | | | | | 181-195 | 15000 Hz |
| | | | | | | | | | | 196-210 | 20000 Hz |
| | | | | | | | | | | 211-225 | 25000 Hz |
| | | | | | | | | | | 226-255 | No Function |

COLOR TEMPERATURE

| DMX VALUE | COLOR TEMPERATURE (K) |
|-----------|-----------------------|
| 0-15 | No Function |
| 16-31 | 2300 |
| 32-47 | 2600 |
| 48-63 | 2800 |
| 64-79 | 3100 |
| 80-95 | 3400 |
| 96-111 | 3800 |
| 112-127 | 4100 |
| 128-143 | 4500 |
| 144-159 | 4900 |
| 160-175 | 5500 |
| 176-191 | 6000 |
| 192-207 | 7000 |
| 208-223 | 8000 |
| 224-239 | 9000 |
| 240-255 | 9900 |

COLOR MACRO CHART

| MACRO NO. | DMX VALUES | COLOR TEMP | RED | GREEN | BLUE | AMBER | LIME |
|-----------|------------|------------|-----|-------|------|-------|------|
| Off | 0 | - | 0 | 0 | 0 | 0 | 0 |
| 1 | 1 - 4 | - | 0 | 255 | 255 | 1 | 116 |
| 2 | 5 - 8 | - | 127 | 255 | 212 | 1 | 124 |
| 3 | 9 - 12 | - | 151 | 125 | 3 | 255 | 43 |
| 4 | 13 - 16 | - | 0 | 0 | 255 | 1 | 0 |
| 5 | 17 - 20 | - | 138 | 43 | 226 | 1 | 177 |
| 6 | 21 - 24 | - | 223 | 108 | 7 | 255 | 77 |
| 7 | 25 - 28 | - | 165 | 42 | 42 | 1 | 200 |
| 8 | 29 - 32 | - | 95 | 158 | 160 | 44 | 71 |
| 9 | 33 - 36 | - | 171 | 36 | 0 | 120 | 255 |
| 10 | 37 - 40 | - | 127 | 255 | 0 | 1 | 255 |
| 11 | 41 - 44 | - | 210 | 105 | 30 | 1 | 22 |
| 12 | 45 - 48 | - | 255 | 15 | 18 | 255 | 174 |
| 13 | 49 - 52 | - | 100 | 149 | 237 | 3 | 0 |
| 14 | 53 - 56 | - | 255 | 0 | 10 | 255 | 144 |
| 15 | 57 - 60 | - | 220 | 20 | 60 | 1 | 0 |
| 16 | 61 - 64 | - | 0 | 255 | 255 | 0 | 12 |
| 17 | 65 - 68 | - | 6 | 0 | 139 | 1 | 3 |
| 18 | 69 - 72 | - | 0 | 139 | 139 | 2 | 5 |
| 19 | 73 - 76 | - | 0 | 111 | 0 | 1 | 24 |
| 20 | 77 - 80 | - | 255 | 0 | 2 | 21 | 3 |
| 21 | 81 - 84 | - | 188 | 0 | 3 | 255 | 44 |
| 22 | 85 - 88 | - | 255 | 12 | 0 | 77 | 62 |
| 23 | 89 - 92 | - | 255 | 130 | 25 | 229 | 30 |
| 24 | 93 - 96 | - | 140 | 0 | 139 | 2 | 135 |
| 25 | 97 - 100 | - | 255 | 140 | 0 | 1 | 0 |
| 26 | 101 - 104 | - | 153 | 50 | 204 | 1 | 5 |
| 27 | 105 - 108 | - | 143 | 188 | 143 | 1 | 35 |
| 28 | 109 - 112 | - | 72 | 61 | 139 | 4 | 2 |
| 29 | 113 - 116 | - | 0 | 206 | 209 | 2 | 2 |
| 30 | 117 - 120 | - | 255 | 0 | 4 | 11 | 8 |
| 31 | 121 - 124 | - | 148 | 0 | 211 | 5 | 2 |
| 32 | 125 - 128 | - | 255 | 20 | 147 | 1 | 0 |
| 33 | 129 - 132 | - | 0 | 191 | 255 | 2 | 3 |
| 34 | 133 - 136 | - | 160 | 0 | 26 | 0 | 4 |
| 35 | 137 - 140 | - | 34 | 139 | 34 | 1 | 1 |
| 36 | 141 - 144 | - | 255 | 0 | 255 | 2 | 0 |
| 37 | 145 - 148 | - | 255 | 215 | 0 | 1 | 1 |
| 38 | 149 - 152 | - | 5 | 255 | 190 | 3 | 11 |
| 39 | 153 - 156 | - | 12 | 255 | 62 | 95 | 49 |
| 40 | 157 - 160 | - | 5 | 209 | 255 | 15 | 170 |
| 41 | 161 - 164 | - | 0 | 5 | 128 | 5 | 5 |
| 42 | 165 - 168 | - | 255 | 105 | 180 | 2 | 1 |

COLOR MACRO CHART

| MACRO NO. | DMX VALUES | COLOR TEMP | RED | GREEN | BLUE | AMBER | LIME |
|-----------|------------|----------------|-----|-------|------|-------|------|
| 43 | 169 - 172 | - | 7 | 255 | 25 | 70 | 77 |
| 44 | 173 - 176 | - | 147 | 164 | 212 | 0 | 2 |
| 45 | 177 - 180 | - | 2 | 255 | 15 | 3 | 19 |
| 46 | 181 - 184 | - | 0 | 38 | 86 | 0 | 0 |
| 47 | 185 - 188 | - | 255 | 0 | 5 | 121 | 10 |
| 48 | 189 - 192 | - | 5 | 148 | 209 | 5 | 19 |
| 49 | 193 - 196 | | 1 | 255 | 62 | 93 | 44 |
| 50 | 197 - 200 | 2300K > 90 CRI | 150 | 4 | 4 | 255 | 255 |
| 51 | 201 - 204 | 2600K > 90 CRI | 140 | 15 | 8 | 255 | 255 |
| 52 | 205 - 208 | 2800K > 90 CRI | 130 | 25 | 10 | 255 | 255 |
| 53 | 209 - 212 | 3100K > 90 CRI | 110 | 30 | 15 | 255 | 255 |
| 54 | 213 - 216 | 3400K > 90 CRI | 100 | 50 | 20 | 255 | 255 |
| 55 | 217 - 220 | 7000K > 90 CRI | 75 | 110 | 70 | 255 | 255 |
| 56 | 221 - 224 | 8000K > 90 CRI | 75 | 125 | 85 | 255 | 255 |
| 57 | 225 - 228 | 3800K > 90 CRI | 90 | 60 | 25 | 255 | 255 |
| 58 | 229 - 232 | 4100K > 90 CRI | 80 | 70 | 30 | 255 | 255 |
| 59 | 233 - 236 | 4500K > 90 CRI | 80 | 85 | 38 | 255 | 255 |
| 60 | 237 - 240 | 4900K > 90 CRI | 80 | 95 | 46 | 255 | 255 |
| 61 | 241 - 244 | 5500K > 90 CRI | 75 | 110 | 55 | 255 | 255 |
| 62 | 245 - 248 | 6000K > 90 CRI | 75 | 110 | 70 | 255 | 255 |
| 63 | 249 - 252 | 9000K > 90 CRI | 65 | 45 | 97 | 255 | 255 |
| 64 | 253 - 255 | 9900K > 90 CRI | 55 | 165 | 117 | 255 | 255 |

REMOTE DEVICE MANAGEMENT (RDM)

NOTE: for RDM to work properly, RDM enabled equipment must be used throughout the entire system, including DMX data splitters and wireless systems.

Remote Device Management (RDM) is a protocol that sits on top of the DMX512 data standard for lighting, allowing the DMX systems of the fixtures to be modified and monitored remotely. This protocol is ideal for instances in which a unit is installed in a location that is not easily accessible.

With RDM, the DMX512 system becomes bi-directional, allowing a compatible RDM enabled controller to send out a signal to devices on the wire, as well as allowing the fixture to respond (known as a GET command). The controller can then use its SET command to modify settings that would typically have to be changed or viewed directly via the unit's display screen, including the DMX Address, DMX Channel Mode, and Temperature Sensors.

FIXTURE RDM INFORMATION:

| RDM Code | Device ID | Device Model ID | Personality ID |
|----------|-------------|-----------------|--|
| 1900 | 00000-1869F | 4801 | 5Ch, 8Ch-A, 8Ch-B, 9Ch, 10Ch-A, 10Ch-B, 12Ch, 13Ch, 16Ch, 20Ch |

Please be aware that not all RDM devices support all RDM features, and therefore it is important to check beforehand to ensure that the equipment that you are considering includes all of the features that you require.

The following parameters are accessible in RDM on this device:

| RDM Parameter | Code |
|------------------------|---------|
| Disc Unique Branch | 0x0001 |
| Disc Mute | 0x0002 |
| Disc Un Mute | 0x0003 |
| Supported Parameters | 0x0050 |
| Device Info | 0x0060 |
| Manufacturer Label | 0x0081 |
| Device Label | 0x0082 |
| Software Version Label | 0x00C0 |
| DMX Personality | 0x00E0 |
| DMX Start Address | 0x00F0 |
| Sensor Value | 0x0201c |
| Curve | 0x0343 |
| Curve Description | 0x0344 |
| Identify Device | 0x1000 |
| DMX Fail Mode | 0x0141 |

IR REMOTE CONTROL

This unit can be operated using the ADJ UC IR24 remote control. **The unit can only be controlled when it has been set to Primary mode. The unit will NOT respond to commands when it has been set to Secondary mode.** When using the UC IR to control multiple units that are operating in primary/secondary mode, follow these steps to set up the units:


1. Power on the unit, and press MODE to scroll to the “Personality” menu, then press SETUP.
2. Use the UP and DOWN buttons to scroll to “Prim/Sec Mode”. Press SETUP, then use the UP and DOWN buttons to toggle between “Primary” and “Secondary”.
3. Press SETUP to confirm and return to the “Personality” menu.
4. Use UP and DOWN to scroll to “IR Function” and press SETUP.
5. Use the UP and DOWN buttons to toggle this setting to “On”, then press SETUP to confirm.

NOTES:

- Only one unit should be configured as the primary, while all the other units should be configured as secondaries.
- All units should be set to the same DMX channel mode.
- If fixtures fail to sync, verify that all settings mentioned above are the same, then power all devices off, then switch them on again to re-establish the link.

CONTROLS

- **ON and OFF:** When the ON button is pressed, the lighting fixture shall return to its last running state. When the OFF button is pressed, the unit shall go into stand by mode in a blackout state.
- **STROBE:** The unit shall strobe the selected color or program. The strobe rate can be adjusted with the + / - buttons, or by using buttons 1-15 to go directly to a preset strobe speed, where 1 is the slowest and 15 is the fastest.
- **SOUND:** Triggers the selected program steps based on sound input. The microphone sensitivity can then be adjusted with the +/- buttons.
- **COLOR:** When the color button is pressed, preset static colors can be selected using buttons 0-15. The intensity for the set color can be adjusted with the +/- buttons.
- **PROGRAM:** When the program button is pressed, internal programs can be selected by pressing buttons 1-13. The selected program’s speed can be adjusted with the +/- buttons.
- **+ and - buttons:** These buttons are used to adjust strobe rate, mic sensitivity, brightness intensity, or program run speed, depending on which mode is active. Single-level adjustments can be made with individual button presses, while large adjustments can quickly be made by pressing and holding.
- **0-15 buttons:** These buttons are used to select preset static colors or internal programs, depending on which mode is active. Colors stored in buttons 0-15 can be edited from the units menu if desired.

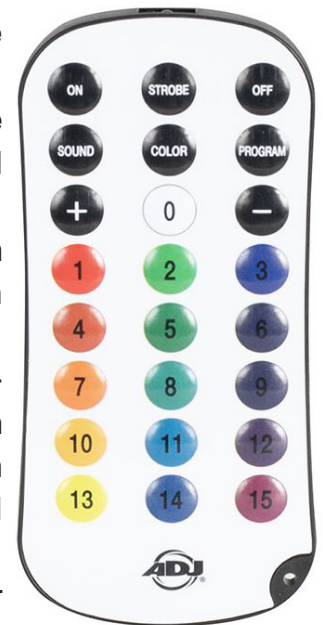

IR DEFAULT VALUES

| BUTTON | RED | GREEN | BLUE | AMBER | LIME |
|--------|-----|-------|------|-------|------|
| 0 | 0 | 0 | 0 | 0 | 255 |
| 1 | 255 | 0 | 0 | 0 | 0 |
| 2 | 0 | 255 | 0 | 0 | 0 |
| 3 | 0 | 0 | 255 | 0 | 0 |
| 4 | 231 | 68 | 0 | 0 | 0 |
| 5 | 0 | 117 | 58 | 0 | 0 |
| 6 | 17 | 0 | 75 | 0 | 0 |
| 7 | 255 | 83 | 0 | 63 | 0 |
| 8 | 0 | 109 | 70 | 0 | 0 |
| 9 | 32 | 0 | 75 | 22 | 0 |
| 10 | 0 | 0 | 0 | 255 | 0 |
| 11 | 0 | 114 | 160 | 0 | 0 |
| 12 | 82 | 0 | 35 | 0 | 0 |
| 13 | 255 | 255 | 0 | 255 | 0 |
| 14 | 0 | 75 | 136 | 0 | 0 |
| 15 | 81 | 0 | 35 | 0 | 0 |

EDITING RGBAL IR BUTTON VALUES

These fixtures allow the user to create custom RGBAL values and assign them to the numbered keys (0-15) on the remote control. Follow the steps below:

1. In the main system menu, press MODE to navigate to “Personality,” then press SETUP. Use the UP and DOWN buttons to scroll to “IR Button Colors,” then press SETUP again.
2. Use the UP and DOWN buttons to scroll to the number of the remote button that you would like to use. Options range from “Button 0” to “Button 15.” Press SETUP to select the button shown on the display screen.
3. Create a custom color for the button you have selected by using the UP and DOWN buttons to scroll through the color component options (Red, Green, Blue, Amber, or Lime). Press SETUP to select a color component option, then use the UP and DOWN buttons to adjust the intensity of that color component option. Selectable values range from 000 to 255. Repeat this process until you have set the desired Red, Green, Blue, Amber, and Lime intensities to create your custom color.

NOTE: Once you have created and assigned a custom RGBAL value to a remote button, the default color for the remote button will be overridden. This means that the output color of the fixture may no longer resemble the color shown on the remote button. The only way to return to the default RGBAL value is to reset the unit to the default factory settings by navigating to Personality > Service > Factory Restore.

NOTE: If multiple units have been linked in a primary-secondary set up, the custom RGBA values only need to be set up on the primary unit. The custom RGBA settings will carry over automatically to any secondary units in the system.

DAISY CHAIN POWER LINKING

These units have the capability to be daisy chained together via the power in/out ports. **The maximum number of units that can be linked together in this manner is as follows:**

- 5 units maximum when running on 120V power.
- 10 units maximum when running on 230V power.

DO NOT EXCEED THE NUMBER OF UNITS LISTED ABOVE.

DO NOT MIX MAKE AND MODEL TYPES WHEN DAISY CHAINING! All units that are connected in this manner must be of the same make and model type.

CLEANING AND MAINTENANCE



DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!

CLEANING

Frequent cleaning is recommended to ensure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky, or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics. Clean the external lens surface periodically with a soft cloth to avoid dirt/debris accumulation.

NEVER use alcohol, solvents, or ammonia-based cleaners.

MAINTENANCE

Regular inspections are recommended to ensure proper function and extended life. There are no user serviceable parts inside this fixture. Please refer all other service issues to an authorized ADJ service technician. Should you need any spare parts, please order genuine parts from your local ADJ dealer.


Please refer to the following points during routine inspections:

- A detailed electrical check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation, resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware, and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust or liquids to enter into the fixture. Damaged rigging points or unsecured rigging could cause fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue, or sediments.

NEVER remove the ground prong from the power cable.

FUSE REPLACEMENT

This device features a replaceable fuse. To replace, disconnect the device from the power source, then use a screw driver to unscrew the fuse holder located near the power port. Remove the bad fuse and replace with a new one, then screw the fuse holder back in. **Replace only with a new fuse of the same T3A 250V rating.**

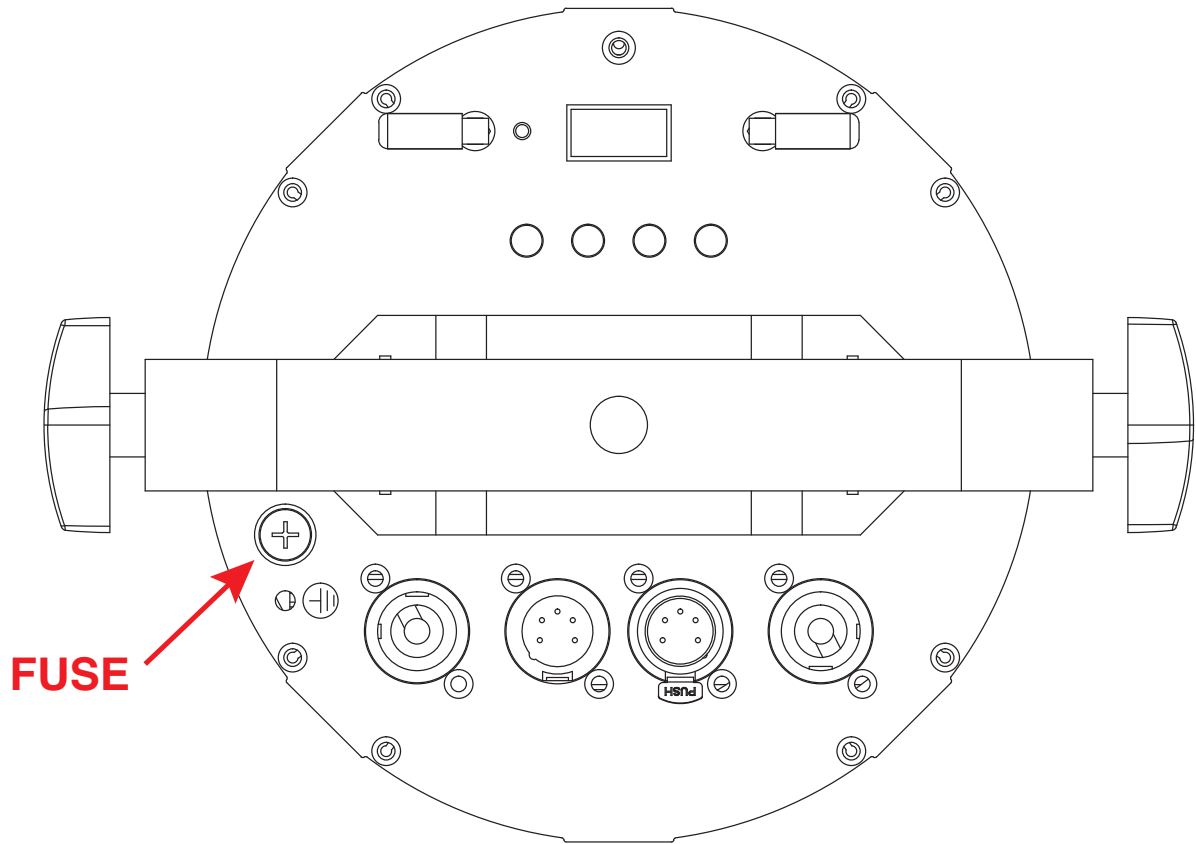

SPECIFICATIONS

OPTICAL:

- Light Source: 1x 200-Watt COB (Chip on Board), RGBAL (Red, Green, Blue, Amber & Lime), LED Engine
- LED Engine Life Rating: Approximately 50,000 hrs.
- CRI: >90
- Tunable White Color Temperature: 2300~9900K
- 80-degree beam angle
- Includes lens kit to change to 40-degrees or 50-degrees beam angle

FEATURES:

- Embedded Aria X2 Wireless Management System
- Primary / Secondary Mode
- Flicker Free operation (No flickering on camera)
- Produces powerful, smooth RGBAL color mixing with rich palettes of color
- Scissor yoke allows fixture to be mounted on truss or set on the ground
- Optional Barn Doors (BAR001) sold separately

CONTROL:

- 10 DMX Channel modes (5CH, 8CH-A, 8CH-B, 9CH, 10CH-A, 10CH-B, 12CH, 13CH, 16CH, 20CH)
- Linear color temperature control via DMX
- Built-in color temperature presets accessible via DMX
- 64 built-in color macros
- 4-button OLED digital DMX display on rear panel
- Compatible with the ADJ UC IR24 remote control (included)
- LED pulse and strobe effect
- Electronic Dimming: 0 - 100%
- 6 selectable Dim Modes (Standard, Stage, TV, Architectural, Stage 2 & Theatre)
- 4 selectable Dim Curves (Square, Linear, Inv. Squa & S.Curve)
- Adjustable selectable Refresh Rate (14 presets from 900 – 25,000Hz)

CONNECTIONS:

- 5-pin XLR connectors for DMX data linking (5-Pin DMX only as of June 2023)
- Indoor locking power In & Out connections to daisy chain power

ELECTRICAL:

- Auto sensing power supply: AC 100V/60Hz - 240V/50Hz
- Power Draw: 175W max
- Daisy chain up to 5 fixtures (120V) or 10 fixtures (230V) maximum

DIMENSIONS / WEIGHT:

- Dimensions (LxWxH):
- With Bracket: 13" (330mm) x 10.3" (262mm) x 7.5" (190mm)
- Without Bracket: 10" (254mm) x 10.3" (262mm) x 7.5" (190mm)
- Weight: 9.45 lbs. / 4.30 kg.

WHAT'S INCLUDED:

- (1) 50-degree lens
- (1) 40-degree lens
- UCIR24 Wireless IR Remote
- Power Cord
- Scissor Yoke
- Omega Bracket

ACCESSORIES:

- BAR001 - COB Cannon Wash Barn Doors


RATING / APPROVALS:

- cETLus (Control # 5014475), FCC



DIMENSIONAL DRAWINGS

Dimensions are not drawn to scale.

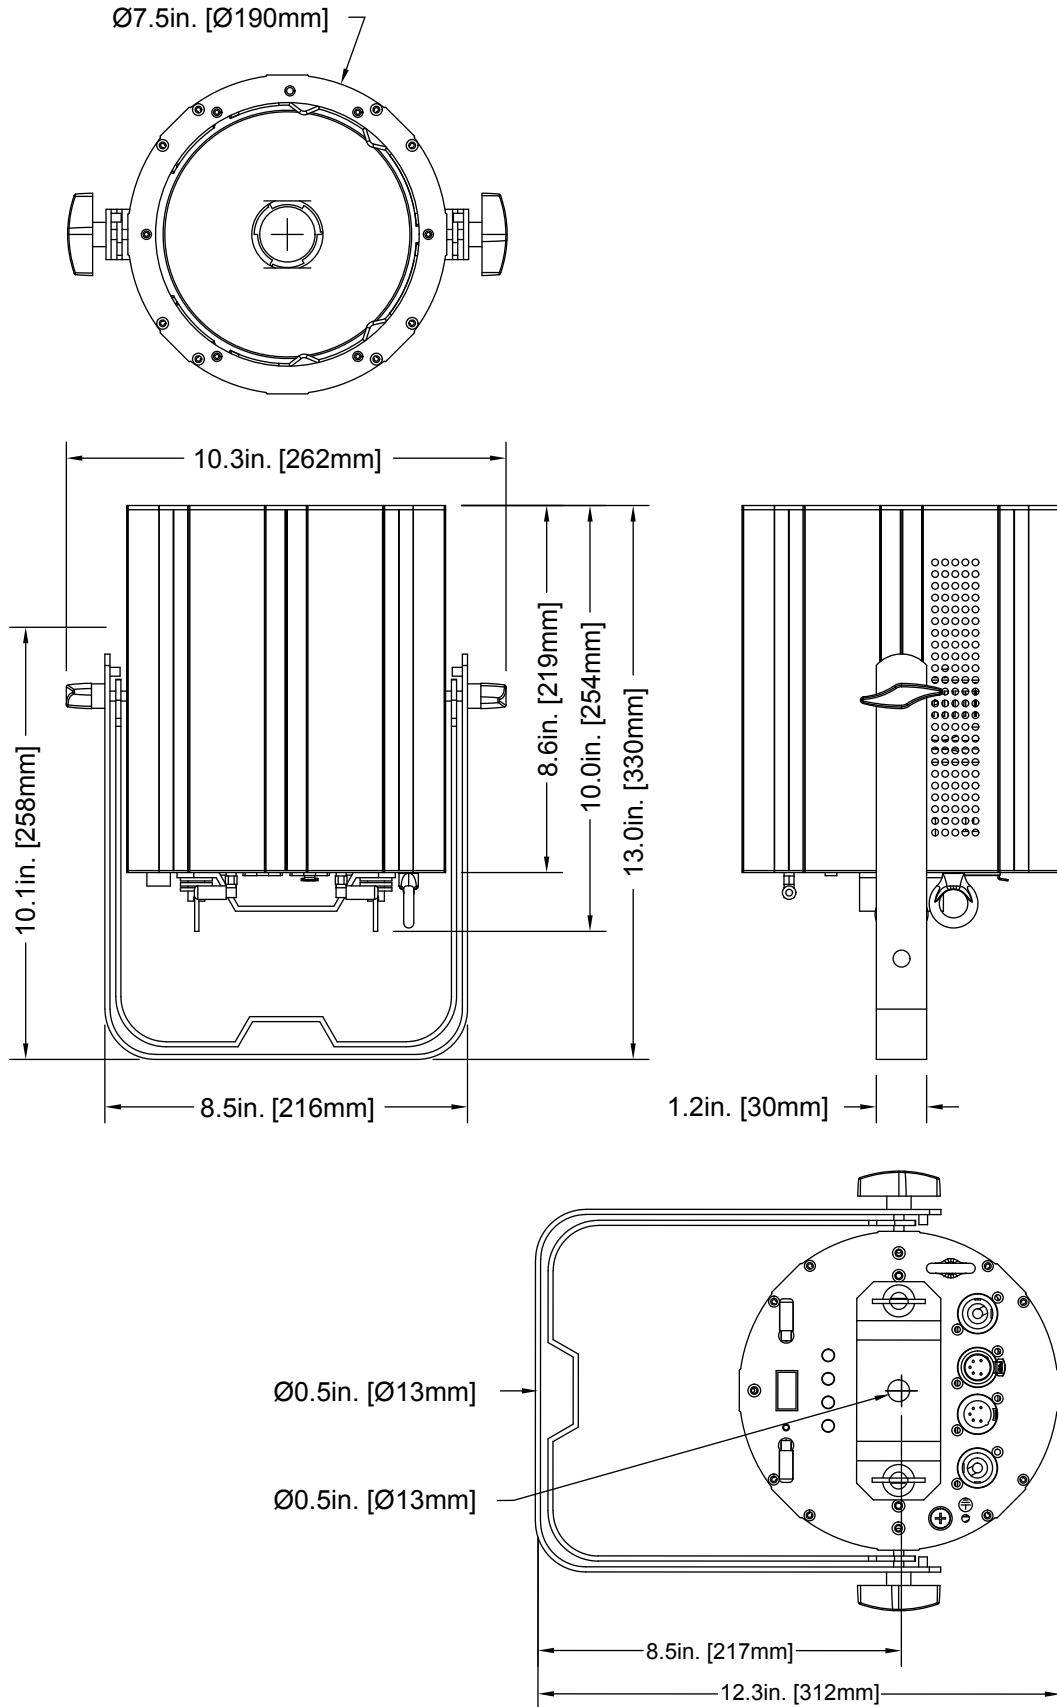

FCC STATEMENT

Please note that changes or modifications to this product that have not been expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



